

 
How To Cancel The Auto Restart Function; Power Failure During Timer Operation - Toshiba RAS-B22PKVSG- TR Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134



•

[Table of Contents](#)

•

Bookmarks



9-3-2. How to Cancel the Auto Restart Function

To cancel auto restart function, proceed as follows :

Repeat the setting procedure : the unit receives the signal and beeps three times.

The unit will be required to be turned on with the remote controller after the main power supply is turned off.

- When the system is on stand-by (not operating)

Operation

Press [RESET] button for more than three seconds. (Less than 10 seconds)

OPERATION /
RESET Button

- When the system is operating

Operation

Press [RESET] button for more than

three seconds. (Less than 10 seconds)

OPERATION /
RESET Button

9-3-3. Power Failure During Timer Operation

When the unit is turned off because of power failure during timer operation, the timer operation is cancelled. In that case, set the timer operation again.

NOTE :

The Daily Timer is reset while a command signal can be received from the remote controller even if it stopped due to a power failure.

The unit is on standby.



The unit starts to operate.



After approx. three seconds,

The unit beeps three times and continues to operate.

If the unit is not required to operate at this time, press [RESET] button once more or use the remote controller to turn it off.

The unit is in operation.



The unit stops operating.



After approx. three seconds,

The unit beeps three times.

If the unit is required to operate at this time, press [RESET] button once more or use the remote controller to turn it on.

- 51 -

FILE NO. SVM-18033



Motions

The white indicator is on.

Motions

The white indicator is on.

The white indicator is turned off.

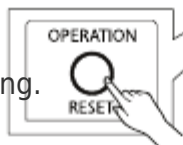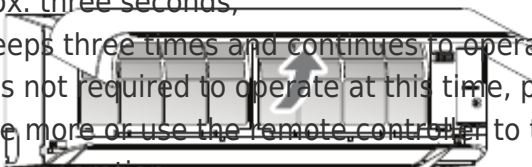

[Previous Page](#)
[Next Page](#)

1
...
48
49
50
51
52
53
54
55

Chapters

Related Manuals for Toshiba RAS-B22PKVSG-TR

[Air Conditioner Toshiba RAS-18PAVSG-E Owner's Manual](#)

(168 pages)

[Air Conditioner Toshiba RAS-18PKVSG-E Service Manual](#)

(137 pages)

[Air Conditioner Toshiba RAS-B22PKVSG-E Installation Manual](#)

(22 pages)

[Air Conditioner Toshiba RAS-24PAVSG-E Installation Manual](#)

(18 pages)

[Air Conditioner Toshiba RAS-24PKVSG-E Owner's Manual](#)

(7 pages)

[Air Conditioner Toshiba RAS-5M34UAV-E1 Owner's Manual](#)

Toshiba split type air conditioners owner's manual (8 pages)

[Air Conditioner Toshiba RAS-18N3KV2 Series Installation Manual](#)

(23 pages)

[Air Conditioner Toshiba RAS-B22N3KV2-E1 Installation Manual](#)

(23 pages)

[Air Conditioner Toshiba RAS-B16N3KV2-E1 Owner's Manual](#)

(102 pages)

[Air Conditioner Toshiba RAS-18N3KV2-E1 Installation Manual](#)

(276 pages)

[Air Conditioner Toshiba RAS-18J2KVSG-E Service Manual](#)

Indoor/outdoor unit, r32 inverter (144 pages)

[Air Conditioner Toshiba RAS-18J2KVSG-E Installation Manual](#)

(478 pages)

[Air Conditioner Toshiba RAS-24J2AVSG-E Owner's Manual](#)

(192 pages)

[Air Conditioner Toshiba RAS-B18G3KVSG-E Installation Manual](#)

(20 pages)

[Air Conditioner Toshiba RAS-24J2AVSG-E1 Owner's Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-24E2KVG-E Owner's Manual](#)

Inverter r32 or r410a, for general public use, indoor/outdoor unit (7 pages)

Related Content for Toshiba RAS-B22PKVSG-TR

[RAS-M05G3KVSG-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-M05G3KVSG-E

[RAS-18S3KV-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-18S3KV-E

[RAS-M07G3DV-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-M07G3DV-E

[RAS-M07N4KVRG-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-M07N4KVRG-E

[RAS-25G3KVSG-ND How To Cancel The Auto Restart Function](#)

Toshiba RAS-25G3KVSG-ND

[RAS-25E2KVG-ND How To Cancel The Auto Restart Function](#)

Toshiba RAS-25E2KVG-ND

[RAS-13S3KV-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-13S3KV-E

[RAS-B05BKVG-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-B05BKVG-E

This manual is also suitable for:

[Ras-b24pkvsg-e](#)[Ras-22pavsg-e](#)[Ras-24pavsg-e](#)[Ras-b22pkvsg-e](#)[Ras-b24pkvsg-tr](#)[Ras-22pavsg-tr](#) ... [Show all](#)