



# Toshiba AC25CEW-BS Instruction Manual



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55

--

•

[Table of Contents](#)

- 

Troubleshooting

•

Bookmarks

--



## Quick Links

[1 Important Safeguards](#)

[2 Names of Parts](#)


[3 How to Use](#)

[4 Function Instruction](#)

[5 Oven Function](#)

[6 Specification](#)

[Download this manual](#)

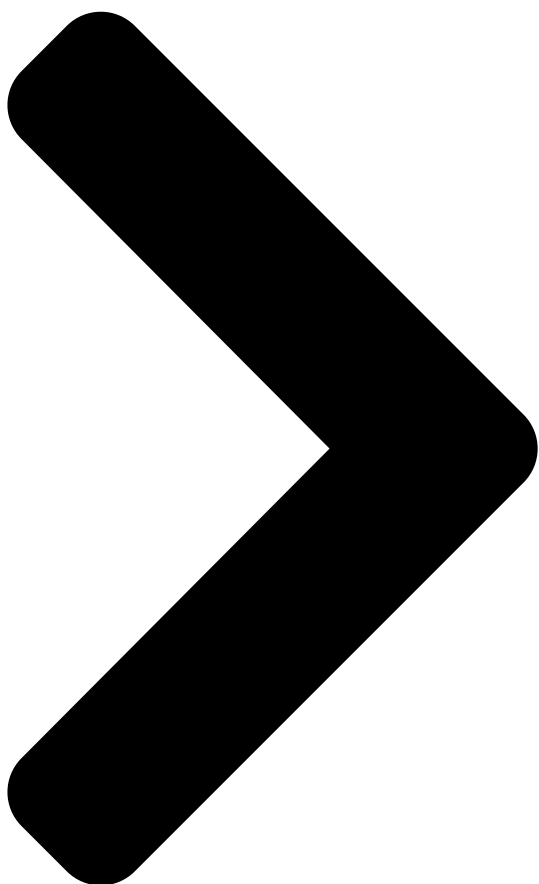

User Manual of Product 1:

TOSHIBA AC25CEW-BS Large 6-Slice Convection  
Toaster

Oven Countertop, 10-In-One with Toast, Pizza and  
Rotisserie,

1500W, Black Stainless Steel, Includes 6 Accessories

User Manual of Product 2:

TOSHIBA EM131A5C-BS Countertop Microwave Ovens

1.2 Cu

Ft, 12.4" Removable Turntable Smart Humidity Sensor

12 Auto

Menus Mute Function ECO Mode Easy Clean Interior

Black

Color 1100W

[Table of Contents](#)

[Next Page](#)

- 1
- 2
- 3
- 4
- 5

## Chapters

[Table of Contents](#) 3

[Microwave solo Oven Instruction Manual](#) 17

## Related Manuals for Toshiba AC25CEW-BS

[Microwave Oven Toshiba ML-EM34P Instruction Manual](#)

(55 pages)

[Microwave Oven Toshiba EM131A5C-BS Instruction Manual](#)

Microwave solo oven (40 pages)

[Microwave Oven Toshiba EM131A5C-BS Instruction Manual](#)

Microwave solo oven (32 pages)

[Oven Toshiba AC25CEW-SS Instruction Manual](#)

(32 pages)

[Oven Toshiba AC25CEW-SS Instructions Manual](#)

(68 pages)

[Oven Toshiba AC25CEW-SSC Instruction Manual](#)

(294 pages)

[Oven Toshiba AC25CEW-SS Instructions Manual](#)

Toaster oven (28 pages)

[Oven Toshiba AC25CEW-SSC Instruction Manual](#)

(32 pages)

[Oven Toshiba TL-MC40EZF\(GR\) Instruction Manual](#)

(12 pages)

[Oven Toshiba MS2-TQ20SC Instruction Manual](#)

(52 pages)

[Oven Toshiba MS2-TQ20SC\(BK\) Quick Owner's Manual](#)

(14 pages)

[Oven Toshiba MS5-TR30SC\(BK\) User Manual](#)

(80 pages)

[Oven Toshiba TL2-AC35ZA GR Instruction Manual](#)

Air fry toaster oven (24 pages)

[Oven Toshiba MX1-TH23SC\(WH\) User Manual](#)

Steam oven with microwave function (40 pages)

[Oven Toshiba WTR-M25ASS Instruction Manual](#)

(28 pages)

[Oven Toshiba TL2-AC25GZA\(GR\) Instruction Manual](#)

(28 pages)

## Summary of Contents for Toshiba AC25CEW-BS

[Page 1](#) User Manual of Product 1: TOSHIBA AC25CEW-BS Large 6-Slice Convection Toaster Oven Countertop, 10-In-One with Toast, Pizza and Rotisserie, 1500W, Black Stainless Steel, Includes 6 Accessories User Manual of Product 2: TOSHIBA EM131A5C-BS Countertop Microwave Ovens 1.2 Cu Ft, 12.4" Removable Turntable Smart Humidity Sensor 12 Auto...

### [Page 3: Table Of Contents](#)

CONTENTS IMPORTANT SAFEGUARDS BASIC SAFETY PRECAUTIONS.....EN-3 BEFORE FIRST USE..... EN-6 PRODUCT INSTRUCTION NAMES OF PARTS.....EN-7 OPERATION HOW TO USE.....? ? ? ? ? ? ? ? .....? ? ? ? ? ? ? ? ..? ? ? ? ..EN-8 FUNCTION INSTRUCTION.....? ? ? ? ? .

### [Page 4: Important Safeguards](#)

IMPORTANT SAFEGUARDS BASIC SAFETY PRECAUTIONS SAFETY WARNING When using electrical appliance, basic safety precautions should always be followed, including the following: 1. Read all instructions. 2. Do not touch hot surfaces. Use handles or knobs. 3. To protect against electrical shock do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.

[Page 5](#) BASIC SAFETY PRECAUTIONS SAFETY WARNING 13. Do not use appliance for other than intended use. 14. Use extreme caution when removing tray or disposing of hot grease. 15. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating parts, creating a risk of electric shock.

[Page 6](#) IMPORTANT SAFEGUARDS BASIC SAFETY PRECAUTIONS SAFETY WARNING 22. Caution- To ensure continued protection against risk of electric shock, connect to properly grounded outlets only. 23. Remove plug from outlet when the appliance is not in use, before putting on or taking off parts, and before cleaning. Allow to cool before handling.

### [Page 7: Before First Use](#)

BEFORE FIRST USE 1. Remove all accessories and shipping materials packed inside the Oven. 2. Wash the Rack and Pan in warm soapy water. Wipe the inside of the Oven with a damp cloth or sponge. Blot dry with paper towels to be sure the unit is dry before using.

### [Page 8: Product Instruction](#)

PRODUCT INSTRUCTION NAMES OF PARTS When using electrical appliance, basic safety precautions should always be followed, including the following: Housing Door handle Function knob Stop/Start button Temperature knob Timer knob Baking Pan Baking Rack Crumb Tray Rack clamp Helper Handle Rotisserie Kit EN-7...

### [Page 9: How To Use](#)

HOW TO USE CAUTION THE OVEN SURFACES ARE HOT DURING AND AFTER USE. GENERAL INSTRUCTIONS 1. Place the Baking Rack in position that will accommodate the height of the food to be cooked. 2. The food must be put into the baking pan to avoid the fire danger that caused by the accumulation of food chipping on the heating pipes.

### [Page 10: Function Instruction](#)

OPERATION FUNCTION INSTRUCTION OVEN FUNCTION COOKING PRESET TEMP RANGE PRESET TIME TIME RANGE TEMP FUNCTION Toast Fixed Temp Fixed Time 450 °F Bake 0.01~2Hour 30min Broil 350 °F Pizza 6 inch 7min 150 °F~450 °F Pizza 9 inch 450 °F 8.5min 1min~30min Pizza 12 inch...

[Page 11](#) FUNCTION INSTRUCTION BROIL PIZZA Preset temperature : 350 °F Preset temperature : 450 °F BROIL PIZZA Temp range : 150 °F- 450 °F Temp range : 150 °F- 450 °F Preset time : 30min Preset time : 30min Time range : 0.01~2 Hour Time range : 0.01~2 Hour NOTE Do not preheat when using this function NOTE Do not preheat when using this function...

### [Page 12: Rotisserie Function](#)

OPERATION FUNCTION INSTRUCTION ROTISSERIE FUNCTION 1. Remove the Baking Rack from the oven and set aside. 2. Place the Baking Pan in the lowest level of the oven. This will catch all the drippings from the food that is on the Rotisserie Forks as it cooks.

[Page 13](#) FUNCTION INSTRUCTION 10. Gently remove the right pointed side of the Rotisserie Forks from the Rotisserie Socket and remove the food on the forks out of the oven. 11. Place the

food on a heat safe plate or dish when you have removed from the oven.

## [Page 14: Care And Cleaning](#)

5. To clean the door by using a wet cloth saturated with detergent or soap. 6. Never immerse the unit in water or other liquid. 7. Any other servicing should be performed by an authorized service representative. SPECIFICATION MODEL AC25CEW-BS CUBAGE VOLTAGE 120V,1Ph AC FREQUENCY...

## [Page 15: One Year Limited Warranty](#)

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials. If additional assistance is needed, please contact customer assistance at: [customercare@us.toshiba-lifestyle.com](mailto:customercare@us.toshiba-lifestyle.com) 855-204-5313 Midea America Corp 5 Sylvan Way, Parsippany, NJ 07054 Midea America Corp.

[Page 16](#) MICROWAVE SOLO OVEN INSTRUCTION MANUAL EM131A5C-BS Please review this instruction manual before operating.

[Page 17](#) CONTENTS PRODUCT SAFETY Precautions to avoid possible exposure to excessive microwave energy .....EN-01 Important safety instructions .....EN-03 Grounding instructions ..... EN-07 Radio interference .....EN-09 Utensils ..... EN-10 Materials you can use in microwave oven .....EN-11 Materials can not be used in microwave oven .....EN-13 PRODUCT SETTING Setting up your oven .....

[Page 18](#) 11. Soften/melt .....EN-27 12. Favorite function .....EN-28 13. Multi-stage cooking .....EN-29 14. Inquiring function ..... EN-30 15. Lock function ..... EN-30 16. Turn on/off the buzzer sound ..... EN-31 17. Energy saver mode ..... EN-31 18. Cooking end reminder function .....EN-31 19.

## [Page 19: Product Safety](#)

PRODUCT SAFETY PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY (a). Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.

[Page 20](#) SPECIFICATIONS MODEL EM131A5C-BS RATED VOLTAGE 120V~ 60Hz RATED INPUT POWER (MICROWAVE) 1550W RATED OUTPUT POWER (MICROWAVE) 1100W OVEN CAPACITY 1.2 cu.ft. TURNTABLE DIAMETER 12.4 inch EXTERNAL DIMENSIONS 20.5x17.1x12.8 inch NET WEIGHT Approx. 34.6 Lbs All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the NOTE actual product.

## [Page 21: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic WARNING safety precautions, including the following: Read all instructions before To reduce the risk of fire in using the appliance.

[Page 22](#) IMPORTANT SAFETY INSTRUCTIONS Liquids, such as water, Do not leave paper coffee, or tea are able products, cooking to overheat beyond the utensils, or food in the boiling point without cavity when not in use. appearing to be boiling. Visible bubbling or boiling Install or locate this oven when the container only in accordance with...

[Page 23](#) IMPORTANT SAFETY INSTRUCTIONS 4. After heating, allow When cleaning surfaces the container to stand of door and oven that in the microwave oven comes together on closing for a short time before the door, use only mild, removing the container. nonabrasive soaps, or 5.

[Page 24](#) IMPORTANT SAFETY INSTRUCTIONS Use this appliance only Do not use this oven for its intended use as near water, for example, described in the manual. near a kitchen sink, in Do not use corrosive a wet basement, near a chemicals or vapors in swimming pool, or similar this appliance.



## [Page 25: Grounding Instructions](#)

**GROUNDING INSTRUCTIONS** This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug.

**Page 26** **GROUNDING INSTRUCTIONS** Electric Shock Hazard: Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded. 1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

## [Page 27: Radio Interference](#)

**RADIO INTERFERENCE** 1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment. 2. When there is interference, it may be reduced or eliminated by taking the following measures: (1). Clean door and sealing surface of the oven. (2).

## [Page 28: Utensils](#)

**UTENSILS** Personal Injury Hazard: Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking. See the instructions on "Materials you can use in microwave oven " or "Materials can not be used in CAUTION microwave oven."...

## [Page 29: Materials You Can Use In Microwave Oven](#)

**MATERIALS YOU CAN USE IN MICROWAVE OVEN** **UTENSILS** **REMARKS** Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause Browning dish the turntable to break. Microwave-safe only. Follow manufacturer's instructions.

**Page 30** **MATERIALS YOU CAN USE IN MICROWAVE OVEN** **UTENSILS** **REMARKS** Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be Plastic slit, pierced or vented as directed by package.

## [Page 31: Materials Can Not Be Used In Microwave Oven](#)

**MATERIALS CAN NOT BE USED IN MICROWAVE OVEN** **UTENSILS** **REMARKS** May cause arcing. Transfer food into microwave-safe dish. Aluminum tray May cause arcing. Transfer food into microwave-safe dish. Food carton with metal handle Metal shields the food from microwave energy. Metal trim may cause arcing.

## [Page 32: Product Setting](#)

**PRODUCT SETTING** **SETTING UP YOUR OVEN** **NAMES OF OVEN PARTS AND ACCESSORIES** Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories: Glass Tray (Can be used under all functions) Instruction Manual A.

## [Page 33: Setting Up Your Oven](#)

**SETTING UP YOUR OVEN** **TURNTABLE INSTALLATION** Cleaning the cooking compartment and putting the turntable in place. For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft. Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly.

**Page 34** **COUNTERTOP INSTALLATION** Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged. Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown waveguide cover that is attached to the oven cavity to protect the magnetron.

## [Page 35: Instruction For Use](#)

**INSTRUCTION FOR USE** **BEFORE USING FOR THE FIRST TIME** The appliance may produce unpleasant odors when it is used for the first time. This section tells you what you need to do before using your microwave to prepare food for the first time.

## [Page 36: Operation](#)

OPERATION CONTROL PANEL AND FEATURES EN-18...

## [Page 37: Power Levels](#)

1. POWER LEVELS Ten power levels are available. Press "Cook Time", "00:00" will display, then press number pads. Press "Power Level" and "PL10" will display. Then press number pads to select a different power level. In cooking state of microwave, press "Power Level", the current power will be displayed for 3 seconds.

## [Page 38: Clock Setting](#)

LEVEL POWER DISPLAY 2. CLOCK SETTING When the microwave oven is plugged into an outlet, "0:00" will display. Press "Clock" once, "00:00" will appear in the display. Press the number pads to enter the current clock time. For example, if the time is now 10:12, press "1, 0, 1, 2" in order. Press "Clock"...

## [Page 39: Microwave Cook](#)

Press "START/+30Sec." to confirm setting, and the timer will start to count down. When the time amount elapses, timer indicator will disappear. The oven will beep 5 times. • The Kitchen Timer setting is different from the Clock setting; it is simply a timer.

## [Page 40: One Touch Start](#)

• Press "1, 5, 0, 0" in order for 15:00 to appear in the display. • Press "Power Level", then press "5" to select 50% microwave power. • Press "START/+30Sec." to start cooking. The remaining cooking time will display. •...

## [Page 41: Custom Defrost Function](#)

6. CUSTOM DEFROST FUNCTION Press "Custom Defrost", "dEF1" and "DEF." will appear in the display. Press the same pad repeatedly, "dEF2", "dEF3", "dEF1" will display in order. LED DISPLAY FOOD dEF1 Meat dEF2 Poultry dEF3 Fish Press number pads to enter the weight to be defrosted. Input the weight range between 0.1 to 6.0 Lbs.

## [Page 42: Sensor Menu](#)

8. SENSOR MENU ( Sensor Reheat, Frozen Pizza, Frozen Entrée, Potato, Rice, Veggie) Press the pad for one of the Sensor Menu functions. An "SC-" number, "Auto" and "SENS." will appear in the display. Example: If "Rice" is pressed, "SC-5" will display. Press "..."

[Page 43](#) Example: Sensor Reheat Pad • After placing food into oven, press "Sensor Reheat" pad and "SC-1" will display. • Press "START/+30Sec." to cook. Oven beeps 5 times when cooking is finished. • Food to be avoided in sensor reheating. a.

## [Page 44: Popcorn](#)

Sensor menu chart: MENU BUTTON FOOD FOOD CODE WEIGHT/PORTION Sensor Reheat Sensor Reheat SC-1 8~32 oz Frozen Pizza Frozen Pizza SC-2 6~12 oz Frozen Entrée Frozen Entrée SC-3 8~32 oz 1~4 potatoes Potato Potato SC-4 10 oz each Rice Rice SC-5 8.0 oz~16.0 oz Fresh/Frozen...

## [Page 45: Soften/Melt](#)

Press "START/+30Sec." to cook, "Auto" flashes in display. Oven beeps 5 times when cooking is finished. 11. SOFTEN/MELT Press "Soften/Melt", "S-1" will display. Press "Soften/Melt" more times, "S-2, S-3, S-4, S-5, S-6, S-7" will display in order. After selecting SC function, press a number pad to select the weight or portion of food item.

## [Page 46: Favorite Function](#)

MENU BUTTON FOOD DISPLAY WEIGHT/PORTION Melt-Butter/Margarine 1-3 STICKS Melt-Chocolate 4/8 Oz Melt-Cheese 8/16 Oz Melt-Marshmallows 5/10 Oz Soften/Melt Soften-Butter 1-3 STICKS Soften-Ice cream/Frozen 6/12/16 Oz juice Soften-Cream cheese 3/ 8 Oz 12. FAVORITE FUNCTION Press "Favorite" to program and choose up to three cooking procedures.

### [Page 47: Multi-Stage Cooking](#)

- Press "Favorite" to save the procedure. Oven beeps once. Or press " START/+30Sec. " directly to start cooking.
- To choose the procedure from the memory list, press "Favorite" twice. Screen will display "2". Press " START/+30Sec. " to run procedure.
- ...

### [Page 48: Inquiring Function](#)

- Press "Power Level" a gain, then press "6" to choose 60% second stage cooking power.
- Press " START/+30Sec. " to to immediately start multi-stage cooking.
- To choose the procedure from the memory list, press "Favorite" three times. Screen will display "3";...

### [Page 49: Turn On/Off The Buzzer Sound](#)

16. TURN ON/OFF THE BUZZER SOUND It is default that the buzzer sounds is open. In waiting state, long pressing on number 8 for 3 seconds, it sounds a long beep, turns off the sound. When the sounds turn off, long pressing on 8 for 3 seconds, it sounds a long beep and the sound turns In the sound off state, all the buttons has no beep when they are...

### [Page 50: Cleaning](#)

CLEANING With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. We will explain here how you should correctly care for and clean your appliance.

- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.

[Page 51](#) APPLIANCE FRONT PLATE Hot soapy water: Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

### [Page 52: Maintenance](#)

MAINTENANCE TROUBLE SHOOTING Check your problem by using the chart below and try the solutions for each problem.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
a. Electrical cord for oven is not a. Plug into the outlet. plugged in. Oven will not start	b.	

[Page 53](#) TROUBLE POSSIBLE CAUSE POSSIBLE REMEDY

a. Cover or lid over food must a. Cover or lid on food not contain vent hole for escaping vented. steam. Sensor cooked foods	b. Door opened before sensor-	b. Do not open door to stir or not properly cooked detected cooking time appears turn food before sensor-...
--	-------------------------------	--

### [Page 54: One Year Limited Warranty](#)

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials. If additional assistance is needed, please contact customer assistance at: [customercare@us.toshiba-lifestyle.com](mailto:customercare@us.toshiba-lifestyle.com) 855-204-5313 Midea America Corp. expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance.

[Page 55](#) Details Matter [Customercare@us.toshiba-lifestyle.com](mailto:Customercare@us.toshiba-lifestyle.com) 855-204-5313...

This manual is also suitable for:

Em131a5c-bs

Save PDF