





## Sanyo DV-S100 Manual

10-disc dvd/cd changer



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48

--

•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks



[Download this manual](#)

## Quick Links






# DV-S100

## SANYO

### 10-Disc DVD/CD changer

Get other manuals <https://www.bkmanuals.com>

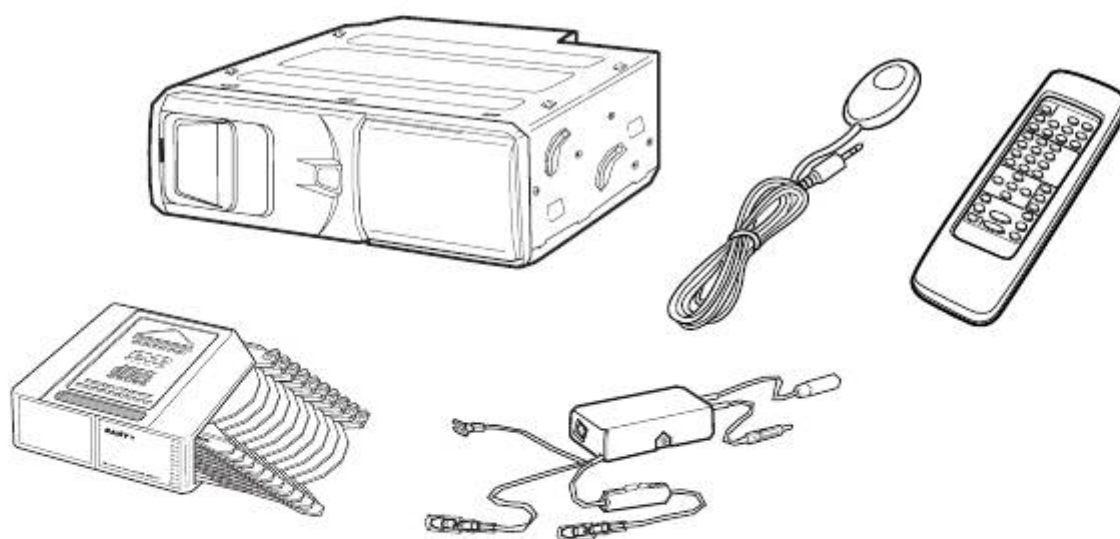

---

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Sanyo DV-S100

### [CD Player Sanyo DC DJI Service Manual](#)

Compact disc audio component system with wireless remote control (64 pages)

### [CD Player Sanyo DC-MS1 Instruction Manual](#)

Micro cd hi-fi system (21 pages)

### [CD Player Sanyo DC-MS1 Service Manual](#)

Super mini component system (45 pages)

### [CD Player Sanyo CDP-1000 Instruction Manual](#)

Portable compact disc player (16 pages)

### [CD Player Sanyo MCDZX500 Instruction Manual](#)

Cd portable radio cassette recorder (9 pages)

### [CD Player Sanyo CDP-990 Service Manual](#)

Compact disc player (9 pages)

### [CD Player Sanyo MAX-5000 Service Manual](#)

Cd auto changer (36 pages)

### [CD Player Sanyo MCD-Z1F Service Manual](#)

Portable cd/am/fm stereo/cassette recorder (20 pages)

### [CD Player Sanyo MCD-Z11F Service Manual](#)

(20 pages)

### [CD Player Sanyo CDP-990 Service Manual](#)

(9 pages)

### [CD Player Sanyo CDP-55A Service Manual](#)

Portable cd player (28 pages)

### [CD Player Sanyo CDP-244 Instruction Manual](#)

Personal cd player (10 pages)

### [CD Player Sanyo CDP-AS45 Instruction Manual](#)

(20 pages)

### [CD Player Sanyo MCD-X77L Instruction Manual](#)

(16 pages)

### [CD Player Sanyo MCD-XP400 Instruction Manual](#)

Portable cd radio (8 pages)

### [CD Player Sanyo CDP-455 Instruction Manual](#)

(32 pages)

## Summary of Contents for Sanyo DV-S100

[Page 1](#) DV-S100 10-Disc DVD/CD changer Get other manuals <https://www.bkmanuals.com...>

[Page 2](#) Introduction ■ Thank you for purchasing DV-S100. This unit has many features, including: ■ 10-Disc DVD Video/Video CD/CD player ■ Composite Video output ■ Built-in MPEG 2/1 Decoder (Front + Rear) ■ FM Modulator (Included) ■ Optical Digital Output for AV ■...

### [Page 3: Table Of Contents](#)

Contents Setup Before use Performing Basic Operations for Setup Changes .....25,26  
Precautions for handling discs .....3 Changing the DVD Menu Language .....26,27  
How to use the magazine .....3 Changing the Audio Language .....27,28

Accessories.....	4	Changing the Subtitle Language.....	28,29
operation .....	5	Changing the Digital Output.....	29,30
.....	6	Changing the Aspect Ratio (Vertical/Horizontal Screen Image Ratio)...	30,31...

## [Page 4: Precautions For Handling Discs](#)

Precautions for handling discs How to use the magazine ■ Dirt, dust, scratches and warpage cause sound skips ■ Loading a disc during playback and deterioration of sound and/or Pick the tab on the magazine's disc tray and picture quality. How to take care of your discs: pull out only one of the trays.

## [Page 5: Accessories](#)

Accessories Remote control Dry battery (AA) for Magazine Index labels Installation parts for Changer unit Remote control Small Small Large Large Bracket (B) bracket (L) bracket (R) bracket (L) bracket (R) Remote control Cord clip Velcro tape Cleaning cloth sensor Hexagonal bolt Hexagonal bolt Tapping screw...

## [Page 6: For Safe And Efficient Operation](#)

Do not try to open the unit to repair it yourself. If servicing is required, return the black). unit to an authorized SANYO mobile audio dealer. Do not install a monitor connected to the rear video output in a location where When cleaning the vehicle, be sure not to get any water on the unit because it can...

## [Page 7: Playable Discs](#)

Playable discs ■ The following types of discs can be played on this unit. ■ Region number (Regional restriction number) Disc type & logo mark Disc size Maximum playing time 5 inches Approx. 133 minutes (SS/SL) Region number of this unit is "2". DVD Video (12 cm) Approx.

## [Page 8: Before Using The System \(Power On\)](#)

Before using the system (Power On) ■ When the changer is connected directly to SANYO CD or When all wiring is completed, carry out the steps outlined below CD/Cassette Receiver with CD Changer Control model. before using the system. zSee page 39, "Basic connection 2".

## [Page 9: Remote Control](#)

Remote control Audio CD Operation Screen ■ How to load the batteries The following screen is displayed during audio CD play. Press the battery cover Insert two AA alkaline batteries with the + and \_ symbols downward and pull. pointing correctly and replace the cover.

## [Page 10: Name & Functions Of Each Part](#)

Name & functions of each part o Enter button (ENTER) \* When no program list has been created, Remote control light emitter "PROGRAM" cannot be selected. Sets items selected on screen. Press while an audio CD is stopped ( ! Skip buttons ( to go to the program list creation screen.

## [Page 11: Switching Off](#)

CD. For an audio CD, the running time remains displayed when play is stopped. When the play button ( ) is pressed, play resumes from the ■ When the changer is connected directly to SANYO CD or point where it stopped. CD/Cassette Receiver with CD Changer Control model.

## [Page 12: Selecting A Disc](#)

Selecting a Disc Advancing / Returning to a Chapter or Track Disc select buttons Skip buttons Press a disc select button ( During play, press a skip button ( To proceed to the next disc, press ( To advance to the next chapter or track, press ( To return to the previous disc, press ( To return to the previous chapter or track, press ( ) twice.

## [Page 13: Fast Playback](#)

Fast Playback Using the Title Menu Some DVDs divided into multiple titles include a recorded title menu. In these instances, the title menu can be used to select and play a desired title. Fast playback buttons Play button \* A title is a major division of images or audio recorded on a DVD. Title button DVD and Video CD During play, press a fast playback button (...)



## [Page 14: Using Dvd Menus](#)

Using DVD Menus Using the PBC (Playback Control) Function (1) Some DVDs include a recorded DVD menu. During play, PBC (playback control) -compatible video CDs display a PBC menu recorded on the disc. This manual refers to use of a PBC menu in dialog-based steps to playback as PBC playback.

[Page 15](#) Using the PBC (Playback Control) Function (2) Notes: Press the play button ( ) Perform the next operation before the display at the upper left of the screen (example: " - - 1 ") disappears. Play begins. If you make a mistake when entering a number, press the clear button ( ) to clear the number entered.

## [Page 16: Using Frame Advance Play And Slow Play](#)

Using Frame Advance Play and Slow Play Press either fast playback button ( ) to select the slow play speed. Fast playback buttons Each activation of a button adjusts the speed through four steps (1/16 Play button 1/2). Pressing the reverse fast playback button ( ) at 1/16 Skip button Pause button...

## [Page 17: Using Title Search, Chapter Search, Track Search, And Time Search](#)

Using Title Search, Chapter Search, Track Search, and Time Search Play can be started from a designated title, chapter, or track. An Use the number buttons ( ) to enter the title number, elapsed time value can also be entered, and play can be started from chapter number, elapsed time of title, track number, or elapsed that point.

## [Page 18: Switching The Audio Language](#)

Switching the Audio Language Switching the Audio Output Method Some DVD discs include multiple audio languages. In these instances, The audio output method (stereo, monaural left, monaural right) can be you can select a preferred audio language as follows. changed during video CD or audio CD play. Audio button Audio button Enter button...

## [Page 19: Switching The Subtitle Language](#)

Switching the Subtitle Language Switching the Angle Some DVD discs include recorded subtitles. In these instances, you Some DVD discs store the same scene as viewed from multiple angles can select display or non-display of subtitles. (multi-angle recording). In these instances, you can switch and view a Some discs also include multiple recorded subtitle languages.

## [Page 20: Using Scan Play, Random Play, And Program Play](#)

Using Scan Play, Random Play, and Program Play Creating a Program List (1) ■ Scan play repeats a function in which track introductions on a disc You can play track numbers on a disc in a desired order by storing them are played for approximately 10 seconds and play then moves to the in a program list in the same order (This is called the program play).

[Page 21](#) Creating a Program List (2) Note: Press the enter button ( ) Perform input number display / Last Clear All Clear procedures as follows. \* The program list displays "12". • For input number display [ \ Last Clear • For Last Clear All Clear ....

## [Page 22: Using Repeat Play](#)

Creating a Program List (3) Using Repeat Play (1) ■ DVD To clear the last track number in a program list This function allows title repeat (repeating a playing title) and chapter repeat Use one of the following two methods. (repeating a playing chapter).

## [Page 23: Using A-B Repeat Play Mode](#)

Using Repeat Play (2) Using A-B Repeat Play Mode (1) This function allows repeating of a designated portion. To return to normal play Select "Off" in step A-B repeat button Audio CD During play, press the repeat button ( ) to illuminate the indicator for your preferred repeat mode ( DISC TRACK...

## [Page 24: Displaying A Disc List](#)

Using A-B Repeat Play Mode (2) Displaying a Disc List (1) You can display a list of discs contained in a magazine, check disc To return to normal play types (DVD, video CD, audio CD),

or select and play a desired disc. You can also limit the type of discs played (DVD, video CD, audio CD).

### [Page 25: Displaying Running Time](#)

Displaying a Disc List (2) Displaying Running Time To stop screen display of a Disc List Press the list button ( ) or the return button ( Time button To select and play a desired disc Return button Use the cursor buttons ( ) to select the tray containing the desired disc from the disc list.

### [Page 26: Performing Basic Operations For Setup Changes](#)

Switching the Type of Running Time Display Performing Basic Operations for Setup Changes (1) You can select the type of running time display shown on the audio CD operation screen. Return button Cursor buttons Enter button Play button Setup button Stop button Time button Press the stop button (...)

### [Page 27: Changing The Dvd Menu Language](#)

Setup Performing Basic Operations for Setup Changes (2) Changing the DVD Menu Language (1) Note: You can change the display language for DVD menus (zsee page 13, Settings are maintained until changed. "Using DVD Menus") stored on a DVD. Cursor buttons Enter button To return to the previous selection screen during setup change operations Press the return button (...)

### [Page 28: Changing The Audio Language](#)

Setup Setup Changing the DVD Menu Language (2) Changing the Audio Language (1) You can change the DVD audio language. Use the up/down cursor buttons ( ) to select a desired language and press the enter button ( The setup screen reappears (with the "DVD Menu Language" setting Cursor buttons Enter button changed to the selected language).

### [Page 29: Changing The Subtitle Language](#)

Setup Setup Changing the Audio Language (2) Changing the Subtitle Language (1) You can change the subtitle language of a DVD. Use the up/down cursor buttons ( ) to select a desired You can also remove subtitles. language and press the enter button ( The setup screen reappears (with the "Audio Language"...

### [Page 30: Changing The Digital Output](#)

Setup Setup Changing the Subtitle Language (2) Changing the Digital Output (1) You can change the audio output from the optical digital audio output Use the up/down cursor buttons ( ) to select a preferred terminal of the unit. Use the correct settings for any digital audio subtitle language or "Off"...

### [Page 31: Changing The Aspect Ratio \(Vertical/Horizontal Screen Image Ratio\)](#)

Setup Setup Changing the Digital Output (2) Changing the Aspect Ratio (Vertical/Horizontal Screen Image Ratio) (1) Monitors include two types: normal monitors with a 4:3 horizontal-to-Use the up/down cursor buttons ( ) to select the audio vertical screen ratio, and wide monitors with a 16:9 ratio. Some DVDs output (LPCM/Bitstream) and press the enter button ( also store multiple aspect ratios such as one or more of the 3 described The setup screen reappears (with the "Digital Output"...

### [Page 32: Changing Parental Settings](#)

Setup Setup Changing the Aspect Ratio (Vertical/Horizontal Screen Image Ratio) (2) Changing Parental Settings (1) Some DVDs store parental levels. These discs allow you to restrict Use the up/down cursor buttons ( ) to select an aspect viewing and listening according to a parental level set with the player ratio (4:3 Letter Box, 4:3 Pan &...

[Page 33](#) Setup Changing Parental Settings (2) Use the number buttons ( ) to input a password (4-digit Use the up/down cursor buttons ( ) to select " " Level number). and press the enter button ( A password re-entry screen is displayed. A level setting screen is displayed.

[Page 34](#) Setup Changing Parental Settings (3) Changing the parental level Use the up/down cursor buttons ( ) to select a level and press the enter button ( Follow steps in "Performing Basic Operations for The parental menu screen reappears. Setup Changes" (zsee page 25) to display

the setup screen. Press the return button ( ) or the left cursor button ( ) to return to the...

[Page 35](#) Setup Changing Parental Settings (4) Input the password registered with the number buttons ( Use the up/down cursor buttons ( ) to select “ ” Level and press the enter button ( The parental menu screen is displayed. The level setting screen is displayed. zSee page 32, step , “ ...

### [Page 36: Switching Between Osd Message Display And Non-Display](#)

Setup Setup Changing Parental Settings (5) Switching Between OSD Message Display and Non-Display (1) You can switch between display (On) or non-display (Off) of indicators Input the password input in step (for example, ) displayed when buttons - - - - -...

### [Page 37: Changing The Player Language](#)

Setup Setup Switching Between OSD Message Display and Non-Display (2) Changing the Player Language You can change the setup, message, or other display language Use the up/down cursor buttons ( ) to select “ ” (Japanese/English). (for display) or “ ” ...

### [Page 38: Before Wiring And Installation](#)

Before wiring and installation Seals (A) ■ Transport Lock Screws ■ Position of the built-in anti-vibration boards The mechanism in the changer is “locked” into This unit can be installed horizontally (suspended), vertically, and at a 45° angle. place during shipment by the transport screws. Once the installation position has been decided, it’s necessary to set the position Be sure to remove the screws prior to installation.

### [Page 39: Wiring](#)

Wiring (1) Basic connection 1 Interference on 88.9 MHz The car stereo should be with FM tuner. ;If a clear signal cannot be obtained on 88.9 Tune the radio to the frequency to which the installer has set the FM modulator. MHz, change the position of the frequency (FM 88.9 MHz or FM 88.3 MHz) select switch on the back of the FM...

### [Page 40: Basic Connection 2](#)

Wiring (2) Basic connection 2 Other connection (Example 1) When your car stereo is SANYO CD or CD/Cassette Receiver with CD Changer When your car stereo has RCA line-in terminals. Control model, attached FM modulator is not necessary. Monitor with Video input jack...

### [Page 41: Other Connection \(Example 2\)](#)

Wiring (3) Installation (1) Other connection (Example 2) Procedure for installation on carpet (Horizontal position) Adding a digital amplifier or an amplifier with Dolby digital decoder. ;Confirm that the built-in anti- Notes: vibration boards on both the Built-in anti-vibration ;Read the manuals supplied with the digital amplifier or the amplifier with Dolby left and right sides are set to board position the horizontal installation...

### [Page 42: Procedure For Installation On Carpet \(Vertical Position\)](#)

Installation (2) Procedure for installation on carpet (Vertical position) Procedure for installation on carpet (At a 45° angle) ;Set the built-in anti-vibration ;Set the built-in anti-vibration Built-in anti-vibration boards on both the left and boards on both the left and Built-in anti-vibration board position board position...

### [Page 43: Procedure For Installation \(Suspended Position\)](#)

Installation (3) Procedure for installation (Suspended position) Installation of Remote control sensor Using the velcro tape, install the Remote control sensor in a location that will not ;Confirm that the built-in obstruct driving. antivibration boards on both the left and right sides Built-in anti-vibration Remote Velcro tape...

### [Page 44: Message Displays](#)

Message displays Troubleshooting (1) For easier understanding, the following messages are displayed during operation. An error made during operation or installation can sometimes be mistaken for a system malfunction. Check below before contacting your Authorized SANYO Service Message Cause Remedy Page Station.

### [Page 45](#) Troubleshooting (2) Symptom Cause Remedy Page Symptom Cause Remedy Page

No picture. Brightness adjustment is turned Adjust the brightness on the No subtitles. The DVD in play contains no Subtitles cannot be displayed. - - all the way down. monitor connected to the unit. subtitles.

### [Page 46: Specifications](#)

Troubleshooting (3) Specifications ;Changer Symptom Cause Remedy Page DVD menu is The "DVD Menu Language" in Set the "DVD Menu Language" to Type 10-Disc DVD/Video CD/Audio CD Changer system displayed in a the setup is set to a foreign your preferred language. Region Number foreign language.

[Page 47](#) Get other manuals <https://www.bkmanuals.com...>

[Page 48](#) SANYO Electric Co., Ltd. Printed in Japan 2RR6P10A06700 Get other manuals <https://www.bkmanuals.com...>