





Whirlpool ADG 7500 1 Quick Reference Manual



1  
2  
3  
4  
5  
6  
7  
8

--

•

[Table of Contents](#)

•

## Bookmarks

[Download this manual](#)

## Quick Links







**PROGRAM SELECTION**

**START/RESUME BUTTON  
BUTTON**

Push this button to start the selected program: the

Push "Programs" button

indicator lights up and goes off at the end of the

(repeatedly) until the indicator

program. When the door is opened during a

of the required program lights

washing cycle, the cycle is temporarily paused: the

up (see "Table of programs"

Start indicator blinks. To resume the cycle close

below).

the door and push Start button again.

**Table of programs**

P

Programs

1

Pre-Wash

2

Quickwash

2)

3

Eco

4

Daily delay 3h 60°C

5

Intensive

1) Program data obtained in conformity with European standard EN 50242, obtained under normal conditions (without additional options) and may vary depending on conditions. Differences of up to 20 minutes are possible with sensor programs as a result of the appliance's automatic calibration system.

2) Reference program for energy label in compliance with EN 50242 regulations. - Note for Testing Institutes: for detailed information on the EN/Standard loading comparison test and other tests, contact the following address: "nk\_customer@whirlpool.com".

**CANCEL/OFF BUTTON**

Push this button to switch off the control panel.

If pressed when a program is running it cancels the

program ongoing draining water for 1 minute.

If pressed when the dishwasher is switched off it

drains any possible liquids from dishwasher (1

minute process).

If the indicator flashes repeatedly, see page 6

chapter "What to do if ...".

**Loading instructions**

**cold**

Crockery to be washed later.

Lightly soiled crockery, with no

40°C

dried on food.

Normally soiled crockery.

50°C

Energy-saving program.

This program is activated after 3

hours, recommended for normally or

heavily soiled crockery.

Recommended program for heavily

70°C

soiled crockery, especially suitable for

pans and saucepans.

**BEFORE USING THE APPLIANCE FOR THE FIRST TIME CAREFULLY READ**

**THIS QUICK REFERENCE GUIDE AND THE ASSEMBLY INSTRUCTIONS!**

**THE CONTROL PANEL OF THIS DISHWASHER ACTIVATES PUSHING**

**AUTOMATICALLY AFTER 30 SECONDS IF NO CYCLE HAS STARTED.**

**Consumption**

Deter-

gent

1) Litres kWh Minutes

—

5.0

0.02

 
10

X

13.0

0.70


30

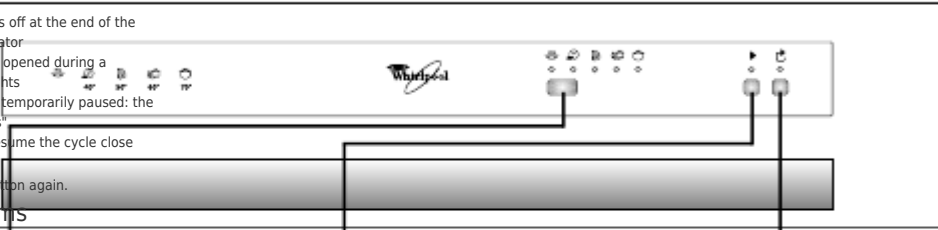

Programs		
1		
Pre-Wash		
2		
Quickwash		

2)								
3								
Eco								
4								
Daily delay 3h 60°C								
5								
Intensive								


**Whirlpool is a registered trademark of Whirlpool USA**

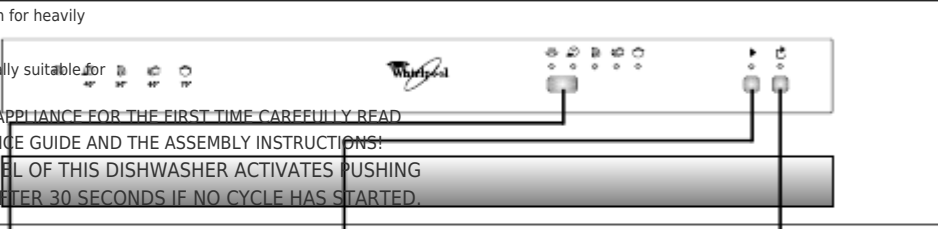 

Deter-			
gent			
1) Litres kWh Minutes			
—			
5.0			
0.02			
10			

X								
13.0								
0.70								
30								

 X  
15.0  
1.05  
165  
X  
16.0  
1.35  
120  
X  
15.0  
1.50  
140

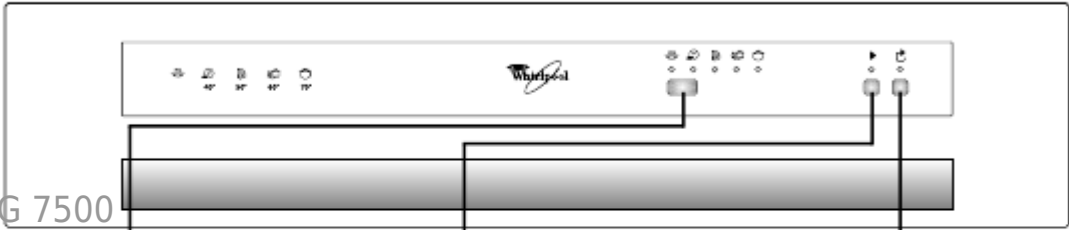

ADG 7500

ANY BUTTON EXCEPT CANCEL/OFF BUTTON.  
FOR ENERGY SAVING THE CONTROL PANEL DEACTIVATES

art

5019 396 01910



[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Whirlpool ADG 7500 1

### [Dishwasher Whirlpool ADG 751 Service Manual](#)

Compact (11 pages)

### [Dishwasher Whirlpool ADG 7560/1 WP Instructions For Use Manual](#)

Fully integrated dishwasher adg 7560/1 wp (10 pages)

### [Dishwasher Whirlpool ADG 7560/2 Quick Reference Manual](#)

Fully integrated aaa dishwasher adg 7560/2 (9 pages)

### [Dishwasher Whirlpool ADG 7560 Quick Reference Manual](#)

(8 pages)

### [Dishwasher Whirlpool ADG 758 Service Manual](#)

Integratable (14 pages)

### [Dishwasher Whirlpool ADG 7542 Installation And Maintenance Instructions Manual](#)

(16 pages)

### [Dishwasher Whirlpool ADG 7530 Installation And Maintenance Instructions Manual](#)

(8 pages)

### [Dishwasher Whirlpool ADG 7557 Quick Reference Manual](#)

(8 pages)

### [Dishwasher Whirlpool ADG 7566 Quick Reference Manual](#)

(14 pages)

### [Dishwasher Whirlpool ADG 7580 Quick Reference Manual](#)

(8 pages)

### [Dishwasher Whirlpool ADG 7561 Installation And Maintenance Instructions Manual](#)

(8 pages)

### [Dishwasher Whirlpool ADG 7561 Quick Reference Manual](#)

(8 pages)

### [Dishwasher WHIRLPOOL ADG 175 Instruction Manual](#)

(27 pages)

### [Dishwasher Whirlpool ADG 655 IX Quick Reference Manual](#)

Semi integrated aaa dishwasher with autoclean filter, stainless steel-look adg 655 ix (8 pages)

### [Dishwasher Whirlpool ADG 7800/2 Quick Reference Manual](#)

Built-in silver dishwasher with powerclean technology and 13 place settings adg 7800/2 (8 pages)

### [Dishwasher Whirlpool ADG 7622 Quick Reference Manual](#)

(8 pages)

## Summary of Contents for Whirlpool ADG 7500 1

[Page 1](#) 2) Reference program for energy label in compliance with EN 50242 regulations. -  
Note for Testing Institutes: for detailed information on the EN/Standard loading comparison test and other tests, contact the following address: ADG 7500 5019 396 01910

## [Page 2: First Time Use](#)

First time use How to set water hardness in order to always assure the best cleaning results  
Water hardness should be set only - Press and hold together Programs and CANCEL/Off buttons for minimum 3 seconds. before the first wash or if water - Programs LEDs will indicate the water hardness setting.

## [Page 3: Daily Use](#)

Daily check Adding rinse aid (not necessary when you use tablets). How to adjust the rinse aid dosage regulator Visual The rinse aid dosage can be indicator adjusted to the detergent used. The lower the setting, the less rinse aid is dispensed (factory setting: position 4).

## [Page 4: How To Load The Racks](#)

How to load the racks How to load UPPER RACK How to adjust upper rack height (if available). (depending on the model) B - Cutlery basket - half: can be placed in the upper rack A - Adjustable flaps: in horizontal position for It could be useful to lift up the upper rack to have when the "Half load/Multizone"...

## [Page 5: Maintenance And Care](#)

Select program Overview of programs The max. possible number of programs is illustrated in the chapter "Chart". The corresponding programs for your appliance can be found on the panel (page 1). Choose program according to the attached table of programs (page 1). Duration of the program depends on the external conditions in the apartment, temperature and pressure etc.

[Page 6](#) What to do if... If a fault occurs, before contacting the After-sales Service, make the following checks to try and remedy the problem. Most faults can be remedied by taking the following courses of action, quickly restoring normal appliance operation. The appliance...

[Page 7](#) What to do if... Crockery and cutlery... Possible causes... Solutions..salt indicator lit - Use tablets for soft water. - Set "Tablet" option; if this option is not available, it is normal for the salt indicator to light up..have deposits: regeneration salt residue - Water too hard.

## [Page 8: Precautions And General Recommendations](#)

What to do if... Disconnect the mains plug If, after carrying out the above checks, the fault persists, disconnect the mains plug and turn off the water tap. Contact the After-sales Service (see warranty). Before contacting our After-Sales Service, take note of the following: - the description of the fault, - the appliance type and model, - the service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side:...

This manual is also suitable for:

Adg 7500