



Toshiba AC25CEW-SS Instructions Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

--	--

•

-

Troubleshooting

•

Bookmarks

--

[Download this manual](#)

Quick Links



User Manual of Product 1:

TOSHIBA AC25CEW-SS Large 6-Slice Convection
Toaster

Oven Countertop, 10-In-One with Toast, Pizza and
Rotisserie,

1500W, Stainless Steel, Includes 6 Accessories

User Manual of Product 2:

TOSHIBA EM925A5A-SS Countertop Microwave Oven,

0.9 Cu

Ft With 10.6 Inch Removable Turntable, 900W, 6 Auto
Menus,
Mute Function & ECO Mode, Child Lock, LED Lighting,
Stainless Steel

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba AC25CEW-SS

[Oven Toshiba AC25CEW-SSC Instruction Manual](#)

(294 pages)

[Microwave Oven Toshiba ML-EM34PSS Instruction Manual](#)

(68 pages)

[Oven Toshiba AC25CEW-SS Instruction Manual](#)

(32 pages)

[Oven Toshiba AC25CEW-SS Instructions Manual](#)

Toaster oven (28 pages)

[Oven Toshiba AC25CEW-SSC Instruction Manual](#)

(32 pages)

[Oven Toshiba AC25CEW-BS Instruction Manual](#)

(55 pages)

[Oven Toshiba MS5-TR30SC\(BK\) User Manual](#)

(80 pages)

[Oven Toshiba TL2-AC35ZA GR Instruction Manual](#)

Air fry toaster oven (24 pages)

[Oven Toshiba MX1-TH23SC\(WH\) User Manual](#)

Steam oven with microwave function (40 pages)

[Oven Toshiba WTR-M25ASS Instruction Manual](#)

(28 pages)

[Oven Toshiba TL2-AC25GZA\(GR\) Instruction Manual](#)

(28 pages)

[Oven Toshiba MS2-TQ20SC\(BK\) Quick Owner's Manual](#)

(14 pages)

[Toshiba TL-MC40EZF - 20L PURE STEAM OVEN Manual](#)

(article)

[Oven Toshiba MS2-TQ20SC Instruction Manual](#)

(52 pages)

[Oven Toshiba TL2-AC25GZC\(GR\) User Manual](#)

Healthy air fry toaster oven (56 pages)

[Oven Toshiba ER-TD5000C Instruction Manual](#)

Superheated steam oven for household appliances (64 pages)

Summary of Contents for Toshiba AC25CEW-SS

[Page 1](#) User Manual of Product 1: TOSHIBA AC25CEW-SS Large 6-Slice Convection Toaster Oven Countertop, 10-In-One with Toast, Pizza and Rotisserie, 1500W, Stainless Steel, Includes 6 Accessories User Manual of Product 2: TOSHIBA EM925A5A-SS Countertop Microwave Oven, 0.9 Cu Ft With 10.6 Inch Removable Turntable, 900W, 6 Auto Menus, Mute Function &...

[Page 2](#) TOSHIBA Toaster Oven Instruction AC25CEW-SS...

[Page 3](#) Welcome to the world of TOSHIBA BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE CONTENTS IMPORTANT SAFEGUARDS BASIC SAFETY PRECAUTIONS BEFORE

FIRST USE PRODUCT INSTRUCTION NAMES OF PARTS CONTROL PANEL...

[Page 4](#) IMPORTANT SAFEGUARDS BASIC SAFETY PRECAUTIONS When using electrical appliance, basic safety precautions should always be followed, including the following: 1. Read all instructions. 2. Do not touch hot surfaces. Use handles or knobs. 3. To protect against electrical shock do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.

[Page 5](#) IMPORTANT SAFEGUARDS BASIC SAFETY PRECAUTIONS 13. Do not use appliance for other than intended use. 14. Use extreme caution when removing tray or disposing of hot grease. 15. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating parts, creating a risk of electric shock.

[Page 6](#) IMPORTANT SAFEGUARDS BASIC SAFETY PRECAUTIONS 25. Avoid contacting moving parts. 2. For household use only. your fi CAUTION: Do not insert ngers into any gaps or holes; it may cause injuries. SAVE THESE INSTURCTIONS HOUSEHOLD INDOOR USE ONLY BEFORE FIRST USE Remove all accessories and shipping materials packed inside the Oven.

[Page 7](#) PRODUCT INSTRUCTION NAMES OF PARTS When using electrical appliance, basic safety precautions should always be followed, including the following: Housing Door handle Function knob Stop/Start button Temperature knob Timer knob Baking Pan Baking Rack Crumb Tray Rack clamp Rotisserie Kit Rotisserie Kit EN-5...

[Page 8](#) OPERATION HOW TO USE CAUTION: the oven surfaces are hot during and after use general instructions Place the Baking Rack in position that will accommodate the height of the food to be cooked. The food must be put into the baking pan to avoid the fire danger that caused by the accumulation of food chipping on the heating pipes.

[Page 9](#) FUNCTION INSTRUCTION OVEN FUNCTION COOKING PRESET TEMP RANGE PRESET TIME TIME RANGE FUNCTION TEMP Toast Fixed Temp Fixed Time 450°F Bake 30min 0.01~2Hour 350°F Broil Pizza 6 inch 7min 450°F Pizza 9 inch 150°F~450°F 8.5min 1min~30min Pizza 12 inch 9min 350°F...

[Page 10](#) FUNCTION INSTRUCTION BROIL PIZZA BROIL Preset temperature : 350°F Preset temperature : 450°F Temp range : 150°F- 450°F PIZZA Temp range : 150°F- 450°F Preset time : 30min Preset time : 30min Time range : 0.01~2 Hour Time range : 0.01~2 Hour NOTE Do not preheat whenusing this fuction NOTE Do not preheat whenusing this fuction COOKIES...

[Page 11](#) FUNCTION INSTRUCTION ROTISSERIE FUNCTION Remove the Baking Rack from the oven and set aside. Place the Baking Pan in the lowest level of the oven. This will catch all the drippings from the food that is on the Rotisserie Forks as it cooks. Do Not attempt to use the Rotisserie Function without placing the Baking Pan in the correct position of the oven.

[Page 12](#) FUNCTION INSTRUCTION Lift the Rotisserie Forks on the left side just a bit to allow the notch to fit into the Rotisserie Bracket on the left side of the oven. Set the Temperature knob and the Time knob to begin operating the oven. Once the cooking time has been complete and you have checked the internal temperature of the food to ensure that it has cooked properly, you can remove the Rotisserie Forks with the Rotisserie Helper Handle.

[Page 13](#) To clean the door by using a wet cloth saturated with detergent or soap. Never immerse the unit in water or other liquid. Any other servicing should be performed by an authorized service representative. SPECIFICATION MODEL AC25CEW-SS POWER 1500W CUBAGE L*W*H 18.9x15.6x10.8 inch...

[Page 14](#) (855) 204-5313 Midea Am erica Corp 5 Sylvan Way, Parsippany, NJ 07054 customerservice@us.toshiba-lifestyle.com Midea America Corp expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance. Some states do not allow this exclusion...

[Page 15](#) TOSHIBA Horno tostador Instrucciones AC25CEW-SS...

[Page 16](#) Bienvenido al mundo de TOSHIBA ANTES DE UTILIZAR ESTE PRODUCTO, LEA, ENTENDA Y SIGA ESTAS INSTRUCCIONES. ASEGÚRESE DE GUARDAR ESTA LISTA DE LIBROS PARA SU CONSUL- TA EN EL FUTURO CONTENIDO SALVAGUARDIAS IMPORTANTES MEDIDAS DE

SEGURIDAD BÁSICAS ANTES DEL PRIMER USO...

Page 17 SALVAGUARDIAS IMPORTANTES MEDIDAS DE SEGURIDAD BÁSICAS Cuando utilice aparatos eléctricos, siempre debe seguir las precauciones básicas de seguridad, incluyendo las siguientes: 1. Leer instrucciones antes de usar. 2. Para protegerse de cualquier peligro eléctrico, NO coloque la unidad o el cable en agua o en ningún otro líquido.

Page 18 SALVAGUARDIAS IMPORTANTES MEDIDAS DE SEGURIDAD BÁSICAS 11. Se puede producir un incendio si el aparato está cubierto o toca material inflamable, incluyendo cortinas, telones, paredes y similares, cuando está en funcionamiento. No coloque ningún objeto encima del aparato cuando esté en funcionamiento.

Page 19 SALVAGUARDIAS IMPORTANTES MEDIDAS DE SEGURIDAD BÁSICAS Este aparato tiene un enchufe polarizado (una pata es más ancha que la otra). Para reducir riesgo de descarga eléctrica, el enchufe está diseñado para encajar en un tomacorriente polarizado de una sola manera. Si el enchufe no encaja por completo póngase en contacto con un electricista para que instale un tomacorriente apropiado.

Page 20 ANTES DEL PRIMER USO Retire todos los accesorios y materiales de envío embalados dentro del horno. Lave la rejilla y la bandeja en agua jabonosa tibia. Limpie el interior del horno con un paño húmedo o una esponja. Seque con toallas de papel para asegurarse de que la unidad esté seca.

Page 21 INSTRUCCIONES DEL PRODUCTO NOMBRES DE PIEZAS Cuando utilice aparatos eléctricos, siempre debe seguir las precauciones básicas de seguridad, incluyendo las siguientes: Alojamiento Mango de la puerta Perilla de función Botón Parar/Iniciar Botón de Temperatura Perilla de Temporizador Bandeja para hornear Rejilla para hornear Bandeja para migas Kit para asar...

Page 22 FUNCIONAMIENTO CÓMO UTILIZAR PRECAUCIÓN: las superficies del horno están calientes durante y después del uso. Coloque la rejilla para hornear en la posición que se adapte a la altura de los alimentos a cocinar. Coloque los alimentos en el estante. Asegúrese de que siempre usa un recipiente para horno en el horno, nunca use recipientes de plástico o cartón en el horno.

Page 23 INSTRUCCIÓN DE LA FUNCIÓN FUNCIÓN DEL HORNO FUNCION DE TEMP TIEMPO INTERVALO DE RANGO TEMP COCCIÓN PREESTAB. PREESTAB. TIEMPO Tostar Temp. fija Temp. fija Hornear 450°F 30min 0,01~2Horas Asar 350°F Pizza 6 pulgadas 7min Pizza 9 pulgadas 450°F 150°F~450°F 8.5min 1min~30min Pizza 12 pulgadas 9min...

Page 24 FUNCTION INSTRUCTION ASAR PIZZA BROIL Temp. preestablecida: 350°F Temp. preestablecida: 450°F PIZZA Rango temp.: 150°F - 450°F Rango temp.: 150°F - 450°F Tiempo preestablecido: 30min Tiempo preestablecido: 30min Intervalo de tiempo : 0.01~2h Intervalo de tiempo : 0.01~2h NOTA No precaliente cuando use esta función NOTA No precaliente cuando use esta función GALLETAS ASADO...

Page 25 INSTRUCCIÓN DE LA FUNCIÓN FUNCIÓN DE ASADO Retire la rejilla del horno y déjela a un lado. Coloque la bandeja de hornear en el nivel más bajo del horno. Esto atraparán todos los goteos de la comida que está en las horquillas para asar cuando cocine.

Page 26 INSTRUCCIÓN DE LA FUNCIÓN 4. Levante las horquillas para asar en el lado izquierdo un poco para permitir que la muesca encaje en el soporte de las horquillas en el lado izquierdo del horno. 5. Ajuste la perilla de temperatura y la perilla de tiempo para comenzar a utilizar el horno.

Page 27 5. Limpie la puerta con un paño húmedo saturado con detergente o jabón. 6. Nunca sumerja la unidad en agua u otro líquido. 7. Cualquier otro servicio debe ser realizado por un representante de servicio autorizado. ESPECIFICACIONES MODELO AC25CEW-SS POTENCIA 1500W CAPACIDAD L*An*Al 18.9×15.6×10.8 pulg.

Page 28 (855) 204-5313 Midea America Corp 5 Sylvan Way, Parsippany, NJ 07054 customerservice@us.toshiba-lifestyle.com Midea America Corp. expresamente rechaza cualquier responsabilidad por daños resultantes o pérdidas accidentales causados por el aparato. Algunos estados no permiten esta exclusión o limitación de pérdidas resultantes o

accidentales, por lo que la...

[Page 29](#) MICROWAVE SOLO OVEN INSTRUCTION MANUAL EM925A5A-SS Please review this instruction manual before operating.

[Page 30: Table Of Contents](#)

CONTENTS PRODUCT SAFETY Precautions to avoid possible exposure to excessive microwave energyEN-01 Important safety instructionsEN-03 Grounding instructions EN-07 Radio interferenceEN-09 Utensils EN-10 Materials you can use in microwave ovenEN-11 Materials can not be used in microwave ovenEN-13 PRODUCT SETTING Setting up your oven

[Page 31](#) 11. BeverageEN-26 12. Dinner plateEN-26 13. PizzaEN-27 14. Memory functionEN-27 15. Turn on/off the buzzer sound EN-28 16. Multi-stage cookingEN-28 17. Energy saver mode EN-30 18. Lock function EN-30 19.

[Page 32: Product Safety](#)

PRODUCT SAFETY PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY (a). Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.

[Page 33](#) SPECIFICATIONS MODEL EM925A5A- S S RATED VOLTAGE 120V~ 60Hz RATED INPUT POWER(MICROWAVE) 1350W RATED OUTPUT POWER(MICROWAVE) 900W OVEN CAPACITY 0.9 cu.ft. TURNTABLE DIAMETER 10.6 inch EXTERNAL DIMENSIONS 19.15 15.91 11.48 inch NET WEIGHT Approx. 27.3 Lbs All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the NOTE actual product.

[Page 34: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic WARNING safety precautions, including the following: Read all instructions before To reduce the risk of fire in using the appliance.

[Page 35](#) IMPORTANT SAFETY INSTRUCTIONS Liquids, such as water, Do not leave paper coffee, or tea are able products, cooking to overheat beyond the utensils, or food in the boiling point without cavity when not in use. appearing to be boiling. Visible bubbling or boiling Install or locate this oven when the container only in accordance with...

[Page 36](#) IMPORTANT SAFETY INSTRUCTIONS or some smoke in the 4. After heating, allow microwave cavity, the container to stand discoloration of the cavity in the microwave oven may also occur. for a short time before removing the container. 5. Use extreme care when inserting a spoon or other utensil into the container.

[Page 37](#) IMPORTANT SAFETY INSTRUCTIONS of oven is specifically Do not use this oven designed to heat, cook or near water, for example, dry food. near a kitchen sink, in It is not designed for a wet basement, near a industrial or laboratory use. swimming pool, or similar location.

[Page 38: Grounding Instructions](#)

GROUNDING INSTRUCTIONS This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. To protect against electrical shock, this appliance is equipped with a cord having a 3 prong grounding-type plug for insertion into a proper grounding- type receptacle.

[Page 39](#) GROUNDING INSTRUCTIONS Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-pronged grounding plug , and a 3-slot receptacle that will accept

the plug on the appliance.

[Page 40: Radio Interference](#)

RADIO INTERFERENCE 1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment. 2. When there is interference, it may be reduced or eliminated by taking the following measures: (1). Clean door and sealing surface of the oven. (2).

[Page 41: Utensils](#)

UTENSILS Personal Injury Hazard: Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking. See the instructions on "Materials you can use in microwave oven " or "Materials can not be used in CAUTION microwave oven."...

[Page 42: Materials You Can Use In Microwave Oven](#)

MATERIALS YOU CAN USE IN MICROWAVE OVEN UTENSILS REMARKS Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause Browning dish the turntable to break. Microwave-safe only. Follow manufacturer's instructions.

[Page 43](#) MATERIALS YOU CAN USE IN MICROWAVE OVEN UTENSILS REMARKS Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be Plastic slit, pierced or vented as directed by package.

[Page 44: Materials Can Not Be Used In Microwave Oven](#)

MATERIALS CAN NOT BE USED IN MICROWAVE OVEN UTENSILS REMARKS May cause arcing. Transfer food into microwave-safe dish. Aluminum tray May cause arcing. Transfer food into microwave-safe dish. Food carton with metal handle Metal shields the food from microwave energy. Metal trim may cause arcing.

[Page 45: Product Setting](#)

PRODUCT SETTING SETTING UP YOUR OVEN NAMES OF OVEN PARTS AND ACCESSORIES Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories: Glass Tray (Can be used under all functions) Instruction Manual A.

[Page 46: Setting Up Your Oven](#)

SETTING UP YOUR OVEN TURNTABLE INSTALLATION Cleaning the cooking compartment and putting the turntable in place. For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft. Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly.

[Page 47](#) SETTING UP YOUR OVEN COUNTERTOP INSTALLATION Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged. Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown waveguide cover that is attached to the oven cavity to protect the magnetron.

[Page 48](#) SETTING UP YOUR OVEN 2. Plug microwave oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label. • Do not install oven over a range cooktop or other heat-producing appliance.

[Page 49: Instruction For Use](#)

INSTRUCTION FOR USE BEFORE USING FOR THE FIRST TIME The appliance may produce unpleasant odors when it is used for the first time. This section tells you what you need to do before using your microwave to prepare food for the first time.

[Page 50: Operation](#)

OPERATION CONTROL PANEL AND FEATURES EN-19...

[Page 51: Power Levels](#)

1. POWER LEVELS Ten power levels are available. Press "Time Cook" , "00:00" will display, then press number pads. Press "Power Level" and "PL10" will display. Then press number pads to select a different power level. In cooking state of microwave, press "Power Level", the current power will be displayed for 3 seconds.

[Page 52: Clock Setting](#)

LEVEL POWER DISPLAY 2. CLOCK SETTING When the microwave oven is plugged into an outlet, "0:00" will display. Press "Clock & Settings" once, "00:00" will appear in the display. Press the number pads to enter the current clock time. For example, if the time is now 10:12, press "...

[Page 53: Microwave Cook](#)

Press the number pads to enter the time amount. The maximum amount of time that can be entered is 99 minutes, 99 seconds. Press " START/+30Sec. " to confirm setting, and the timer will start to count down. When the time amount elapses, the oven will beep 5 times. •...

[Page 54: One Touch Start](#)

Example : To cook the food with 50% microwave power for 15 minutes. • Press "Time Cook" , "00:00" will display. • Press "1, 5, 0, 0" in order for 15:00 to appear in the display. • Press "Power Level" , then press "5" to select 50% microwave power.

[Page 55: Time Defrost](#)

• Time can also be added in 30 second increments by pressing " START/+30Sec. " during Microwave Cooking, Time Defrost and Multi-stage Cooking. • Time cannot be added by pressing " START/+30Sec. " during Weight Defrost NOTE and Kitchen Timer functions. 6.

[Page 56: Popcorn](#)

Press " START/+30Sec. " to start defrosting and the cooking time remaining will be displayed. 8. POPCORN Press "Popcorn" , "1.75" will appear in the display. Press "Popcorn" two more times to choose the weight, "3.0" and "3.5" will display in order. Press "...

[Page 57: Beverage](#)

Press "Frozen Vegetable" two more times to choose the weight, "8.0" and "16.0" will display in order. Press " START/+30Sec. " to cook. The remaining time will display. Oven beeps 5 times when cooking finish. 11. BEVERAGE Press "Beverage" , "1" will appear in the display. Press "Beverage"...

[Page 58: Pizza](#)

13. PIZZA Press "Pizza" , "4.0" will appear in the display. Press "Pizza" two more times to choose the weight, "8.0" and "14.0" will display in order. Press " START/+30Sec. " to cook. The remaining time will display. Oven beeps 5 times when cooking finish. 14.

[Page 59: Turn On/Off The Buzzer Sound](#)

• Press "Power Level" once, then press "8" for "PL8" to display. • Press " START/+30Sec. " to save the procedure. Oven beeps once. Or press " START/+30Sec. " twice directly save and start cooking. • To choose the procedure from the memory list, press "Memory"...

[Page 60](#) • Auto Menu cannot be set in Multi-stage Cooking. NOTE Example: 80% Power Level for 5 minutes followed by 60% Power Level for 10 minutes; saved as memory 3. • Press "Memory" 3 times; screen displays 3. • Press "Time Cook", then press "5", "0" and "0"...

[Page 61: Energy Saver Mode](#)

17. ENERGY SAVER MODE In standby mode, press the " STOP/Cancel " once (less than 3 seconds to avoid starting the child lock function) to enter the Energy Saver mode. In child-locked mode, press the " STOP/Cancel " once (less than 3 seconds) and release to enter the Energy Saver Mode.

[Page 62: Cooking End Reminder Function](#)

20. COOKING END REMINDER FUNCTION The oven will beep five times to alert the user that

cooking time has ended. 21. OTHER SPECIFICATIONS "START/+30Sec." must be pressed to continue cooking if the door is opened during cooking. A single beep sounds to indicate that a pad is correctly pressed; if pad is not correctly pressed, no beep sounds.

[Page 63: Cleaning](#)

CLEANING With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. We will explain here how you should correctly care for and clean your appliance. • Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.

[Page 64](#) CLEANING APPLIANCE FRONT PLATE Hot soapy water: Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

[Page 65: Maintenance](#)

MAINTENANCE TROUBLE SHOOTING Check your problem by using the chart below and try the solutions for each problem. TROUBLE POSSIBLE CAUSE POSSIBLE REMEDY a. Electrical cord for oven is not a. Plug into the outlet. plugged in. Oven will not start b.

[Page 66: Trouble Shooting](#)

TROUBLE SHOOTING TROUBLE POSSIBLE CAUSE POSSIBLE REMEDY a. Cover or lid over food must a. Cover or lid on food not contain vent hole for escaping vented. steam. Sensor cooked foods b. Door opened before sensor- b. Do not open door to stir or not properly cooked detected cooking time appears turn food before sensor-...

[Page 67: One Year Limited Warranty](#)

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials. If additional assistance is needed, please contact customer assistance at: customercare@us.toshiba-lifestyle.com 855-204-5313 Midea America Corp. expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance.

[Page 68](#) Details Matter Customercare@us.toshiba-lifestyle.com 855-204-5313...