


Meaning Of Alarm Messages - Sanyo CHDZ07263 Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118


119
120
121
122
123
124
125
126
127
128

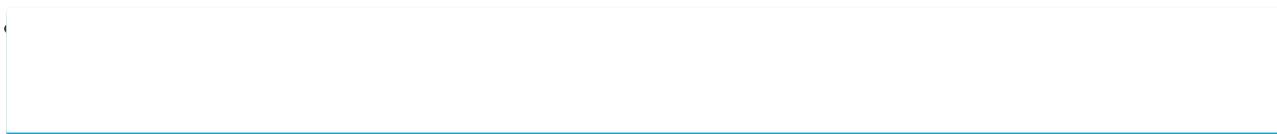

•

•

Bookmarks

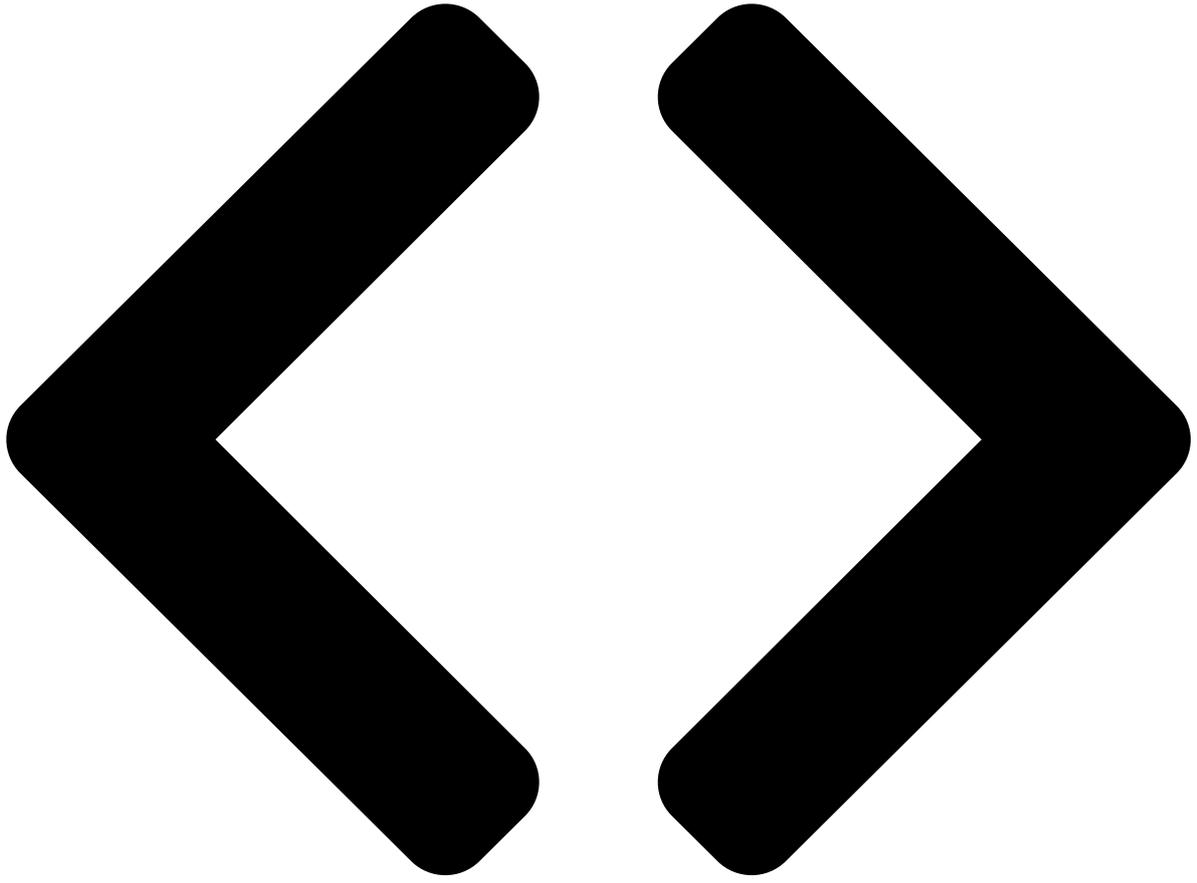

6. Meaning of Alarm Messages

6. Meaning of Alarm Messages

Table of Self-Diagnostics Functions and Description of Alarm Displays

Alarm messages are indicated by the blinking of LED 1 and 2 (D72, D75) on the outdoor unit PCB. They are also displayed on the wired remote controller.

Viewing the LED 1 and 2 (D72 and D75) alarm displays

LED1

LED2

Alternating

(

: Blinling) Connect the outdoor maintenance remote controller to the RC socket on the outdoor main unit control PCB (3P, blue),and check the Alarm Messages on the remote controller display.

Possible cause of malfunction

Remote controller is

Serial

☼	☼	

detecting error signal from communication indoor unit.
errors

Mis-setting
Indoor unit is detecting error signal from remote controller and system controller.
Indoor unit is detecting error

signal from outdoor unit.
Outdoor unit is detecting error signal from indoor unit.

✧	✧	
Improper setting Indoor unit communication error of group control wiring.		

During auto. address setting, number of connected units does not correspond to number set.

Improper setting 5 6 fault		
		•
		•

Alarm Display
LED 1 blinks M times, then LED 2 blinks N times. The cycle then repeats.
M = 2: P alarm 3: H alarm 4: E alarm 5: F alarm 6: L alarm
N = Alarm No.
Example: LED 1 blinks 2 times, then LED 2 blinks 17 times. The cycle then repeats.
Alarm is "P17".

Error in receiving serial communication signal.
(Auto address is not completed.)
Error in transmitting serial communication signal.
Group wiring failure of indoor units in the refrigerant system
(occurring when remote controller is operated immediately after automatic address setting)
Error in receiving serial communication signal.
There is an indoor unit which does not send signals when the power is ON.
Indoor unit address setting is duplicated.
Duplicated remote controller "main" setting.
Starting auto. address setting is prohibited.
AP pin / CN102 is shorted while the auto. address setting started.
Error of main indoor unit in receiving serial communication signal from sub indoor units.
Number of connected indoor units is less than the number set.
Number of connected indoor units is more than the number set.
No indoor unit is connected.

[Previous Page](#)
[Next Page](#)

1
...
15
16
17
18
19
20
21
22

Quick Links:

[Table of Contents](#)

Chapters

[Section 1](#) 4

[Section 2](#) 21

[Outdoor Unit Control Pcb/Indoor Unit Control Pcb](#) 91

Related Manuals for Sanyo CHDZ07263

[Air Conditioner Sanyo ECO-i CHDZR07263 Series Service Manual](#)

(146 pages)

[Air Conditioner Sanyo ECO-i AHX0752 Technical Data Manual](#)

(265 pages)

[Air Conditioner Sanyo MINI ECO-i XHX1252 Service Manual & Test Run Service Manual](#)

(190 pages)

[Air Conditioner Sanyo CHDXR09663* Service Manual](#)

2-way eco-i multi system (142 pages)

[Air Conditioner Sanyo AHX0752 Service Manual](#)

W-2way eco-i multi system (114 pages)

[Air Conditioner Sanyo W-3WAY ECO-i 85464369098000 Installation Instructions Manual](#)

W-3way eco-i system air conditioner (106 pages)

[Air Conditioner Sanyo 85464359982001 Installation Instructions Manual](#)

W-2way system air conditioner (96 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo R410A Installation Instructions Manual](#)

W-3way eco-i system air conditioner (54 pages)

[Air Conditioner Sanyo XM18AAB Installation Instructions Manual](#)

W-2way system air conditioner (50 pages)

[Air Conditioner Sanyo ECO R410A Installation Instructions Manual](#)

Eco-i system air conditioner (48 pages)

[Air Conditioner Sanyo XHX1252 Instruction Manual](#)

Split system air conditioner (20 pages)

[Air Conditioner Sanyo THX2452 User Manual](#)

(4 pages)

[Air Conditioner Sanyo DHX4852 Manual](#)

Indoor unit (4 pages)

[Air Conditioner Sanyo THX1852 Manual](#)

Indoor unit (4 pages)

Related Content for Sanyo CHDZ07263

[SPW-C1155DXHN8 Meaning Of Alarm Messages](#)

Sanyo SPW-C1155DXHN8

[SPW-CR365GXH56 I Meaning Of Alarm Messages](#)

Sanyo SPW-CR365GXH56

[R410A Meaning Of Alarm Messages](#)

Sanyo R410A

[W-3WAY ECO-i 85464369098000 Meaning Of Alarm Messages](#)

Sanyo W-3WAY ECO-i 85464369098000

[Mini ECO-i 85464359981002 Meaning Of Alarm Messages](#)

Sanyo Mini ECO-i 85464359981002

[C4272R Meaning Of Alarm Messages](#)

Sanyo C4272R

[AHX0752 Meaning Of Alarm Messages](#)

Sanyo AHX0752

[85464359982001 Meaning Of Alarm Messages](#)

Sanyo 85464359982001

This manual is also suitable for:

[Chdz09663Chdzt07263Chdzt09663Xhx1252Xhx1852Xhx2452](#) ... [Show all](#)