

 
Installation Manual For Timer Remote Controller; How To Install The Remote Controller - Sanyo CHDZ07263 Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128



•

•

Bookmarks



3. Timer Remote Controller

3-3. Installation Manual for Timer Remote Controller

Accessories for remote controller switch


Remote controller

(with 8 in.
wire)

3-4. How to install the Remote Controller

CAUTION

The mounting position for the remote controller should be located in an accessible place for control.

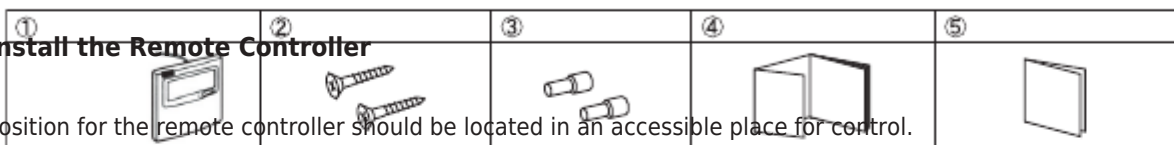

Never cover the remote controller or recess it into the wall.

(1) When you open the decorative cover (Fig. 2-4), you will see 2 gaps under the remote controller.

Insert a coin into these gaps and pry off the back case.

(2) Attach the back case with the 2 wood screws

These holes are for screws. (Fig. 2-5)


(3) Connect the remote controller wiring (2 wires) correctly to the corresponding terminals in the electrical component box of

the indoor unit.


(4) To finish, fit the back tabs of the case into the remote controller and mount it.

Basic Wiring Diagram

Connection diagram

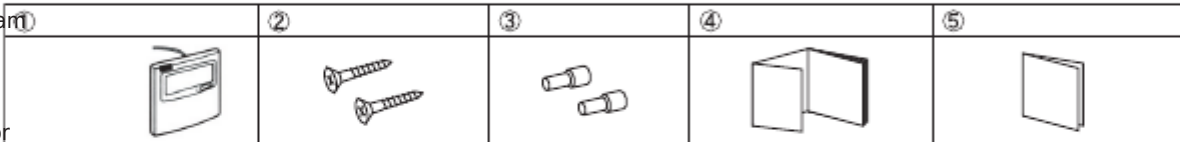

Terminal board for indoor unit remote controller wiring

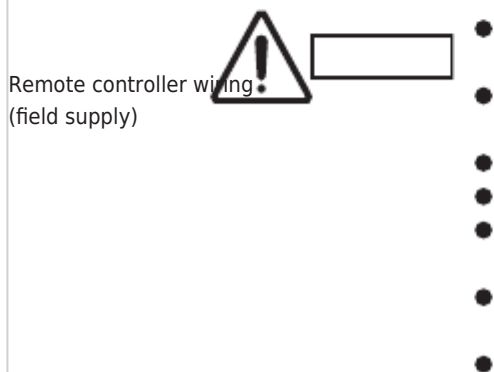

Wood screws

Wire joints

Do not supply power to the unit or try to operate it until the tubing and wiring to the outdoor unit is completed.

Do not twist the control wiring with the power wiring or run it in the same metal conduit, because this may cause malfunction.

Install the remote controller away from sources of electrical noise.

Install wiring correctly (incorrect wiring will damage the equipment). ②

Install a noise filter or take other appropriate action if electrical noise affects the power supply circuit.

When wiring, do not connect the remote controller wires to the adjacent terminal block for the power wiring. Otherwise, the unit will break down.

Use shielded wires for remote control wiring and ground the shield on indoor unit sides. (Fig. 2-1)

Otherwise misoperation due to noise may occur.

When wiring, use the provided. Using a screwdriver, push open the cut-outs on the back case.

1
Shielded wire

2
Ground

Fig. 2-1

Operation manual

Installation manual

Approx.

8 in.

Remote

W

1
controller


2

BK
unit

Power wire from remote

Connector

controller unit

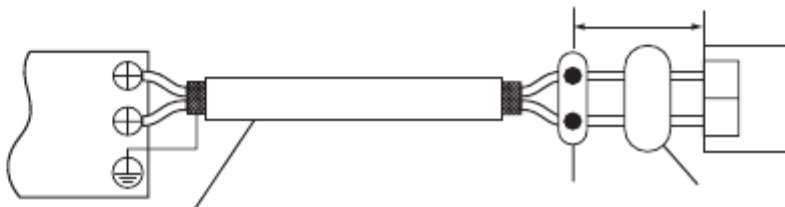

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
35
36
37
38
39
40
41
42

Quick Links:

[Table of Contents](#)

Chapters

[Section 1](#) 4

[Section 2](#) 21

[Outdoor Unit Control Pcb/Indoor Unit Control Pcb](#) 91

Related Manuals for Sanyo CHDZ07263

[Air Conditioner Sanyo ECO-i CHDZR07263 Series Service Manual](#)

(146 pages)

[Air Conditioner Sanyo ECO-i AHX0752 Technical Data Manual](#)

(265 pages)

[Air Conditioner Sanyo MINI ECO-i XHX1252 Service Manual & Test Run Service Manual](#)

(190 pages)

[Air Conditioner Sanyo CHDXR09663* Service Manual](#)

2-way eco-i multi system (142 pages)

[Air Conditioner Sanyo AHX0752 Service Manual](#)

W-2way eco-i multi system (114 pages)

[Air Conditioner Sanyo W-3WAY ECO-i 85464369098000 Installation Instructions Manual](#)

W-3way eco-i system air conditioner (106 pages)

[Air Conditioner Sanyo 85464359982001 Installation Instructions Manual](#)

W-2way system air conditioner (96 pages)

[Air Conditioner Sanyo Mini ECO-i CHXR03652 Service Manual](#)

(93 pages)

[Air Conditioner Sanyo Mini ECO-i 85464359981002 Installation Instructions Manual](#)

Sanyo air conditioner installation instructions (90 pages)

[Air Conditioner Sanyo R410A Installation Instructions Manual](#)

W-3way eco-i system air conditioner (54 pages)

[Air Conditioner Sanyo XM18AAB Installation Instructions Manual](#)

W-2way system air conditioner (50 pages)

[Air Conditioner Sanyo ECO R410A Installation Instructions Manual](#)

Eco-i system air conditioner (48 pages)

[Air Conditioner Sanyo XHX1252 Instruction Manual](#)

Split system air conditioner (20 pages)

[Air Conditioner Sanyo THX2452 User Manual](#)

(4 pages)

[Air Conditioner Sanyo DHX4852 Manual](#)

Indoor unit (4 pages)

[Air Conditioner Sanyo THX1852 Manual](#)

Indoor unit (4 pages)

Related Content for Sanyo CHDZ07263

[CH2442 Wired Remote Controller Installation](#)

Sanyo CH2442

[C4272R S/C Wired Remote Controller Installation](#)

Sanyo C4272R S/C

[SAP-K181AA Remote Control Unit Installation Position](#)

Sanyo SAP-K181AA

[SAP-K181GJH Remote Control Unit Installation Position](#)

Sanyo SAP-K181GJH

[XM18AAB Remote Controller Test Run Settings](#)

Sanyo XM18AAB

[SAP-K71GH Remote Control Unit Installation Position](#)

Sanyo SAP-K71GH

[SAP-K71GJA-S Remote Control Unit Installation Position](#)

Sanyo SAP-K71GJA-S

[SPW-C0705DZH8 Installation Manual For Timer Remote Controller](#)

Sanyo SPW-C0705DZH8

This manual is also suitable for:

[Chdz09663Chdzt07263Chdzt09663Xhx1252Xhx1852Xhx2452 ...](#) [Show all](#)