



Toshiba HDR5010 Owner's Manual

Freeview hd tv recorder

1	
2	
3	
4	
5	
6	
Table Of Contents	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--

Quick Links

[1 Getting Started](#)

[2 Overview of the Digital Tv Recorder](#)

[3 Overview of the Remote Control](#)

[4 Connecting Your Digital Tv Recorder](#)

[5 Troubleshooting](#)

[Download this manual](#)



Digital TV recorder



HDR5010KB
TOSHIBA

OWNER'S MANUAL

© 2010 Toshiba Corporation

HDR5010 User Guide.indb 1

22/07/2010 10:38

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba HDR5010

[DVR Toshiba HDR5010KB Owner's Manual](#)

Toshiba hdr5010kb digital tv recorder owner's manual (48 pages)

[DVR Toshiba HDR5010KB Quick Start Manual](#)

(2 pages)

[TV Receiver Toshiba HDR5010KB Quick Start Manual](#)

Digital tv recorder (2 pages)

[DVR Toshiba DVS32-240-2T Software Manual](#)

Xvs - dvs - hvs digital video recorder (105 pages)

[DVR Toshiba HDS-M5200 series User Manual](#)

Stand alone digital video recorder (103 pages)

[DVR Toshiba SURVEILLIX KV-KLR Operation Manual](#)

(124 pages)

[DVR Toshiba RD-KX50SU Owner's Manual](#)

Hdd/dvd video recorder (179 pages)

[DVR Toshiba RD-XS52SU Owner's Manual](#)

Hdd/dvd video recorder (240 pages)

[DVR Toshiba D-R265SE Service Manual](#)

(41 pages)

[DVR Toshiba D-R410KU Owner's Manual](#)

D-r410ku user's guide (101 pages)

[DVR Toshiba DR570KU Owner's Manual](#)

Dr570ku user's guide (118 pages)

[DVR Toshiba D-RW2SU Owner's Manual](#)

(157 pages)

[DVR Toshiba D-RW2SU Quick Manual](#)

(2 pages)

[DVR Toshiba D-RW2SU Owner's Manual](#)

D-rw2su user's guide (157 pages)

[DVR Toshiba RD-XS34 Owner's Manual](#)

Hdd/dvd video recorder (175 pages)

[DVR Toshiba RD-XS54SU Owner's Manual](#)

Hdd/dvd video recorder (199 pages)

Summary of Contents for Toshiba HDR5010

[Page 1](#) Digital TV recorder HDR5010KB OWNER'S MANUAL © 2010 Toshiba Corporation
HDR5010 User Guide.indb 1 22/07/2010 10:38...

[Page 2: Introduction](#)

Introduction Important Safety Information Thank you for choosing this Toshiba Digital TV recorder. Before using the Digital TV recorder, please take a minute to read the following important safety information. • Although this appliance has been carefully manufactured and rigorously checked prior to leaving the factory, as with all electrical appliances it is possible for problems to develop.

[Page 3](#) • The unit becomes warm under normal operation. Do not place any covers or blankets on the unit in order to prevent overheating. The ventilation holes are not to be blocked. Do not set up near radiators. Do not place in direct sunshine. • Do not allow the unit to get wet.

[Page 4: General Information](#)

Introduction General Information Toshiba is not liable for any damage or loss caused directly or indirectly by the malfunction of this unit, including, without limitation, any one of the following:

- Failure to record contents intended to be recorded by the consumer.

[Page 5: Environmental Information](#)

Copyright protection system To play back high definition video images via an HDMI connection, it is necessary that both the player and the display device (or an AV amplifier) support a copyright protection system called HDCP (high-bandwidth digital content protection system). • HDCP is copy protection technology that comprises data encryption and authentication of the connected AV device. • This unit supports HDCP. • Please read the operating instructions of your display device (or AV amplifier) for more information. • Because HDMI is an evolving technology, it is possible that some devices with an HDMI input may not operate properly with this unit.

[Page 6: End User Licence](#)

"This product is marked with "CE" and complies therefore with the applicable harmonized European standards listed under the Low Voltage Directive 2006/95/EC and the EMC Directive 2004/108/EC." Responsible for CE-marking is TOSHIBA INFORMATION SYSTEMS (U.K.) LTD, Toshiba Court, Weybridge Business Park, Addlestone Road, Weybridge, Surrey, KT15 2UL, United Kingdom HDR5010 User Guide.indb 6...

[Page 7: Table Of Contents](#)

Table of Contents Introduction Important Safety Information ...2 General Information ...4 Notes on Copyright ...4 Environmental Information...5 End User Licence ...6 Trademark Acknowledgements ...6 Getting Started Package Contents ...8 Overview of the Digital TV Recorder ...9 Overview of the Remote Control ...10 Inserting the Batteries into the Remote Control...12 Connecting your Digital TV Recorder ...13 Switching your Digital TV Recorder On ...14...

[Page 8: Getting Started](#)

* For use exclusively with this Digital TV recorder. Never use this AC mains adapter with any other device, as it may cause fire and/or product damage. HDR5010 User Guide.indb 8 HDR5010KB QUICK START MANUAL © 2010 Toshiba Corporation Remote control Owner's manual Batteries (2x R3/AAA) Quick start guide...

[Page 9: Overview Of The Digital Tv Recorder](#)

Front Panel Standby / ON switch and indication Rear Panel w e r t y i Aerial input socket HDMI output socket SPDIF optical output (Standard TOS link connector) HDR5010 User Guide.indb 9 overview of the Digital TV Recorder Front panel display Aerial (loop through) output socket HDMI input sockets 1/2 Power socket...

[Page 10: Overview Of The Remote Control](#)

Getting Started overview of the Remote Control 1& HDR5010 User Guide.indb 10 2& 22/07/2010 10:38...

[Page 11](#) TV - Switches the TV on/into Standby*. DTT - Switches the viewing mode to DTT. HDMI 1 - Switches the input mode to HDMI 1. 0-9 - Selects channels, enter PIN. AD - Switches Audio Description on or off. Refer to page 16 for more information. SUB - Displays subtitles (if available). +/- - Adjusts the TV's volume*. PIP - Enters Picture In Picture mode.

[Page 12: Inserting The Batteries Into The Remote Control](#)

Getting Started Inserting the Batteries into the Remote Control 1. Lift open the battery compartment cover (as shown). 2. Install 2 "R3/AAA" batteries (included); the correct polarity is shown inside the battery compartment. Always check the positive/negative symbols on the batteries to ensure they are inserted correctly.

[Page 13: Connecting Your Digital Tv Recorder](#)

TV aerial Plug your aerial lead into the RF In socket of the recorder. If required, plug an Ethernet cable between the LAN socket and an Ethernet system. Refer to page 37 for more details. Cable not supplied. If required, plug a SCART cable between the SCART oUTPUT socket of the recorder and your TV, Video or DVD recorder.

[Page 14: Switching Your Digital Tv Recorder On](#)

Getting Started Switching your Digital TV Recorder on To Turn on Power to the Unit: 1. Switch On power at the wall socket, if required. 2. Within a few seconds the front panel will display "Starting" and the Power ring LED will light.

[Page 15: Automatic Tuning](#)

1. Ensure the aerial is plugged into this unit. 2. Once the unit has powered up for the first time, the following menu is displayed. Press the [OK] button to continue. note: • On initial startup there is also an option available to access advanced setup by pressing the [RED] button before tuning starts. Press the [BACK] button to return to the tuning screen. 3.

[Page 16: Using Your Digital Tv Recorder](#)

Using your Digital TV recorder Everyday Use Changing channels Type in the channel number using the [0]-[9] buttons. Alternatively, press the [Ch+] and [Ch-] buttons to select the next/previous channel. Channel hopping Press the [] button to return to the previous channel watched. Hop between the current and previous channel watched Adjusting the volume* Press the [...]

[Page 17: Common Symbols](#)

Using Standby When you're not watching TV, you should set the Digital TV recorder to Standby. Press the [] button to switch between On (Blue Power ring LED on the front panel) and Standby (Red power LED on the front panel). This unit has a low power feature which means that when left in Standby for a long period, it may take longer to power up.

[Page 18: The Electronic Programme Guide \(Epg\)](#)

Using your Digital TV recorder The Electronic Programme Guide (EPG) The EPG displays programme information for the next 8 days (when transmitted by broadcasters). You can also set programmes to be recorded from the EPG. Current channel Date of currently displayed programmes List of...

[Page 19: The Channel List](#)

The Channel List displays all the available channels. List of channels Highlighted channel Access the Channel List... Select channels... Display the previous nine channels in the list... Display the next nine channels in the list... Switch to the selected channel... Exit the Channel List...

[Page 20: The Info Display](#)

Using your Digital TV recorder The Info Display When watching TV, the Info display gives brief information on the current and future programmes (when the programme information is transmitted by broadcasters). You can also set programmes to be recorded from the Info display. When watching a recording, the Info display gives a brief description of the recorded programme.

[Page 21: Picture In Picture \(Pip\)](#)

Picture In Picture allows you to watch two channels at the same time. The sound from the main picture is always played. PIP screen (highlighted) Switch on Picture In Picture... Move the PIP screen... Select/highlight the PIP screen... Change the channel displayed in the PIP screen...

[Page 22: Recording Programmes](#)

Using your Digital TV recorder Recording Programmes This Digital TV recorder has twin tuners, making it possible to record two programmes at the same time. When recording two programmes at the same time you can also: - watch either of the programmes you are recording. - start to playback one of the recordings, even though it's still recording ! - playback a previously recorded programme - watch either of the programmes being recorded.

[Page 23: Recording Options](#)

Recording options Below is the bottom part of an on screen menu that may appear when you make a recording. The number of options available may vary. If you do not wish to use any of these options press the [oK] button or simply wait until the menu disappears.

[Page 24](#) Using your Digital TV recorder Recording Programmes Recording Conflicts Your Digital TV recorder can record up to two programmes at the same time. If you attempt to record three or more programmes that overlap, the unit will try to resolve the conflict automatically by recording the programme at a different time or on a different channel.

[Page 25: Timeshifting](#)

Timeshifting allows you to Pause live TV, it lets you pause a broadcast programme and continue watching it later. The maximum length of time you can pause a programme for is 4 hours. Timeshift banner Pausing Live TV • Press to pause live TV. Press note: •...

[Page 26: The Timers Screen](#)

Using your Digital TV recorder The Timers Screen The Timers screen displays all the programmes that are currently set to record. You can also set a manual timer and modify or cancel an existing timer from the Timers screen. List of timers symbol indicates...

[Page 27: Modifying Timers](#)

Modifying a Timer You can edit a current timer to change the Type, Channel, Start and End time/date. 1. With the required timer highlighted, press the [GREEN] button. If the timer is protected, use the [0]-[9] buttons to enter the PIN (default = 0000)*. 2.

[Page 28](#) Using your Digital TV recorder Modifying Timers 'Manual' This is displayed if you manually set a timer (see next page). The Channel, Start time, End time, Change/Delete & Playback can all be changed. Change/Delete: 'Allowed' The timer can be changed or deleted. 'Disallowed'...

[Page 29: The Library Screen](#)

The Library menu displays all the recordings currently stored on the hard disk. You can also browse and manage your recordings from the Library menu. The Library menu will take longer to load if you have several recordings stored on the hard disk. List of recordings symbol...

[Page 30](#) Using your Digital TV recorder The Library Screen Playing a Recording from a Specific Position You can play a recording from the start, the end, the last played position or from any point within the recording. 1. With the required recording highlighted, press the [oK] button. 2.

[Page 31: The Photo Viewer](#)

The Photo viewer function, allows you to view photos from devices, such as, Digital Still Camera (DSC), USB Card readers and USB Flash drives. operating the Photo Input 1. Prepare the Photo storage as follows: Digital Still Camera: Set up according to the instructions for "connecting to PC" in the camera's User's manual.

[Page 32](#) Using your Digital TV recorder The Photo Viewer Switch on Photo Viewer... Move to next picture... Move to previous picture... Change to slide show mode... Change to next folder on the USB device... Exit Photo Viewer... note: • Whilst operating the Photo Viewer function the control banner may disappear from the bottom of the screen. Press any other button on the remote control for it to reappear.

[Page 33: The Main Menu](#)

Access the Main Menu... Highlight an option... Select an option... Adjust an option's settings... Go back a step... Exit the Main Menu... Edit Channel List Settings Hide Channels General Settings Accessibility Sort Channels Settings DTR Settings Dolby Settings Network settings note: •...

[Page 34: Main Menu Options](#)

Using your Digital TV recorder Main Menu options Edit Channel List Menu • Hide Channels Allows you to hide unwanted channels. Press the [oK] button to select a channel to hide. • Sort

Channels Allows you to rearrange the channel order. Press the [OK] button to select the channel you wish to move.

[Page 35](#) Display Allows you to change the front panel display. The following options are available: 1. normal <default>. The front panel display will show information about the DTT/Radio channel currently being watched or listened to. It also displays symbols such using the Digital TV recorder functions. The clock will be displayed when in Standby. 2.

[Page 36](#) Using your Digital TV recorder Main Menu options Auto Delete You can set the Digital TV recorder to automatically delete recorded programmes, the options available are Oldest, Oldest Played or Never. Programmes will only be deleted when there is not enough hard disk space available for new recordings. Default setting is Never.

[Page 37](#) 3. Dolby Surround. Select this option if connecting to a TV/Amplifier that supports Dolby Surround Pro Logic, Dolby Pro Logic II, Dolby Pro Logic IIx or Dolby Pro Logic IIz decoding. - All outputs will carry Stereo (with Dolby Surround). 4. Stereo. Select this mode if connecting to a Stereo audio device. - All outputs will carry Stereo (without Dolby Surround).

[Page 38: Parental Control Menu](#)

Using your Digital TV recorder Main Menu options 2. Manual. Allows you to manually change your IP settings (for advanced users only). Use the [/ / /] buttons to navigate through the table and enter your own numbers using the [0] - [9] buttons.

[Page 39](#) Allows you to upgrade your Digital TV recorder using a USB Flash drive connected to the USB socket. To upgrade, follow these instructions; 1. Download the upgrade file from the www.toshiba.co.uk/tv-dvd-support website. 2. Transfer the file to the root directory of your USB Flash drive. 3. Plug your USB Flash drive into the USB socket. 4. Select USB Software Upgrade from the Service menu.

[Page 40: Additional Information](#)

Additional Information Programming the Remote Control The Digital TV recorder's remote control can be programmed to operate certain TVs. Follow the procedure below to programme the remote control. TV standby button 0-9 buttons AD button GUIDE button 1. Find the 3 digit code for your brand of TV from the brand codes, starting on page 46. note: •...

[Page 41: Manual Programming The Remote Control](#)

Manual Programming the Remote Control If your TV brand is not included in the code list, or the brand codes in the list do not operate your TV, it may still be possible to programme the remote control to operate your TV. 1.

[Page 42: Troubleshooting](#)

Additional Information Troubleshooting Should you experience a problem with your Digital TV recorder which can't be resolved using the table below, put the unit into Standby mode, then unplug completely from the mains supply. Leave the unit unplugged for at least one minute before connecting again to the mains supply.

[Page 43](#) Remote control does not work Recording Problem Digital TV recorder does not record Toshiba Website: Toshiba Helpline: note • In the event your product is returned to our service centre, we are unable to guarantee your recordings will be maintained.

[Page 44: Specifications](#)

Additional Information Specifications Physical Specification Size Weight Power Requirements Input voltage DC jack connector Power consumption (On) Power consumption (STBY) Operating temperature Storage temperature Twin Tuners RF input / output connectors Channel coverage Demodulator Modulation Video Decoder Video decoding Video formats Audio Decoder Audio decoding Audio mode...

[Page 45: Photo Viewer](#)

Video output Audio output Audio line out Data Connectors Front of unit USB port Rear of unit USB port LAN port Media Storage Device SATA HDD (Hard Disk Drive) Photo Viewer Supported formats Supplied Accessories Remote control Batteries (2xR3/AAA) Owner's manual Design and specifications are subject to change without notice. All information correct at time of going to

press.

[Page 46: Remote Control Brand Codes](#)

Additional Information Remote Control Brand Codes Use the brand codes in the following list when programming the remote control to operate your TV (refer to page 40). TV Brand List
Brand Code(s) Aiwa: 035, 112, 114, 163 Alba: 001, 004, 010, 029, 031, 034, 046, 048, 055, 060, 065, 072, 087, 109, 116, 136 Baird: 009, 010, 016, 026 Beko: 166, 167, 168...

[Page 47](#) 001, 003, 004, 005, 009, 013, 015, 016, 017, 022, 023, 037, 069, 074, 075, 085, 099, 102, 119, 120, 121, 134, 136, 137, 138, 142, 144, 148, 152, 169, 172 HDR5010 User Guide.indb 47 Remote Control Brand Codes Pioneer: 002, 016, 019, 020, Toshiba: 038, 062, 071, 076, 000, 001, 002, 003, 004, 006, 007, 008, 012, 013, 016, 019, 024, 035, 059, 062, 075, 096, 103, 105, 116, 118, 141, 150, 22/07/2010 10:38...

[Page 48](#) U-MAN-002-08 71-800-044-10 HDR5010 User Guide.indb 48 22/07/2010 10:38...

This manual is also suitable for:

Hdr5010kb