

Using Your Digital Tv Recorder; Everyday Use - Toshiba HDR5010 Owner's Manual

Freeview hd tv recorder

1
2
3
4
5
6
Table Of Contents
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Using your Digital TV recorder



Everyday Use

Changing channels

Type in the channel number using the [0]-[9] buttons. Alternatively, press the [Ch+] and [Ch-] buttons to select the next/previous channel.

Channel hopping

Press the [] button to return to the previous channel watched. Hop between the current and previous channel watched

Adjusting the volume*

Press the [+] and [



Muting the sound*

Press the [] button to mute the sound. Press again to restore.

Displaying Digital Text

Press the [TEXT] button to display digital text (if available). Press again to exit digital text.

Displaying subtitles

Press the [SUB] button to display subtitles (if available). Press again to switch off the subtitles.

Audio Description

Audio Description is a spoken explanation that describes all important information on a programme, such as body language, facial expressions, scenery, action, costumes or anything that helps to describe the plot of the story, event or image.

Press the [AD] button to switch on the Audio Description (If available from the broadcaster). Press again to switch off the Audio Description.

Switching between TV and Radio channels

The Digital TV recorder stores all the Digital TV channels together and all the Digital Radio channels together. Press the [TV/RAD] button to switch between Digital TV and Digital Radio channels.

When you are listening to a radio channel, the screen saver will automatically start if you do not press any button for a few minutes. Alternatively, press the [SAVER] button to display the screen saver right away. To remove the screen saver, press any button on the remote control.

Switching between DTT, HDMI 1-2 or USB

While watching Digital TV programmes you can use the [DTT], [HDMI 1], [HDMI 2] or [USB] buttons to select the input mode.

note:

- When listening to TV programmes with Audio Description enabled, Dolby Digital sound is not available.

- HDMI pass through is only available when the unit is powered out of Standby and using HDMI output from this unit.

*The remote control must first be programmed to operate your TV. Refer to page 40.

16

HDR5010 User Guide.indb 16

-] buttons to increase/decrease the volume.

22/07/2010 10:38

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
13
14
15
16
17
18
19
20

Quick Links:

[Getting Started](#)

[Overview of the Digital Tv Recorder](#)

[Overview of the Remote Control](#)

[Connecting Your Digital Tv Recorder](#)

[Troubleshooting](#)

Related Manuals for Toshiba HDR5010

[DVR Toshiba HDR5010KB Owner's Manual](#)

Toshiba hdr5010kb digital tv recorder owner's manual (48 pages)

[DVR Toshiba HDR5010KB Quick Start Manual](#)

(2 pages)

[TV Receiver Toshiba HDR5010KB Quick Start Manual](#)

Digital tv recorder (2 pages)

[DVR Toshiba DVS32-240-2T Software Manual](#)

Xvs - dvs - hvs digital video recorder (105 pages)

[DVR Toshiba HDS-M5200 series User Manual](#)

Stand alone digital video recorder (103 pages)

[DVR Toshiba SURVEILLIX KV-KLR Operation Manual](#)

(124 pages)

[DVR Toshiba Surveillix IPSe8-X Software Manual](#)

Ipse, nvspro network video recorder (96 pages)

[DVR Toshiba D-VR3SU Service Manual](#)

Dvd video recorder/video cassette recorder (217 pages)

[DVR Toshiba D-R410KU Owner's Manual](#)

D-r410ku user's guide (101 pages)

[DVR Toshiba DR570KU Owner's Manual](#)

Dr570ku user's guide (118 pages)

[DVR Toshiba D-VR7KC2 Owner's Manual](#)

Dvd video recorder / video cassette recorder (109 pages)

[DVR Toshiba D-RW2SU Owner's Manual](#)

(157 pages)

[DVR Toshiba D-R420KU Owner's Manual](#)

D-r420ku user's guide (103 pages)

[DVR Toshiba DR430KU Owner's Manual](#)

Dr430ku user's guide (103 pages)

[DVR Toshiba RD-XS32SU Owner's Manual](#)

Hdd/dvd video recorder (179 pages)

[DVR Toshiba RD-XS35SU Service Manual](#)

Hdd/dvd video recorder (53 pages)

Related Content for Toshiba HDR5010

[surveillix KV-PCDVR Digital Video Recorder](#)

Toshiba surveillix KV-PCDVR

[XS35 - RD - DVDr Operating A Tv With The Remote Control Of This Recorder](#)

Toshiba XS35 - RD - DVDr

[D-R2S Operating A Tv With The Remote Control Of This Recorder](#)

Toshiba D-R2S

[D-KR4 Operating A Tv With The Remote Control Of This Recorder](#)

Toshiba D-KR4

[Symbio 160HD4 Using The Tv Remote Control To Operate The Symbio Avhd Recorder](#)

Toshiba Symbio 160HD4

[Surveillix XVR16-120-X Digital Video Recorder](#)

Toshiba Surveillix XVR16-120-X

[RD-XS35SC Operating A Tv With The Remote Control Of This Recorder](#)

Toshiba RD-XS35SC

[RD-85DTSB Turn On The Recorder](#)

Toshiba RD-85DTSB

This manual is also suitable for:

[Hdr5010kb](#)