

Remote Control Brand Codes - Toshiba HDR5010 Owner's Manual

Freeview hd tv recorder

1
2
3
4
5
6
Table Of Contents
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Additional Information



Remote Control Brand Codes

Use the brand codes in the following list when programming the remote control to operate your TV (refer to page 40).

TV Brand List

Brand

Code(s)

Aiwa:

035, 112, 114, 163

Alba:

001, 004, 010, 029,

031, 034, 046, 048,

055, 060, 065, 072,

--	--	--	--	--



087, 109, 116, 136

Baird:

009, 010, 016, 026

Beko:

166, 167, 168

Bush:

001, 004, 026, 029,

031, 035, 037, 043,

048, 055, 056, 072,

083, 087, 108, 109,

116, 136, 160

Ferguson:

010, 016, 024, 038,

043, 065, 084, 098,

136

Fidelity:

035, 055, 059, 062,

076, 078

Goodmans:

002, 003, 004, 009,

029, 031, 035, 043,

055, 056, 072, 074,

083, 084, 086, 088,

100, 102, 108, 109,

116, 127, 133, 136,

141, 160, 162, 172

Grundig:

001, 004, 008, 024,

065, 072, 079, 083,

088, 100, 111, 115

46

HDR5010 User Guide.indb 46

Brand

Code(s)

JVC:

001, 008, 012, 029,

055, 060, 075, 091,

105, 106, 111

LG:

007, 015, 022, 083,

103, 116, 117, 153

Loewe:

011, 040, 076, 101,

107

Logik:

001, 002, 007, 009,

055, 133

Matsui:

001, 002, 003, 004,

009, 021, 024, 026,

031, 043, 046, 048,

055, 063, 065, 068,

072, 083, 086, 099,

116, 136

ManualsLib.com

Thorn:

003, 004, 009, 010,
014, 016, 035, 043,
074, 076, 079
22/07/2010 10:38



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
43
44
45
46
47
48

Quick Links:

[Getting Started](#)

[Overview of the Digital Tv Recorder](#)

[Overview of the Remote Control](#)

[Connecting Your Digital Tv Recorder](#)

[Troubleshooting](#)

Related Manuals for Toshiba HDR5010

[DVR Toshiba HDR5010KB Owner's Manual](#)

Toshiba hdr5010kb digital tv recorder owner's manual (48 pages)

[DVR Toshiba HDR5010KB Quick Start Manual](#)

(2 pages)

[TV Receiver Toshiba HDR5010KB Quick Start Manual](#)

Digital tv recorder (2 pages)

[DVR Toshiba DVS32-240-2T Software Manual](#)

Xvs - dvs - hvs digital video recorder (105 pages)
[DVR Toshiba HDS-M5200 series User Manual](#)

Stand alone digital video recorder (103 pages)
[DVR Toshiba SURVEILLIX KV-KLR Operation Manual](#)

(124 pages)
[DVR Toshiba Surveillix IPSe8-X Software Manual](#)

Ipse, nvspro network video recorder (96 pages)
[DVR Toshiba D-VR3SU Service Manual](#)

Dvd video recorder/video cassette recorder (217 pages)
[DVR Toshiba D-R410KU Owner's Manual](#)

D-r410ku user's guide (101 pages)
[DVR Toshiba DR570KU Owner's Manual](#)

Dr570ku user's guide (118 pages)
[DVR Toshiba D-VR7KC2 Owner's Manual](#)

Dvd video recorder / video cassette recorder (109 pages)
[DVR Toshiba D-RW2SU Owner's Manual](#)

(157 pages)
[DVR Toshiba D-R420KU Owner's Manual](#)

D-r420ku user's guide (103 pages)
[DVR Toshiba DR430KU Owner's Manual](#)

Dr430ku user's guide (103 pages)
[DVR Toshiba RD-XS32SU Owner's Manual](#)

Hdd/dvd video recorder (179 pages)
[DVR Toshiba RD-XS35SU Service Manual](#)

Hdd/dvd video recorder (53 pages)

Related Content for Toshiba HDR5010

[HDR5010KB Inserting The Batteries Into The Remote Control](#)

Toshiba HDR5010KB

[D-KVR20KU Installing The Batteries In The Remote Control](#)

Toshiba D-KVR20KU

[RD-XS35SU Remote Control](#)

Toshiba RD-XS35SU

[RD-XS32SB Remote Control](#)

Toshiba RD-XS32SB

[RD-XS52SU Preparation Of The Remote Control](#)

Toshiba RD-XS52SU

[HDS-M5200 series Using A Remote Control](#)

Toshiba HDS-M5200 series

[DR420KU Remote Control](#)

Toshiba DR420KU

[DR430KU Remote Control](#)

Toshiba DR430KU

This manual is also suitable for:

[Hdr5010kb](#)