



Asus AiGuru U1 User Manual

Usb phone for skype

1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38

--

•


[Table of Contents](#)

•


Bookmarks

[Download this manual](#)

Quick Links

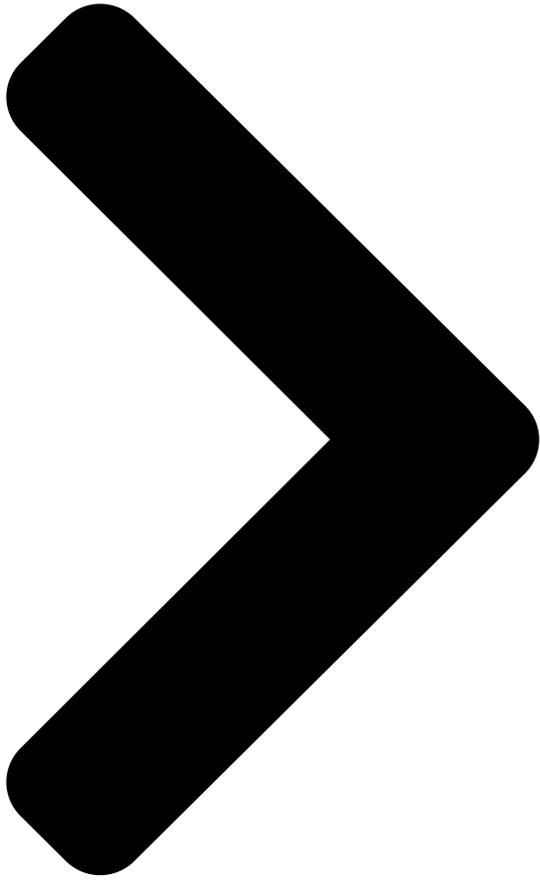

ASUS[®]
AIGuru U1
USB Phone for

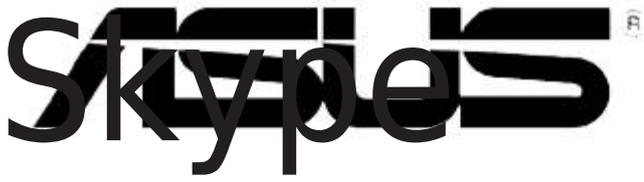

User Manual

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus AiGuru U1

[Laptop Asus U1E Hardware User Manual](#)

Asus u1e: user guide (91 pages)

[Telephone Asus AiGuru U1 Quick Start Manual](#)

(56 pages)

[Telephone Asus AiGuru S2 Manual](#)

Wireless skype phone (106 pages)

[Telephone Asus Eee Videophone AiGuru SV1T User Manual](#)

Internet video phone (34 pages)

[Telephone Asus ZD553KL Service Manual](#)

(55 pages)

[Telephone Asus ASUS_Z01FD User Manual](#)

(54 pages)

[Telephone Asus ZB551KL Training & Trouble Shouting Manual](#)

Board level (69 pages)

[Telephone Asus X007D User Manual](#)

(86 pages)

[Telephone Asus Zenfone Z01KD User Manual](#)

(28 pages)

[Telephone Asus E9995 User Manual](#)

(29 pages)

[Telephone Asus AiGuruSV1T User Manual](#)

Internet video phone (34 pages)

[Telephone Asus ROG ZS660KL User Manual](#)

(92 pages)

[Telephone Asus P320 Service Manual](#)

(33 pages)

[Telephone Asus ZB553KL User Manual](#)

(106 pages)

[Telephone Asus Go ZB500KL User Manual](#)

(32 pages)

Summary of Contents for Asus AiGuru U1

[Page 1](#) AiGuru U1 USB Phone for Skype User Manual...

[Page 2](#) Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification of alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing. ASUS PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY...

[Page 3](#) For your safety and to keep your phone in good operating condition, read the following tips and reminders carefully before using your phone. Always keep the phone dry and free from dust. Refer phone servicing only to qualified personnel. Use only approved accessories. Do not connect incompatible products or devices.

[Page 4: Table Of Contents](#)

Phone layout ...1-2 Chapter 2: Installing the utility and connecting the phone Installing the AiGuru U1 utility ...2-2 Requirements for installing the AiGuru U1 utility ...2-2 Running the support CD ...2-2 Installing Skype™ ...2-3 Installing AiGuru U1 utility ...2-4 Connecting U1 to your PC ...2-7 Connecting U1 to Eee PC Windows Standby mode ...2-10...

[Page 5: Contents](#)

Setting the ringtone...3-6 Appendix: Reference information Notices...A-2 Safety statements ...A-3 FAQ ...A-5 ASUS contact information ...A-7...

[Page 6: About This Guide](#)

This user guide contains the information you need to use your AiGuru U1 USB phone for Skype. How this guide is organized This user guide contains the following parts: Chapter 1: Basic information • This chapter introduces the phone layout.

[Page 7](#) To make sure that you perform certain tasks properly, take note of the following conventions used throughout this user guide. NOTE: Tips and information to aid in completing a task. IMPORTANT: Instructions that you MUST follow to complete a task. CAUTION: Information to prevent injury to yourself when trying to complete a task.

[Page 8: Welcome](#)

Enjoy ASUS AiGuru U1 USB Phone for Skype! ASUS AiGuru U1 USB Phone for Skype gives you all the functionality of a regular phone, through Skype . With the Skype application running on your PC, your Skype contact list is displayed on the U1 screen.

[Page 9: Specifications](#)

Dimension Weight Display LCD backlight Power supply Operation mode USB port Socket and connector Audio Speaker frequency response Microphone frequency response Internet connection* Features *We recommend a broadband connection. Voice quality may vary depending on the connection speed. 122 (L) x 40 (W) x 11.8 (H) mm 70 g 1.3 inch 128 x 64 Dot Matrix STN-LCD White color...

[Page 10](#) OS support Numeric keys End key Call key Navigation keys Right soft key Left soft key MTBF 24,000 hours Confirming to the Green ASUS regulations AiGuru U1 utility Skype™ software Windows XP 32 bit / Windows ® Vista™ 32 bit ®...

[Page 11: Chapter 1: Basic Information](#)

Chapter 1 Chapter 1: Basic information This chapter introduces the phone layout.

[Page 12: Phone Layout](#)

Front view Back view Chapter 1: Basic information...

[Page 13](#) End key. Press to stop an incoming call or cancel a call you are dialing. Press to return to the standby mode. Right soft key. Press to perform the function currently displayed on the bottom right corner of the screen. Buzzer. ASUS AiGuru U1 USB Phone for Skype...

[Page 14](#) Chapter 1: Basic information...

[Page 15: Chapter 2: Installing The Utility And Connecting The Phone](#)

Chapter 2 Chapter 2: Installing the utility and connecting the phone This chapter describes how to install Skype™ and the U1 drivers/utilities and how to connect the phone to your PC.

[Page 16: Installing The Aiguru U1 Utility](#)

For Eee PC Windows U1 to your Eee PC Windows Before using your AiGuru U1 USB phone for Skype, install Skype™ as well as the AiGuru U1 drivers/utilities from the support CD. These programs allow you to optimize your phone features.

[Page 17: Installing Skype](#)

When installation is completed, click Start Skype to launch the Skype™ program on your PC. If you do not have a Skype account, you may create one. If you already have an account, sign yourself in. ASUS AiGuru U1 USB Phone for Skype...

[Page 18: Installing Aiguru U1 Utility](#)

From the main screen, click Install AiGuru U1 Utility. Click Next or click Change to assign a folder location and then click Next. The InstallShield Wizard will guide you through the installation. Click Next. If you want to create a shortcut on the desktop, check the box and click Next.

[Page 19](#) If you use Windows The audio configuration window appears. A green check marks the currently used playback device. ASUS AiGuru U1 USB Phone for Skype Connect U1 to your computer and select a playback device you frequently use. Vista™, follow step 6 to 9. If not, go to step 10.

[Page 20](#) The selected device is marked by a green check. Click OK. The AiGuru U1 Utility icon will appear on your desktop. The U1 icon with a cross will also appear on the notification area to indicate that U1 is not yet connected to your PC.

[Page 21: Connecting U1 To Your Pc](#)

After installing Skype™ and AiGuru U1 Utility, you may connect the phone to your PC. To connect U1 to your PC: Plug U1 into any USB ports on your PC. The ASUS logo appears on the U1 screen to indicate that the phone is activated.

[Page 22: Connecting U1 To Eee Pc Windows ® Xp Edition](#)

Skype application. Enter your Skype name and password to sign in. Plug U1 into any USB ports on your Eee PC. The ASUS logo appears on the U1 screen to indicate that the phone is activated, and the U1 icon appears on the Eee PC notification area.

[Page 23](#) Help: Select to open an electronic version of • the user manual. Exit: Select to deactivate the phone. • If you connect U1 to the computer without signing in Skype™, the U1 screen shows the following: ASUS AiGuru U1 USB Phone for Skype ®...

[Page 24: Standby Mode](#)

When your phone is activated but not in use, it is in standby mode. Skype status Press the left soft key to enter menu options 2-10 Chapter 2: Installing the utility and connecting the phone Skype credits Account name Press the right soft key to display Skype contact list...

[Page 25: Chapter 3: Using Aiguru U1](#)

Chapter 3 Chapter 3: Using AiGuru U1 This chapter provides instructions on how to use the phone with its menus.

[Page 26: Making A Call](#)

If your contact is offline, you will see this message: The Contacts menu appears. Press the left soft key (Enter) to enter your contact list. Press the Call key to call the contact. To cancel the call, press the End key. Chapter 3: Using AiGuru U1...

[Page 27: Making A Skypeout Call](#)

Press the Call Key to connect the call after you finish dialing the number. If there are not enough credits in your SkypeOut account, you cannot make a SkypeOut call and will see this message: ASUS AiGuru U1 USB Phone for Skype and enter the number you want...

[Page 28: Answering A Call](#)

U1 microphone. Press the key again (Un- Mute) to enable the microphone. Volume up/down: Press the up/down navigation • keys to adjust the receiver volume. Terminating a call the End key to terminate a call. Press the Chapter 3: Using AiGuru U1...

[Page 29: Call Logs](#)

You can also enter the Outgoing Calls log by pressing the Call key from the standby mode. If you have a Skype Voicemail account, check your voicemail using the Skype application running on your PC and listen to it with U1. ASUS AiGuru U1 USB Phone for Skype y mode. mode.

[Page 30: Setting The Ringtone](#)

Press the up/down navigation key to select a ringtone from Silence and Ringtone #1 to Ringtone #9. Press the left soft key (Save) to apply your choice or press the right soft key (Back) to keep the original setting. Chapter 3: Using AiGuru U1...

[Page 31: Reference Information](#)

Appendix Appendix: Reference information This chapter includes safety notices, FAQ, and ASUS contact information.

[Page 32: Appendix: Reference Information](#)

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

[Page 33: Safety Statements](#)

- You can connect the USB charger or USB data cable to the device in only one orientation. Incorrect insertion of the cable connector may cause short circuiting and may damage the device. ASUS AiGuru U1 USB Phone for Skype...

[Page 34](#) Proper Disposal The symbol of the crossed out bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulations for disposal of electronic products. Appendix: Reference information...

[Page 35: Faq](#)

This section provides solutions to problems that may occur or questions commonly encountered during the installation and operation of ASUS AiGuru U1 USB Phone for Skype. Read the Q&As below to solve your problems. If you cannot find an answer here, check the ASUS contact information at the end of the user manual.

[Page 36](#) U1? Go to Skype → Tools → Options → Advanced → Advanced Settings. Click Manage other programs' access to Skype. Select the AiGuru U1 icon and click Change. Select Allow this program to use Skype and click OK.

[Page 37: Asus Contact Information](#)

Motherboard and General Product Support E-mail Telephone ASUS COMPUTER GmbH (Germany and Austria) Technical Support Hotline (MB/Others) Notebook Email Website ASUS AiGuru U1 USB Phone for Skype 0800-093-456 (Toll-free call from Taiwan only) +886-2-2895-9254 <http://vip.asus.com/eservice/techserv.aspx> <http://taiwan.asus.com.tw> +886-2-2894-3447 +886-2-2890-7698 <http://vip.asus.com/eservice/techserv.aspx> <http://www.asus.com> <http://vip.asus.com/eservice/techserv.aspx>...

[Page 38](#) ASUS Holland B.V. (Netherlands) Notebook Hotline Email ASUS COMPUTER (China) Telephone Email +31-(0)591-668190 +31-(0)591-666853 <http://vip.asus.com/eservice/techserv.aspx> (Notebook, MB, VGA only) +86-10-82667575 <http://vip.asus.com.cn/eservice/techserv.aspx> Appendix: Reference information...