



# Chapter 2: Bios Information; Knowing Bios - Asus PRIME H510M-A R2.0 Manual



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34

--

---

•

[Table of Contents](#)

•

## Bookmarks







# BIOS Information

## 2.1

### Knowing BIOS

The new ASUS UEFI BIOS is a Unified Extensible Interface that complies with UEFI architecture, offering a user-friendly interface that goes beyond the traditional keyboard-only BIOS controls to enable a more flexible and convenient mouse input. You can easily navigate the new UEFI BIOS with the same smoothness as your operating system. The

term "BIOS" in this user manual refers to "UEFI BIOS" unless otherwise specified.

BIOS (Basic Input and Output System) stores system hardware settings such as storage device configuration, overclocking settings, advanced power management, and boot

device configuration that are needed for system startup in the motherboard CMOS. In normal circumstances, the default BIOS settings apply to most conditions to ensure optimal performance. DO NOT change the default BIOS settings except in the following

circumstances:

An error message appears on the screen during the system bootup and requests you

•  
to run the BIOS Setup.

You have installed a new system component that requires further BIOS settings or

•  
update.



Inappropriate BIOS settings may result to instability or boot failure. We strongly recommend that you change the BIOS settings only with the help of a trained service personnel.

BIOS settings and options may vary due to different BIOS release versions. Please refer to the latest BIOS version for settings and options.

For more information on BIOS configurations, please refer to <https://www.asus.com/support>, or download the BIOS manual by scanning the code.

PRIME H510M-A R2.0

# 2



2-1

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
20  
21  
22  
23  
24  
25  
26  
27

## Related Manuals for Asus PRIME H510M-A R2.0

[Motherboard Asus PRIME H510M-A R2.0 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H570M-PLUS Manual](#)

(36 pages)

[Motherboard Asus PRIME H510M-A WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus Prime H510M-A Manual](#)

(34 pages)

[Motherboard Asus Prime H510M User Manual](#)

(34 pages)

[Motherboard Asus PRIME H510M-A Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H510M-E Manual](#)

(32 pages)

[Motherboard Asus PRIME H510M-E Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H510M-R Manual](#)

(30 pages)

[Motherboard Asus PRIME H510M-F Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H510TS Manual](#)

(30 pages)

[Motherboard Asus PRIME H510T2-CSM R2.0 Manual](#)

(30 pages)

[Motherboard Asus H61M-K User Manual](#)

H61m-k user's manual (82 pages)

[Motherboard Asus H87-PRO User Manual](#)

H87-pro user's manual (140 pages)

[Motherboard Asus PRIME H410M-E Manual](#)

(28 pages)

[Motherboard Asus PRIME H310M-A R2.0 Manual](#)

(29 pages)

## Related Content for Asus PRIME H510M-A R2.0

[Motherboard A7N8X-VM Chapter 2: Bios Information](#)

Asus Motherboard A7N8X-VM

[PRIME H610T2-CSM D4 Chapter 2: Bios Information](#)

Asus PRIME H610T2-CSM D4

[PRIME H310M-A R1.0 Chapter 2: Bios Information](#)

Asus PRIME H310M-A R1.0

[H110M-P/DVI Chapter 2: Bios Information](#)

Asus H110M-P/DVI

[EX-B660M-V5 D4 Chapter 2 Bios Information](#)

Asus EX-B660M-V5 D4

[PRIME H610M-E Chapter 2: Bios Information](#)

Asus PRIME H610M-E

[PRIME H610I-PLUS Chapter 2: Bios Information](#)

Asus PRIME H610I-PLUS

[PRIME H370M-PLUS Chapter 2: Bios Information](#)

Asus PRIME H370M-PLUS