

Asus AAEON NIM-S13C Quick Installation Manual

Network interface module

```
2
3
4
5
6
7
8
9
10
Table Of Contents
11
12
13
14
```

ΤQ			
19			
20			
21			
22			
23			
(

•



Download this manual	Quick Links	



NIM-S13C

Network Interface Module

Quick Installation Guide 1

Ed

Last Updated: December 9, 2016





Related Manuals for Asus AAEON NIM-S13C

Recording Equipment Asus samplepad pro User Manual

(45 pages)

Recording Equipment Asus LSI 896 Manual

Ultra2 scsi, ultra 160 scsi (20 pages)

Summary of Contents for Asus AAEON NIM-S13C

<u>Page 1</u> NIM-S13C Network Interface Module Quick Installation Guide 1 Last Updated: December 9, 2016...

<u>Page 2</u> Copyright Notice This document is copyrighted, 2016. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer.

<u>Page 3</u> Acknowledgement All other products' name or trademarks are properties of their respective owners. Microsoft Windows is a registered trademark of Microsoft Corp. \square Intel, Pentium, Celeron, and Xeon are registered trademarks of Intel Corporation \square Core, Atom are trademarks of Intel Corporation \square ...

<u>Page 4</u> Packing List Before setting up your product, please make sure the following items have been shipped: Item Quantity NIM-S13C [] If any of these items are missing or damaged, please contact your distributor or sales representative immediately. Preface...

<u>Page 5</u> About this Document This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product. Users may refer to the AAEON.com for the latest version of this document.

<u>Page 6</u> Safety Precautions Please read the following safety instructions carefully. It is advised that you keep this manual for future references All cautions and warnings on the device should be noted. Make sure the power source matches the power rating of the device. Position the power cord so that people cannot step on it.

<u>Page 7</u> If any of the following situations arises, please the contact our service personnel: Damaged power cord or plug Liquid intrusion to the device iii. Exposure to moisture Device is not working as expected or in a manner as described in this manual The device is dropped or damaged Any obvious signs of damage displayed on the device...

<u>Page 8</u> FCC Statement This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

<u>Page 10</u> China RoHS Requirement (EN) Poisonous or Hazardous Substances or Elements in Products AAEON Main Board/ Daughter Board/ Backplane Poisonous or Hazardous Substances or Elements Hexavalent Polybrominated Polybrominated Component Lead Mercury Cadmium

Chromium Biphenyls Diphenyl Ethers (Pb) (Hg) (Cd) (Cr(VI)) (PBB) (PBDE) PCB &...

Page 11: Table Of Contents

Table of Contents Ch	apter 1 - Product Specific	ations1 S	pecifications2)
Chapter 2 - Hardware	e Information	3 Dimensions	4 Jumpers and	
Connectors	6 List of Connectors	8 2.3.1 SFP	PORT Connector (CN6 -	
CN9) 9 2.3.1.	1 Standard SPF Pin Defini	tion		

Page 12: Chapter 1 - Product Specifications

Chapter 1 Chapter 1 - Product Specifications...

Page 13: Specifications

Specifications Main 1G LAN module Form Factor \square Intel ® 82580EB ethernet controller x 1 Main Chipset \square PCIe [x4] Host Interface \square SFP 1 GbE connector x 4 LAN Port \square Bypass \square LED x 4 for Active/Link Indicator \square ...

Page 14: Chapter 2 - Hardware Information

Chapter 2 Chapter 2 - Hardware Information...

Page 15: Dimensions

Dimensions Component Side Chapter 2 - Hardware Information...

Page 16 Solder Side Chapter 2 - Hardware Information...

Page 17: Jumpers And Connectors

Jumpers and Connectors Component Side Chapter 2 - Hardware Information...

Page 18 Solder Side Chapter 2 - Hardware Information...

Page 19: List Of Connectors

List of Connectors Please refer to the table below for all of the board's jumpers that you can configure for your application Label Function M5 – M8 SFP CAGE SFP 1G Connector PORT1 SFP 1G Connector PORT2 SFP 1G Connector PORT3 SFP 1G Connector PORT4 Chapter 2 –...

Page 20: Sfp Port Connector (Cn6 - Cn9)

2.3.1 SFP PORT Connector (CN6 – CN9) NIM-S13C CN6 – CN9 LAN Port Array Port Function Standard SPF PIN Definition Standard SPF PIN Definition Standard SPF PIN Definition Chapter 2 – Hardware Information...

Page 21: Standard Spf Pin Definition

2.3.1.1 Standard SPF Pin Definition Signal Signal VeeT TX Fault TX Disable MOD-DEF2 MOD-DEF1 MOD-DEF0 Rate Select VeeR VeeR VeeR VccR VccT VeeT VeeT Chapter 2 - Hardware Information...

Page 22: Chapter 3 - Drivers Installation

Chapter 3 Chapter 3 - Drivers Installation...

Page 23: Driver Installation

Driver Installation The drivers can be found in the product page for NIM-S13C at aaeon.com. Please follow the sequence below to install the drivers. Step 1 – Install Ethernet Controller Drivers Select the folder of Win7_64 Open the Autorun.exe file in the folder Follow the instructions Drivers will be installed automatically Chapter 3 –...