



# About This Guide - Asus PRIME H610M-R Manual



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32

--

---

•

[Table of Contents](#)

•

## Bookmarks







## About this guide

This user guide contains the information you need when installing and configuring the motherboard.

## How this guide is organized

This guide contains the following parts:

- 

### Chapter 1: Product Introduction

This chapter describes the features of the motherboard and the new technology it supports. It includes descriptions of the switches, jumpers, and connectors on the

motherboard.

•

## Chapter 2: BIOS Information

This chapter tells how to boot into the BIOS and upgrade BIOS using the EZ Flash Utility.

## Where to find more information

Refer to the following sources for additional information and for product and software

updates.

1.

### ASUS website

The ASUS website provides updated information on ASUS hardware and software products. Refer to the ASUS contact information.

2.

### Optional documentation

Your product package may include optional documentation, such as warranty flyers,

that may have been added by your dealer. These documents are not part of the standard package.

## Conventions used in this guide

To ensure that you perform certain tasks properly, take note of the following symbols used

throughout this manual.

**CAUTION:** Information to prevent damage to the components and injuries to yourself when trying to complete a task.

**IMPORTANT:** Instructions that you **MUST** follow to complete a task.

**NOTE:** Tips and additional information to help you complete a task.

v

[Previous Page](#)  
[Next Page](#)

1  
2  
3  
4  
5  
6  
7  
8  
9

## Related Manuals for Asus PRIME H610M-R

[Motherboard Asus PRIME H610M-R Quick Start Manual](#)

(2 pages)

[Motherboard Asus Prime H610M-R D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-E D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-K D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-K D4 ARGB Quick Start Manual](#)

(20 pages)

[Motherboard Asus PRIME H610M-A D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-D D4 Manual](#)

(32 pages)

[Motherboard Asus Pro H610M-CT D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M2 FPT Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-CS D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-A WIFI D4 Manual](#)

(36 pages)

[Motherboard Asus H610M-IM-A Manual](#)

Industrial motherboard (53 pages)

[Motherboard Asus PRIME H610M-D Instruction Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-K ARGB Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-C/PS D4 Manual](#)

(62 pages)

[Motherboard Asus PRIME H610M-E Manual](#)

(33 pages)

## Related Content for Asus PRIME H610M-R

[PRIME B760M-F D4 About This Guide](#)

[Asus PRIME B760M-F D4](#)

[PRIME A620-PLUS WIFI6 About This Guide](#)

[Asus PRIME A620-PLUS WIFI6](#)

[Z790 GAMING WIFI7 About This Guide](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series About This Guide](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI About This Guide](#)

Asus A620M-AYW WIFI

[PRIME H610T2-CSM D4 About This Guide](#)

Asus PRIME H610T2-CSM D4

[ROG RAMPAGE V EDITION 10 About This Guide](#)

Asus ROG RAMPAGE V EDITION 10

[WS X299 SAGE About This Guide](#)

Asus WS X299 SAGE