



# Toshiba RC-10IRPMY Instruction Manual



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14

• PAGE

1

OF 14 GO

•

[Table of Contents](#)

•

Bookmarks

--

[Download this manual](#)

### Quick Links







Microcomputer Induction  
Home use  
Rice Cooker  
Instruction Manual

Model  
1.0L  
RC-10IRPMY

Special purpose for AC 220-240V  
Please do not apply to power sockets other than AC 220-240V.  
Thank you for buying the Toshiba Microcomputer Induction Rice Cooker.

- This product is for household use only. (Please do not use as a commercial product.)
  - Please read the instruction manual carefully and use this product correctly and safely.
  - After reading, please keep this instruction manual in a place where you can check it at any time.
  - Please keep the manual properly.
- Please read "Important Safety Instructions" and "Please Note" (Pages 2-5) to use this product correctly and safely.

Table of Contents

[Important Safety Instructions](#) ..... 2

[Attention](#)..... 5

[Parts name](#) ..... 6

[Disassembly & assembly of detachable inner lid and steam valve](#) .....8

[Method of opening and closing upper housing](#).....9

[Display of cooking time](#) .....9

[Sound](#) .....9

[Rice cooking method](#)

[Basic procedures](#) .....10

[Key points to cook delicious rice](#).....11

[Cooking mode](#).....12

[Cooking capacity and corresponding cooking time estimation](#) .....12

[Usage and setting of MENU](#) .....14

[How to adjust the current time \(clock\)](#) .....15

[Method of pre-setting cooking time](#) .....16

[Pay attention that](#).....17

[Recipes](#) .....18

[Keep Warm](#) .....20

[Maintenance](#) .....21

[Cleaned by boiling](#) .....22

[How to deal with cooking failure](#).....23

[Error display](#).....25

[When there is the power outage](#) .....25

[Lithium batteries](#) .....25

[Specifications](#) .....26

TOSHIBA



[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba RC-10IRPMY

### [Toshiba RC-10IRPMY - 1.0L Microcomputer Induction Rice Cooker Manual](#)

(article)

#### [Rice Cooker Toshiba RC-10NMF Instruction Manual](#)

Electric rice cooker/warmer (13 pages)

#### [Rice Cooker Toshiba RC-10NMF Instruction Manual](#)

Electric rice cooker/warmer (13 pages)

#### [Toshiba RC-10NMF, RC-18NMF, RC-10NMFE, RC-18NMFE, RC-10NMFEIS, RC-18NMFEIS - Toshiba Electric Rice Cooker/Warmer Manual](#)

(article)

#### [Rice Cooker Toshiba RC-10NMFE Instruction Manual](#)

Electric rice cooker/warmer (17 pages)

#### [Rice Cooker Toshiba RC-10RHI Instruction Manual](#)

Electric rice cooker/warmer (13 pages)

#### [Rice Cooker Toshiba RC-10JR1NP Instruction Manual](#)

Mechanical rice cooker / warmer, 1.0l/1.8l type (8 pages)

#### [Rice Cooker Toshiba RC-18DR1NMY Instruction Manual](#)

Electric rice cooker (23 pages)

#### [Toshiba RC-18DR1NMY, RC-10DH1NMY, RC-18DH1NMY - ELECTRIC RICE COOKER Manual](#)

(article)

#### [Rice Cooker Toshiba RC-10JRNH Instruction Manual](#)

Toshiba mechanical rice cooker / warmer (16 pages)

#### [Rice Cooker Toshiba RC-10NAF Series Instruction Manual](#)

Electric rice cooker/warmer (24 pages)

#### [Rice Cooker Toshiba RC-10IRPH Instruction Manual](#)

Microcomputer induction rice cooker (55 pages)

#### [Rice Cooker Toshiba RC-10ISSHK User Manual](#)

Electric rice cooker (58 pages)

#### [Rice Cooker Toshiba RC-10IH1TAU\(N\) User Manual](#)

Electric rice cooker (23 pages)

#### [Rice Cooker Toshiba RC-18ISPMY Instruction Manual](#)

(14 pages)

#### [Rice Cooker Toshiba RC-18ISPH Manual](#)

(28 pages)

## Summary of Contents for Toshiba RC-10IRPMY

### [Page 1: Table Of Contents](#)

How to adjust the current time (clock) .....15 Please do not apply to power sockets other than AC 220-240V. Method of pre-setting cooking time .....16 Thank you for buying the Toshiba Microcomputer Induction Rice Pay attention that.....17 Cooker. Recipes .....18 ●...

## [Page 2: Important Safety Instructions](#)

It may cause to fire, burns, injury, or electric shock The power plug (power supply side and Toshiba doesn't assume any responsibility for the The power plug of this product can only be inserted into the body side) has been completely inserted.

## [Page 3: Attention](#)

For the purpose of preventing injury, scald, electric shock, Note electric leakage, fire and home loss. Important Safety Instructions Please observe for security. To prevent overheating For products equipped with a metal Only use the original inner pot for the steamer, the steamer should not be used For the purpose of preventing injury, scald, electric shock, rice cooker.

## [Page 4: Parts Name](#)

Parts name Power cord connection Insert the power plug Insert the power plug (body side) into the plug (power supply side) into Please clean the inner cooking pot, inner cover, steam valve and accessories before using for the first time. socket on the rear face the power socket.

## [Page 5: Disassembly & Assembly Of Detachable Inner Lid And Steam Valve](#)

Disassembly & assembly of detachable inner Method of opening and closing upper housing lid and steam valve Open the upper housing Remove the detachable inner lid Inner cover slider Push the inner cover slider to the right according to Please do not press the upper housing from above. You should just press the the arrow (the detachable inner lid leans forward).

## [Page 6: Rice Cooking Method](#)

Basic procedures Rice cooking method Connect to power cord Preparation Key points to cook delicious rice Rice mea- Use the attached measuring cup 1 plain cup = about 180ml surement 1 plain cup = about 90ml Add rice horizontal to measuring Rice Small [Correct case]...

## [Page 7: Cooking Mode](#)

Cooking mode Cooking capacity and corresponding cooking Select "cooking mode" and "water level scale" based on type The minimum capacity, maximum capacity and available cooking capacity of the water level scale of inner time estimation of cooking rice. cooking pot differ from each other. The actual cooking time will change based on rice volume, water temperature, water volume and others for about 10 minutes.

## [Page 8: Usage And Setting Of Menu](#)

Usage and setting of HEALTHY RICE Function selection method Press Press Each time when you press the RC-10IRPMY Press this shortcut button to enter the MENU button, the option light will cooking process. There is no need to flash and change in the order of press the COOK button.

## [Page 9: Method Of Pre-Setting Cooking Time](#)

Method of pre-setting cooking time Pay attention that Complete cooking within the pre-set time. If it does not fit with the current time, Confirm whether it fits with the current time "X" indicates on cooking appointment does not work during cooking appointment it is impossible to finish cooking (It may cause rice deterioration or corrosion to inner cooking pot) within the pre-set time.

## [Page 10: Recipes](#)

Recipes GABA brown rice Mixed rice Wash the sproutable rice (organic sugar rice, etc.) Ingredients (2~3 servings) and put it into the inner pot, add water to the corresponding level (recommended maximum White rice 150g amount of rice is 5 cups of organic brown rice). 150g Black rice, oat, millet Select GABA RICE and press COOK to enter the cooking...

## [Page 11: Keep Warm](#)

Keep Warm Maintenance It will automatically change to the heat Please An unpleasant odor will produce due to inappropriate To keep the rice tasty during heat preservation, it will note preservation mode after cooking. cleaning process. automatically control the heat preservation temperature based on using conditions.

### [Page 12: Cleaned By Boiling](#)

How to deal with cooking failure If any unpleasant odor detected, please use this method  
Cleaned by boiling (about once a week) for cleaning Place water in inner cooking pot and close the outer cover. Please check before applying for repair. If the reason cannot be found out after investigation, please consult with the store (To 1 in the water level scale of "White Rice") where you buy the electric cooker.

### [Page 13: Error Display](#)

How to deal with cooking failure This time Investigate the reasons (reference page) Please check before applying for repair. Whether the detachable inner lid has been installed well? If the detachable inner lid is Difficult to close not installed, the upper housing cannot be closed to prevent forgetting the installation of Investigate the reasons (reference page) This time Impossible to close...

### [Page 14: Specifications](#)

Weight (Cooking) Warm) frequency (rice volume) length Length Width Height 220-240V~  
Average RC-10IRPMY 1000W 3.0L 31.5 24.2 22.0 5.1kg 50/60Hz Please use under regularly confirming of "Important Safety Instructions" and "Notes". Check electric cookers Wrong using method and long-time use will deteriorate spare parts due to...