

Asus Vulcan Pro - Active Noise-Canceling Gaming Headset Manual

Contents

- 1 Package contents
- 2 Getting to know your headset
- 3 Specification summary
- 4 Wearing your headset
- 5 Installing the battery
- 6 Connecting the microphone and the audio cable
- 7 Activating the noise-canceling function
- 8 Using your headset with the ROG Spitfire
- 9 Using Gaming / Surround / Amp modes on ROG Spitfire
- 10 Storing your headset
- 11 Documents / Resources
 - 11.1 Download manual

Package contents

The headset will not work if the ANC feature is turned on without a battery installed.

- 1 x ROG Vulcan Pro headset
- 1 x Audio cable

- 1 x AAA battery
- 1 x ROG Spitfire
- 1 x Microphone
- 1 x Quick Start Guide
- 1 x Protective case
- 1 x Cable organizer

Getting to know your headset

- 1. Adjustable headband Allows you to adjust the headset for a snug fit on your head.
- 2. Ear cups Provides you with an enhanced audio experience.
- 3. Battery cover Contains the battery slot.
- Battery cover button
 Push this button to open the battery cover.
- Active Noise Cancellation switch Allows you to turn on/off the active noise cancellation control function.
- 6. Audio port Connect the audio cable jack to this port.
- 7. Microphone port

Connect the microphone to this port.

8. Microphone

Insert the microphone into the microphone port for two-way communication.

- 9. Audio cable jack Insert the audio cable jack into the audio port on the headset.
- 10. Pocket clip

Allows you to clip the headset adapter on your pocket.

- 11. Volume control Allows you to increase/decrease the volume.
- 12. Mute control Allows you to put the microphone on mute mode.
- Headphone jack (Green)
 Insert the headphone jack to the headphone port of an audio device.
- Microphone jack (Red) Insert the microphone jack to the microphone port of an audio device.
- Cable management system Allows you to easily hide and secure the cable for tangle-free storage.
- 16. Gaming button Press the Gaming button to enable/disable the gaming mode.
- Surround button
 Press the Surround button to enable/disable the surround sound.

18. Amp button

Press the Amp button to enable/disable the headphone amplifier.

- 19. Headphone port Connect the headphone cable to this port.
- 20. Microphone port Connect the microphone cable to this port.

Specification summary

Driver: 40mm neodymium Impedance: 32 ohms Frequency range: 10~20 Khz ANC (Active noise cancellation) performance: Maximum >15dB; Effective Bandwidth >600Hz PNC (Passive noise cancellation) performance: Maximum >30dB Battery life: Up to 40 hours (with one AAA battery) Dimension (mm): 206 mm x 196 mm (H x W) Weight: 325g

Wearing your headset

NOTE: There are L and R markings on the ear cups.

To wear your headset

- Adjust the headband so it fits snugly on your head.
- Adjust the ear cups so it fits comfortably around your ears.

• Move the volume control to increase/decrease the volume.

Installing the battery

To install the battery

- 1. Turn off the ANC switch.
- 2. Push the battery cover button to open and remove the battery cover.
- 3. Install one AAA battery in the battery slot.
- 4. Replace the battery cover.

NOTE: Remove the battery if you are not going to use your headset for a long time.

Connecting the microphone and the audio cable

To connect the microphone

Connect the microphone to the headset's microphone port on the left ear cup.

To connect the audio cable

- 1. Connect the audio cable to the headset's audio port on the left ear cup.
- 2. Connect the audio cable's headphone and microphone

connectors to your computer's headphone and microphone ports.

Activating the noise-canceling function

The noise-canceling function removes ambient noise such as background noise for a clearer sound quality.

To activate the noise-canceling function Press the Active Noise Cancellation button on the left ear cup to activate the noise-canceling feature.

NOTE: There is no need to connect the headset cable if the headset is used only for the Active-Noise-Cancellation feature.

Using your headset with the ROG Spitfire

- 1. Connect the headset's microphone and output cable to their respective jacks on the ROG Spitfire.
- 2. Plug the ROG Spitfire into your computer's USB port.
- 3. Go to the Control Panel to change the default input / recording device.

Using Gaming / Surround / Amp modes on ROG Spitfire

Press the Gaming / Surround / Amp button on the ROG Spitfire to enable/ disable each audio mode.

Storing your headset

To store your headset

- 1. Disconnect the audio cable and microphone.
- 2. Fold one side, then the other, ensuring that pressure is applied to the hinges and not on the ear cups.
- 3. Put your headset and its accessories in the protective case.

Documents / Resources

Download manual

Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc.

Download Asus Vulcan Pro - Active Noise-Canceling Gaming Headset Manual

Need Assistance?

Do you have a question about the Vulcan Pro that isn't answered in the manual? Leave your question here.

Stay updated with the latest solutions Submit your question

Related Manuals for Asus Vulcan Pro

Asus ROG STRIX GO CORE - Gaming Headsets Manual (article) Asus Cerberus - Gaming Headset Manual (article) Asus Orion - Gaming Headset Manual (article) Asus Orion Pro - Gaming Headset Manual (article) Asus ROG Vulcan ANC - Active Noise-Canceling Gaming Headset Manual (article) Asus HS-W1 - Wireless Headset Manual (article) Headphone Asus Vulcan Pro Quick Start Manual Active noise-canceling gaming headset (82 pages) Headsets Asus Vulcan Pro Quick Start Manual Active noise-canceling gaming headset (82 pages) Headsets Asus ROG Vulcan ANC Quick Start Manual Active noise-canceling gaming headset (31 pages) Headsets Asus ROG Strix Fusion 700 Quick Start Manual Gaming headset (18 pages) Headsets Asus TUF Gaming H3 Quick Start Manual (46 pages) Headsets Asus Rog Fusion II 500 Quick Start Manual (46 pages) Headsets Asus ROG DELTA S Manual (44 pages) Headsets Asus ROG Strix Fusion 300 Quick Start Manual Gaming (44 pages) Headsets Asus STRIX 7.1 Quick Start Manual (142 pages) Headsets Asus TUF GAMING H3 Quick Start Manual Wireless (49 pages) Headsets Asus ROG Centurion Quick Start Manual True 7.1 gaming headset (246 pages) Headsets Asus ROG STRIX Fusion Wireless Quick Start Manual Gaming headset (26 pages) Headsets Asus ROG DELTA CORE Quick Start Manual (47 pages) Headsets Asus Padfone Stylus Headset Quick Start Manual (8 pages)

Save Article as PDF