



Asus ROG Vulcan ANC - Active Noise-Canceling Gaming Headset Manual

Contents

- 1 Package contents
- 2 Getting to know your headset
- 3 Specification summary
- 4 Wearing your headset
- 5 Installing the battery
- 6 Connecting the microphone and the audio cable
- 7 Activating the noise-canceling function
- 8 Storing your headset
- 9 Documents / Resources
 - 9.1 Download manual

Package contents

- 1 x ROG Vulcan ANC headset
- 1 x Audio cable
- 1 x AAA battery
- 1 x Microphone
- 1 x Quick Start Guide
- 1 x Protective case

Getting to know your headset

- 1. Adjustable headband**
Allows you to adjust the headset for a snug fit on your head.
- 2. Ear cups**
Provides you with an enhanced audio experience.
- 3. Battery cover**
Contains the battery slot.
- 4. Battery cover button**
Push this button to open the battery cover.
- 5. ANC activity LED**
A red LED indicates that the active noise cancelation control function is turned on.
- 6. ANC switch**
Allows you to turn on/off the active noise cancelation control function.
- 7. Audio port**
Insert the audio cable into this port.
- 8. Microphone port**
Insert the microphone into this port.
- 9. In-line microphone jack storage clip**
Allows you to clip the headset adapter on your pocket.
- 10. Volume control**
Allows you to increase/decrease the volume.

11. Mute control

Allows you to put the microphone on mute mode.

12. Microphone

Insert the microphone into the microphone port for a two-way communication.

Specification summary

Driver: 40mm

Impedance: 32 ohms

Frequency range: 10~20 Khz

ANC (Active noise cancelation) performance: Maximum >15dB;

Effective Bandwidth >600MHz

PNC (Passive noise cancelation) performance: Maximum >30dB

Battery life: Up to 40 hours (with one AAA battery)

Dimension (mm): 206mm x 196mm x 80mm (L x W x H)

Weight: 325g

Wearing your headset

NOTE: There are L and R markings on the ear cups.

To wear your headset

- Adjust the headband so it fits snugly on your head.
- Adjust the ear cups so it fits comfortably around your ears.
- Move the volume control to increase/decrease the volume.

Installing the battery

To install the battery

1. Turn off the ANC switch.
2. Push the battery cover button to open and remove the battery cover.
3. Install one AAA battery in the battery slot.
4. Replace the battery cover.

NOTE: Remove the battery if you are not going to use your headset for a long time.

Connecting the microphone and the audio cable

To connect the microphone

Connect the microphone to the headset's microphone port.

To connect the audio cable

1. Connect the audio cable to the headset's audio port.
2. Connect the audio cable's headphone and microphone connectors to your computer's headphone and microphone ports.

Activating the noise-canceling function

The noise-canceling function removes ambient noise such as background noise for a clearer sound quality.

To activate the noise-canceling function

Slide the ANC switch to the right to activate the noise-canceling function. The activity LED turns red.

Storing your headset

To store your headset

1. Fold one side, then the other, ensuring that pressure is applied to the hinges and not on the ear cups.
2. Put your headset and its accessories in the protective case.

Documents / Resources

Download manual

Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc.

[Download Asus ROG Vulcan ANC - Active Noise-Canceling Gaming Headset Manual](#)

Need Assistance?

Do you have a question about the ROG Vulcan ANC that isn't answered in the manual?
Leave your question here.



Stay updated with the latest solutions
Submit your question

Related Manuals for Asus ROG Vulcan ANC

[Asus ROG STRIX GO CORE - Gaming Headsets Manual](#)

(article)

[Asus Cerberus - Gaming Headset Manual](#)

(article)

[Asus Orion - Gaming Headset Manual](#)

(article)

[Asus Orion Pro - Gaming Headset Manual](#)

(article)

[Asus Vulcan Pro - Active Noise-Canceling Gaming Headset Manual](#)

(article)

[Asus HS-W1 - Wireless Headset Manual](#)

(article)

[Headphone Asus Vulcan ANC Quick Start Manual](#)

Active noise-canceling gaming headset (65 pages)

[Headsets Asus ROG Vulcan ANC Quick Start Manual](#)

Active noise-canceling gaming headset (31 pages)

[Headsets Asus ROG STRIX Quick Start Manual](#)

(112 pages)

[Headsets Asus ROG Strix Quick Start Manual](#)

Wireless gaming headsets (112 pages)

[Headsets Asus ROG STRIX Fusion Wireless Quick Start Manual](#)

Gaming headset (26 pages)

[Headsets Asus Republic of Gamers ROG Delta Gaming Headset Quick Start Manual](#)

(2 pages)

[Headsets Asus ROG THRONE QI Quick Start Manual](#)

Gaming headset stand (47 pages)

[Headsets Asus ROG DELTA Quick Start Manual](#)

(4 pages)

[Headsets Asus ROG DELTA CORE Quick Start Manual](#)

(47 pages)

[Headsets Asus ROG DELTA Quick Start Manual](#)

(9 pages)

[Headsets Asus Republic of Gamers ROG Cetra RGB Quick Start Manual](#)

Gaming in-ear headphones (12 pages)

[Headsets Asus ROG DELTA S Manual](#)

(44 pages)

[Headsets Asus ROG DELTA S CORE Quick Start Manual](#)

Gaming headset (2 pages)

[Headsets Asus ROG THETA 7.1 Quick Start Manual](#)

(3 pages)

[Save Article as PDF](#)