 


3: Channel Setting - Toshiba D-KR4 Owner's Manual

Toshiba d-kr4: installation guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
Table Of Contents
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52



•

[Table of Contents](#)

•

Bookmarks



Basic Setup

A: Initial settings (Continued)

3: Channel setting

The recorder scans through all receivable TV and cable channels and stores only the active ones in its memory.

Once this process is completed, you can select a desired channel using the CH button.

OPEN/CLOSE

DISPLAY FL SELECT DIMMER

ANGLE

SUBTITLE AUDIO SAVED/RELEASE

REMAIN REC MODE EXTEND

SETUP

VOL

TIMESLIP

MUTE

EASY

TOP MENU

NAVI

SELECT/

3: Channel setting

The recorder scans through all receivable TV and cable channels and stores only the active ones in its memory.
Once this process is completed, you can select a desired channel using the CH button.

When the recorder is operated for

ENTER
INSTANT
REPLAY
QUICK MENU
SKIP REV
STOP
REV
PLAY
REC
SEARCH
ADJUST

Basic Setup

A: Initial settings (Continued)

3: Channel setting

The recorder scans through all receivable TV and cable channels and stores only the best picture and sound. Once this process is completed, you can select a desired channel using the CH buttons.

36

When the recorder is operated for the first time, begin from step 3.

PROGRESSIVE

1

Start

ZOOM

2

CH

3

INPUT SELECT

MENU

TV

DVD

INSTANT


SKIP

4

SKIP FWD

FWD

CHP DIVIDE

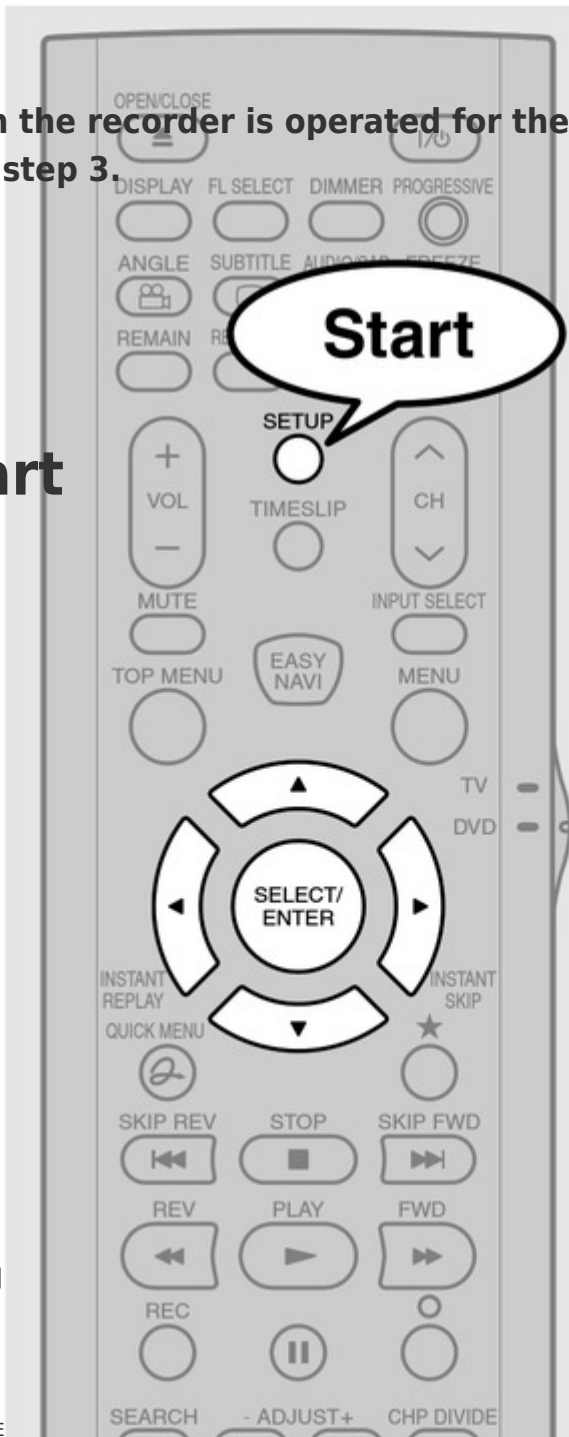

When the recorder is operated for the first time, begin from step 3.

1 Press SETUP.

2 Press ◀/▶ to select "Initial settings" and press SELECT/ENTER.

3 Press ▲/▼ to select "TV/Cable" and press SELECT/ENTER.



e.g.



4 Press ▲/▼ to select "TV" and press SELECT/ENTER.



TV : To store broadcast channels from antenna.

Cable : To store channels from cable.

Basic Setup

5

A: Initial settings (Continued)

+ 10

3

6

0

CLEAR

9

3: Channel setting

The recorder scans through all receivable TV and cable channels and stores only the ones that are available. Once this process is completed, you can select a desired channel using the CH button.

Press **SETUP**.

Press

to select "Initial settings", then press **SELECT/ENTER**.

Press

to select "TV/Cable", then press **SELECT/ENTER**.

e.g.

Language
Time & Date setting
TV/Cable
Channel setting

Press

to select "TV" or "Cable", then press **SELECT/ENTER**.

TV

: To store broadcast channels received via the antenna.

SELECT/ENTER

Cable : To store channels received via cable.

Press

to select "Channel setting", then press **SELECT/ENTER**.

e.g.

Language
Time & Date setting
TV/Cable
Channel setting
Initial settings
English
TV
Cable



When the recorder is operated from step 3.

1 Press **SETUP**.

2 Press **◀/▶** to select "Initial settings", then press **SELECT/ENTER**.

3 Press **▲/▼** to select "TV/Cable", then press **SELECT/ENTER**.



e.g.



4 Press **▲/▼** to select "TV" or "Cable", then press **SELECT/ENTER**.



TV : To store broadcast channels received via the antenna.

Cable : To store channels received via cable.

Basic Setup

A: Initial settings (Continued)

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
33
34
35
36
37
38
39
40

Related Manuals for Toshiba D-KR4

[DVD Recorder Toshiba D-R4SC Owner's Manual](#)

Dvd video recorder (131 pages)

[DVD Recorder Toshiba D-R4SU Owner's Manual](#)

Dvd video recorder (195 pages)

[DVR Toshiba D-R4SU Owner's Manual](#)

(131 pages)

[DVD Recorder Toshiba D-R4SU Owner's Manual](#)

Dvd video recorder (53 pages)

[DVD Recorder Toshiba D-R4SU Service Manual](#)

Dvd video recorder (22 pages)

[DVR Toshiba D-R4 Specifications](#)

Digital video recorder (2 pages)

[DVR Toshiba D-R2SU Owner's Manual](#)

Toshiba corporation owner's manual digital video dvd video recorder (151 pages)

[DVR Toshiba D-R2SU Service Manual](#)

(54 pages)

[DVR Toshiba D-KVR20KU Owner's Manual](#)

Dvd video recorder / video cassette recorder (111 pages)

[DVR Toshiba D-RW2SU Owner's Manual](#)

D-rw2su user's guide (157 pages)

[DVR Toshiba D-R410KU Service Manual](#)

Toshiba d-r410ku dvd video recorder service manual (66 pages)

[DVR Toshiba D-VR3SU Service Manual](#)

Dvd video recorder/video cassette recorder (217 pages)

[DVR Toshiba DR430KU Owner's Manual](#)

Dr430ku user's guide (103 pages)

[DVR Toshiba DR430KU Owner's Manual](#)

Dvd video recorder (110 pages)

[DVR Toshiba DR20KB Owner's Manual](#)

Dr20 dvd recorder (76 pages)

[DVR Toshiba D-VR7KC2 Owner's Manual](#)

Dvd video recorder / video cassette recorder (109 pages)

Related Content for Toshiba D-KR4

[D-R560KU Channel Setting](#)

Toshiba D-R560KU

[RD-XS54SU Setting A Timer Recording By Directly Specifying The Date, Time, And Channel](#)

Toshiba RD-XS54SU

[DR570KU Channel Setting](#)

Toshiba DR570KU

[D-RW2SU Channel Setting](#)

Toshiba D-RW2SU

[D-R550KU Channel Setting](#)

Toshiba D-R550KU

[RD-XS34S Angle Subtitle Audio Channel](#)

Toshiba RD-XS34S

[RD-85DTSB 2: Clock Setting](#)

Toshiba RD-85DTSB

[RD99DTKB Select "General Setting" Using \[K \ L\], Then Press](#)

[\[Enter\Ok\]](#)

Toshiba RD99DTKB

This manual is also suitable for:

[D-r4D-kr4su](#)