



Whirlpool WUB50X24HZ - 24-inch  
Wide Undercounter Beverage Center  
- 5.2 cu. ft. Manual

# Contents

## 1 INSTALLATION INSTRUCTIONS

- 1.1 Location Requirements
- 1.2 Electrical Requirements
- 1.3 Unpack the Beverage Center
- 1.4 Reverse Door Swing (optional)
- 1.5 Door Closing
- 1.6 Base Grille

## 2 BEVERAGE CENTER USE

- 2.1 Normal Sounds
- 2.2 Using the Control

## 3 BEVERAGE CENTER FEATURES

- 3.1 Beverage Center Shelves
- 3.2 Stocking the Beverage Center
- 3.3 Bottom Rack 6 Bottles

## 4 BEVERAGE CENTER CARE

- 4.1 Cleaning
- 4.2 Vacation and Moving Care

## 5 TROUBLESHOOTING

- 5.1 Your Beverage Center will not operate

5.2 The motor seems to run too much

5.3 Temperature is too warm

5.4 The door is difficult to open

5.5 The door will not close completely

5.6 There is interior moisture buildup

## 6 ASSISTANCE OR SERVICE

6.1 In the U.S.A.

6.2 In Canada

6.3 Accessories

## 7 BEVERAGE CENTER SAFETY

## 8 Documents / Resources

8.1 References

8.2 Download manual

# INSTALLATION INSTRUCTIONS

## Location Requirements

## Explosion Hazard

Keep flammable materials and vapors, such as gasoline, away from Beverage Center.

Failure to do so can result in death, explosion, or fire.

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, office and other working environments;
- Farm houses and by clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments;
- Catering and similar non-retail applications.

To ensure proper ventilation for your Beverage Center, allow for a 1/4" (6.35 mm) space on each side and at the top. When installing your Beverage Center next to a fixed wall, leave 2.1/2" (6.35 cm) minimum clearance on the hinge side to allow for the door to swing open. NOTE: It is recommended that you do not install the Beverage Center near an oven, radiator, or other heat source. Do not install in a location where the temperature will fall below 55°F (13°C). For best performance, do not block the base grille.

### Opening Dimensions

- Height dimensions are shown with the leveling legs extended to the minimum height.

NOTE: When leveling legs are fully extended, add 5/8" (1.6 cm) to the height dimensions.

- If the floor of the opening is not level with the kitchen floor, shim the opening to make it level with the kitchen floor.

*Critical dimensions:*

A. 14.3/4" (37.5 cm) utility opening

B. 24" (60.96 cm) minimum opening width

## Electrical Requirements

### Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Before you move your Beverage Center into its final location, it is important to make sure you have the proper electrical connection.

## Recommended grounding method

A 115 Volt, 60 Hz., AC only, 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your Beverage Center be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

NOTE: Before performing any type of installation, or cleaning, unplug Beverage Center or disconnect power.

## Unpack the Beverage Center

### Excessive Weight Hazard

Use two or more people to move and install or uninstall appliance. Failure to do so can result in back or other injury.

## Remove the Packaging

- Remove tape and glue residue from surfaces before turning on the Beverage Center. Rub a small amount of liquid dish soap over the adhesive with your fingers. Wipe with warm water and dry.
- Do not use sharp instruments, rubbing alcohol, flammable fluids, or abrasive cleaners to remove tape or glue. These products can damage the surface of your Beverage Center. For more information, see "Beverage Center Safety."
- Dispose of/recycle all packaging materials.

## When Moving Your Beverage Center

Your Beverage Center is heavy. When moving the Beverage Center for cleaning or service, be sure to cover the floor with cardboard or hardboard to avoid floor damage. Always pull the Beverage Center straight out when moving it. Do not wiggle or "walk" the Beverage Center when trying to move it, as floor damage could occur. Having someone push against the front top of the Beverage Center takes some weight off the front leveling legs. This makes it easier to push the unit on the rear rollers.

### Clean Before Using

After you remove all of the package materials, clean the inside of your Beverage Center before using it. See the cleaning instructions in "Beverage Center Care".

Important information to know about glass shelves and covers: Do not clean glass shelves or covers with warm water when they are cold. Shelves and covers may break if exposed to sudden temperature changes or impact, such as bumping. Tempered glass is designed to shatter into many small, pebble-size pieces. This is normal. Glass shelves and covers are heavy. Use both hands when removing them to avoid dropping.

### Reverse Door Swing (optional)

Tools Needed: Phillips screwdriver and an 8 mm wrench (or 5/16" in wrench).

1. Unplug Beverage Center or disconnect power.
2. Using the screw driver, remove the screws from each side of



the top of the Beverage Center cabinet and set aside.

NOTE: There are seven screws total. Do not discard.

3. Remove the top hinge and set aside.
4. Lift the door straight up and off the bottom hinge.
5. Set door lying flat with gasket facing up. Door should be placed on a debris free surface such as cardboard or blanket to avoid scratches.
6. Remove the screws (B) fastening the black metal door stopper (C) and re-attach it on the opposite side.
7. Remove the screws from each side of the kickplate and set aside.
8. Pull out the kickplate and set aside.
9. With the wrench, remove the screws (A) fastening the bottom hinge (B) to the Beverage Center cabinet and set aside. There are four screws total.
10. Using the screwdriver, remove the screw (C) fastening the plastic hinge door latch (E). Set screw aside. Then, unscrew the bottom hinge shaft (D) and plastic hinge door latch (E) and set aside.

11. Flip over the bottom hinge on the opposite side. As shown in the images below and reverse the process in step 10.
12. Move hinge to the opposite side and completely tighten the screws (four total).
13. Reattach the base grill and tighten with the two screws provided.
14. Place the door straight down and on the bottom hinge.
15. Fasten the top hinge with three silver screws and move the remaining four screws to the opposite side. Completely tighten all seven screws.

## Door Closing

Your Beverage Center has two leveling legs. If your Beverage Center seems unsteady or you want the door to close more easily, adjust the Beverage Center's tilt using the instructions below.

## Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

1. Plug into a grounded 3 prong outlet.

#### Excessive Weight Hazard

Use two or more people to move and install or uninstall appliance.

Failure to do so can result in back or other injury.

2. Move the Beverage Center into its final location.
3. Turn the leveling legs to the right to lower the Beverage Center or turn the leveling legs to the left to raise it. It may take several turns of the leveling legs to adjust the tilt of the Beverage Center.  
NOTE: Having someone push against the top of the Beverage Center takes some weight off the leveling legs. This makes it easier to adjust the leveling legs.
4. Open the door again to make sure that it closes as easily as you like. If not, tilt the Beverage Center slightly more to the rear by turning both front leveling screws to the left. It may take several more turns, and you should turn both leveling legs the same amount.

## Base Grille

Tools Needed: Phillips screwdriver

### Remove the Base Grille

1. Open the Beverage Center door.
2. Using the screwdriver, remove the two screws.
3. Remove the base grille.

### Replace the Base Grille

1. Open the Beverage Center door.
2. Position the base grille so that screw holes align into place. Replace the two screws. Tighten the screws.

## BEVERAGE CENTER USE

### Normal Sounds

Your new Beverage Center may make sounds that your old one didn't make. Because the sounds are new to you, you might be concerned about them. Most of the new sounds are normal. Hard surfaces, such as the flooring and surrounding structures, can make the sounds seem louder. The following describes the kinds

of sounds and what may be making them.

- Your Beverage Center is designed to run more efficiently to keep your food items at the desired temperatures and to minimize energy usage. The high efficiency compressor and fans may cause your Beverage Center to run longer than your old one. You may also hear a pulsating or high-pitched sound from the compressor or fans adjusting to optimize performance.
- Rattling noises may come from the flow of refrigerant or items stored inside the Beverage Center.
- As each cycle ends, you may hear a gurgling sound due to the refrigerant flowing in your Beverage Center.
- You may hear water running into the drain pan when the Beverage Center is defrosting.
- You may hear clicking sounds when the Beverage Center starts or stops running.

## Using the Control

The control panel is located on the middle separator (mullion) of the Beverage Center. The control panel has no mechanical parts or buttons.

### Turning Control On/Off

The first time that the Beverage Center is plugged in, the control will be in Off mode.

To turn ON the unit, press button for 3 seconds.

To turn OFF the unit, press button for 3 seconds.

### Viewing Celsius Temperatures

Press the touch pad to toggle between displaying the temperature in degrees Fahrenheit and degrees Celsius. The corresponding indicator will illuminate.

### Adjusting the Interior Light

Press touch pad to toggle between ON and OFF.

### Adjusting the Controls

There are three temperature control set points for this model: For your convenience, your control is preset at the default temperature.

- To adjust set point temperatures, press "+" (plus) or "-" (minus) until the desired temperature setting is reached.

### NOTES:

- The default recommended temperature for the Beverage Center is 39°F (4°C) Upper Compartment and 55°F (13°C) for Lower Compartment.
- Wait at least 24 hours between adjustments so the Beverage Center can acclimate.

Beverage Center setting	Upper Compartment	Lower Compartment
Cold	33°F (1°C)	42°F (6°C)

Medium	39°F (4°C)	50°F (10°C)
Cool	42°F (6°C)	55°F (13°C)

## BEVERAGE CENTER FEATURES

### Beverage Center Shelves

Your model may have glass or wire shelves. Store similar foods together. This reduces the time the Beverage Center door is open and saves energy.

To Remove and Replace Shelves:

1. Remove the shelf by lifting up the front and pulling it out of the shelf slots.
2. Replace the shelf by inserting it into the shelf slots and pushing it toward the back of the compartment.

Important information to know about glass shelves and covers: Do not clean glass shelves or covers with warm water when they are cold. Shelves and covers may break if exposed to sudden temperature changes or impact, such as bumping. Tempered glass is designed to shatter into many small, pebble-size pieces. This is normal. Glass shelves and covers are heavy. Use both hands when removing them to avoid dropping.

### Remove and Replace the Wine Racks

NOTE: When storing large bottles or magnums, remove the rack

directly above.

1. Pull the rack forward until it stops.
2. Lift up on the left-hand lever (A) while pressing down on the right-hand lever to release the rack. Pull the rack forward and lift it up and out of the rack supports.
3. Replace the rack by inserting the rack into the supports and sliding it toward the rear of the Beverage Center.

## Stocking the Beverage Center

To Stock the Beverage Center:

1. Place juices, sodas or other canned beverages on the glass shelves.

Top Wine Rack:

1. Slide wine rack open.
2. Starting on the left-hand side of the wine rack, place the first bottle with the neck of the bottle facing the front of the



Beverage Center.

3. Place the next bottle on the rack with the neck of the bottle facing the back of the Beverage Center. Alternate the direction of the bottles, in this manner, until the rack is full.
4. Slide the wine rack into place.

NOTE: The wine rack can be stocked with the bottles facing either direction, however, to optimize storage adjacent bottles should be facing in opposite directions.

## Bottom Rack 6 Bottles

Bottom Wine Rack:

Starting from left-hand side of the bottom rack, place the first bottle with the neck of the bottle facing the front of the Beverage Center. Continues to place the remaining bottles facing in the same direction.

## BEVERAGE CENTER CARE

### Cleaning

Explosion Hazard

Risk of fire or explosion.

Flammable refrigerant used.

Do not use mechanical devices to defrost refrigerator.

Do not puncture refrigerant tubing.

Clean the Beverage Center about once a month to avoid buildup of odors. Wipe up spills immediately.

To clean your Beverage Center:

1. Unplug Beverage Center or disconnect power.
  2. Remove all removable parts from inside, such as shelves, etc.
  3. Hand wash, rinse, and dry removable parts and interior surfaces thoroughly. Use a clean sponge or soft cloth and a mild detergent in warm water.
- Do not use abrasive or harsh cleaners such as window sprays, scouring cleansers, flammable fluids, cleaning waxes, concentrated detergents, bleaches or cleansers containing petroleum products on plastic parts, interior and door liners or gaskets. Do not use paper towels, scouring pads, or other harsh cleaning tools. These can scratch or damage materials.
  - To help remove odors, you can wash interior walls with a mixture of warm water and baking soda (2 tbs to 1 qt (26 g to 0.95 L) of water).

4. Wash stainless steel and painted metal exteriors with a clean sponge or soft cloth and a mild detergent in warm water. Do not use abrasive or harsh cleaners, or cleaners containing chlorine. These can scratch or damage materials. Dry thoroughly with a soft cloth.
5. Replace the removable parts.

### Condenser cleaning:

1. Remove the base grille. See "Base Grille".
2. Clean the condenser coils regularly. They are located behind the base grille. Coils may need to be cleaned as often as every other month. This may help save energy.
3. Use a vacuum cleaner with an extended attachment to clean the condenser coils when they are dusty or dirty.
4. Replace the base grille.
5. Plug in Beverage Center or reconnect power.

### Vacation and Moving Care

#### Vacation

If you choose to turn the Beverage Center off before you leave, follow these steps.

1. Remove all contents from the Beverage Center.
2. Unplug the Beverage Center.
3. Clean the Beverage Center. See "Cleaning".
4. Tape a rubber or wood block to the top of the door to prop it open far enough for air to get in. This stops odor and mold from building up.

## Moving

When you are moving your Beverage Center, follow these steps to prepare it for the move.

1. Remove all contents from the Beverage Center.
2. Unplug the Beverage Center.
3. Clean, wipe, and dry it thoroughly.
4. Take out all removable parts, wrap them well, and tape them together so they don't shift and rattle during the move.
5. Tape the doors shut and tape the power cord to the Beverage Center. When you get to your new home, put everything back and refer to the "Installation Instructions" section for preparation instructions.

## TROUBLESHOOTING

Try the solutions suggested here first in order to avoid the cost of

an unnecessary service call.

#### Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

#### Explosion Hazard

Risk of fire or explosion.

Flammable refrigerant used.

Do not use mechanical devices to defrost Refrigerator.

Do not puncture refrigerant tubing.

#### Explosion Hazard

Risk of fire or explosion due to puncture of refrigerant tubing.

Follow handling instructions carefully.

Flammable refrigerant used.

#### Explosion Hazard

Use nonflammable cleaner.

Failure to do so can result in death, explosion, or fire.

## Your Beverage Center will not operate

- Is the power supply cord unplugged? Plug into a grounded 3 prong outlet.
- Has a household fuse blown, or has a circuit breaker tripped? Replace the fuse or reset the circuit.
- Is the Beverage Center Control turned to the OFF position? See "Using the Control".

## The motor seems to run too much

- Is the temperature outside hotter than normal?  
Expect the motor to run longer under warm conditions. At normal outdoor temperatures, expect your motor to run about 40% to 80% of the time. Under warmer conditions, expect it to run even more of the time.
- Has a large amount of food just been added to the Beverage Center? Adding a large amount of food warms the Beverage Center. It is normal for the motor to run longer in order to cool the Beverage Center back down.
- Is the door opened often? Expect the motor to run longer when this occurs. In order to conserve energy, try to get everything you need out of the Beverage Center at once, keep food organized so it is easy to find, and close the door as soon as the food is removed.
- Is the control set correctly for the surrounding conditions? See

"Using the Control".

- Is the door closed completely? Push the door firmly shut. If it will not shut all the way, see "The door will not close completely" later in this section.
- Are the condenser coils dirty? This obstructs air transfer and makes the motor work harder. Clean the condenser coils. See "Cleaning".

## Temperature is too warm

- Is the door opened often? Be aware that the Beverage Center will warm when this occurs. In order to keep the Beverage Center cool, try to get everything you need out of the Beverage Center at once, keep food organized so it is easy to find, and close the door as soon as the food is removed.
- Has a large amount of food just been added to the Beverage Center? Adding a large amount of food warms the Beverage Center. It can take several hours for the Beverage Center to return to the normal temperature.
- Is the control set correctly for the surrounding conditions? See "Using the Control".
- Is the base grille blocked? For best performance, do not install the Beverage Center behind a cabinet door or block the base grille.

## The door is difficult to open

- Is the gasket dirty or sticky? Clean the gasket and the surface that it touches. Rub a thin coat of paraffin wax on the gasket following cleaning.

## The door will not close completely

- Are food packages blocking the door open? Rearrange containers so that they fit more tightly and take up less space.
- Are the shelves out of position? Put the shelves back into their correct positions. See "Beverage Center Use" for more information.
- Is the gasket sticking? Clean the gasket and the surface that it touches. Rub a thin coat of paraffin wax on the gasket following cleaning.

## There is interior moisture buildup

- Is the door opened often? To avoid humidity buildup, try to get everything you need out of the Beverage Center at once, keep food organized so it is easy to find, and close the door as soon as the food is removed. When the door is opened, humidity from the room air enters the Beverage Center. The more often the door is opened, the faster humidity builds up, especially when the room itself is very humid.



- Is it humid? It is normal for moisture to build up inside the Beverage Center when the air is humid.
- Is the food packaged correctly? Check that all food is securely wrapped. Wipe off damp food containers before placing in the Beverage Center.
- Is the control set correctly for the surrounding conditions? See "Using the Control".

## ASSISTANCE OR SERVICE

Before calling for assistance or service, please check "Troubleshooting." It may save you the cost of a service call. If you still need help, follow the instructions below. When calling, please know the purchase date and the complete model and serial number of your appliance. This information will help us to better respond to your request.

### If You Need Replacement Parts

If you need to order replacement parts, we recommend that you only use factory specified replacement parts. Factory specified replacement parts will fit right and work right because they are made with the same precision used to build every new Whirlpool® appliance. The replacement shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service. To locate factory specified replacement parts in your area, call us or your nearest designated service center.

In the U.S.A.

Call the Whirlpool Customer eXperience Center toll free:  
1-800-253-1301.

Our Consultants Provide Assistance With:

- Features and specifications on our full line of appliances.
- Installation information.
- Use and maintenance procedures.
- Accessory and repair parts sales.
- Specialized customer assistance (Spanish speaking, hearing impaired, limited vision, etc.).
- Referrals to local dealers, repair parts distributors, and service companies. Whirlpool designated service

technicians are trained to fulfill the product warranty and provide after warranty service, anywhere in the United States. To locate the Whirlpool designated service company in your area, you can also look in your telephone directory Yellow Pages.

For Further Assistance

If you need further assistance, you can write to Whirlpool with any questions or concerns at:

Whirlpool Brand Home Appliances

Customer eXperience Center

553 Benson Road

Benton Harbor, MI 49022-2692

Please include a daytime phone number in your correspondence.

## In Canada

Call the Whirlpool Canada Customer eXperience Center toll free: 1-800-807-6777 or visit our website at [www.whirlpool.ca](http://www.whirlpool.ca).

Our Consultants Provide Assistance With:

- Features and specifications on our full line of appliances.
- Use and maintenance procedures.
- Accessory and repair parts sales.
- Scheduling of Service. Whirlpool designated service technicians are trained to fulfill the product warranty and provide after-warranty service, anywhere in Canada.

### For Further Assistance

If you need further assistance, you can write to Whirlpool Canada with any questions or concerns at:

Whirlpool Brand Home Appliances Customer eXperience Centre  
200 - 6750 Century Ave.

Mississauga, Ontario L5N 0B7

Please include a daytime phone number in your correspondence.

### Accessories

The following accessory is available for your Beverage Center.

To order accessory, contact us and ask for the part number.

In the U.S.A., visit our webpage [www.whirlpool.com/](http://www.whirlpool.com/) accessories or call 1-800-253-1301. In Canada, visit our webpage

[www.whirlpoolparts.ca](http://www.whirlpoolparts.ca) or call 1-800-807-6777. Stainless Steel

Cleaner & Polish  
Order Part #4396095

## BEVERAGE CENTER SAFETY

Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

You can be killed or seriously injured if you don't immediately follow instructions.

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury when using your beverage center, follow these basic precautions:

- Plug into a grounded 3 prong outlet.

- Do not remove ground prong.
- Do not use an adapter.
- Do not use an extension cord.
- Disconnect power before servicing.
- Replace all parts and panels before operating.
- Remove doors from your old beverage center.
- Use non flammable cleaner.
- Do not store or use petrol, flammable liquids or gas in the vicinity of this or other electrical appliances. The fumes can cause fires or explosions.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this beverage center.
- Do not use or place electrical devices inside the beverage center compartments if they are not of the type expressly authorized by the manufacturer.
- Use two or more people to move and install beverage center.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance. To avoid the risk of children becoming trapped and suffocating, do not allow them to play or hide inside the beverage center. If the power supply cord is

damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person.

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.

## SAVE THESE INSTRUCTIONS

### Proper Disposal of your Old Beverage Center

Risk of child entrapment. Before you throw away your old Beverage Center:

- Take off the door.
- Leave the shelves in place so that children may not easily climb inside.

### Suffocation Hazard

Remove doors or lid from your old appliance. Failure to do so can result in death or brain damage.

Child entrapment and suffocation are not problems of the past. Junked or abandoned Beverage Centers are still dangerous – even

if they will sit for "just a few days." If you are getting rid of your old Beverage Centers, please follow these instructions to help prevent accidents.

Important information to know about disposal of refrigerants: Dispose of Beverage Center in accordance with Federal and Local regulations. Refrigerants must be evacuated by a licensed, EPA certified refrigerant technician in accordance with established procedures.

For questions about features, operation/performance, parts or service, call: 1-800-253-1301 In Canada, call for assistance 1-800-807-6777 or visit our website at... [www.whirlpool.com](http://www.whirlpool.com) or [www.whirlpool.ca](http://www.whirlpool.ca)

Documents / Resources

References

[Shop Kitchen Appliances: Washing Machines, Dryers & More | Whirlpool](#)

[Home, Kitchen & Laundry Appliances & Products | Whirlpool](#)

[Certified Genuine Whirlpool Parts | Whirlpool Parts Online](#)

## Download manual

Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc.

[Download Whirlpool WUB50X24HZ - 24-inch Wide Undercounter Beverage Center - 5.2 cu. ft. Manual](#)

## Need Assistance?

Do you have a question about the WUB50X24HZ that isn't answered in the manual?  
Leave your question here.



Stay updated with the latest solutions  
Submit your question



## Related Manuals for Whirlpool WUB50X24HZ

[Kitchen Appliances Whirlpool WUB50X24HV Use & Care Manual](#)

(40 pages)

[Kitchen Appliances Whirlpool WUR35X24HZ Use & Care Manual](#)

(36 pages)

[Kitchen Appliances Whirlpool WUB50X24HZSS Use & Care Manual](#)

(14 pages)

[Kitchen Appliances Whirlpool ACM 224 Instructions For Use Manual](#)

(126 pages)

[Kitchen Appliances Whirlpool AMW 393 Instructions For Use Manual](#)

(17 pages)

[Kitchen Appliances Whirlpool WML55011HW Service Manual](#)

Low profile microwave hood combination (43 pages)

[Kitchen Appliances Whirlpool WHW45S Use & Care Manual](#)

(10 pages)

[Kitchen Appliances Whirlpool WHW16BKMSW Use And Care Manual](#)

(16 pages)

[Kitchen Appliances Whirlpool WHB36S Use & Care Manual](#)

(10 pages)

[Kitchen Appliances Whirlpool MBNA920B Quick Manual](#)

(33 pages)

[Kitchen Appliances WHIRLPOOL AKR 804 Installation Manual](#)

(12 pages)

[Kitchen Appliances Whirlpool AMW423/IX Daily Reference Manual](#)

(21 pages)

[Kitchen Appliances Whirlpool WHB27S Use And Care Manual](#)

(9 pages)

[Kitchen Appliances Whirlpool ACM 388 WH Service Manual](#)

(6 pages)

[Kitchen Appliances Whirlpool HOO B00 Installation & Assembly Instructions](#)

(5 pages)

[Kitchen Appliances Whirlpool WHB45S Use & Care Manual](#)

(10 pages)

[Kitchen Appliances Whirlpool WMBN5 R1 PT Daily Reference Manual](#)

(21 pages)

[Save Article as PDF](#)