



# Whirlpool WMH78519LV - 1.9 Cu. Ft. Microwave with Air Fry Mode Manual

# Contents

## 1 OPERATING YOUR MICROWAVE OVEN

### 1.1 Settings

### 1.2 Features

### 1.3 Accessories

### 1.4 Cookware and Dinnerware

### 1.5 Microwave Oven Use

## 2 MICROWAVE OVEN CARE

## 3 ACCESSORIES

## 4 TROUBLESHOOTING

## 5 MICROWAVE HOOD COMBINATION SAFETY

## 6 IMPORTANT SAFETY INSTRUCTIONS

## 7 PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

## 8 Electrical Requirements

## 9 GROUNDING INSTRUCTIONS

## 10 Documents / Resources

### 10.1 References

### 10.2 Download manual

# OPERATING YOUR MICROWAVE OVEN

## Settings

### Clock

The Clock is a 12-hour (12:00-11:59) or 24-hour (0:00-23:59) clock. Touch Settings/Clock to reach Clock submenu, and follow the prompts to set the Clock. Clock format (12 hours with AM and PM, 12 hours without AM and PM, or 24 hours) may also be set in the Clock submenu.

The Clock is a 12-hour (12:00-11:59) or 24-hour (0:00-23:59) clock. Touch Settings/Clock to reach Clock submenu, and follow the prompts to set the Clock. Clock format (12 hours with AM and PM, 12 hours without AM and PM, or 24 hours) may also be set in the Clock submenu.

### Timer

With the microwave oven in Standby mode, touch the Timer keypad, enter time, and then touch the Timer keypad or the Start keypad. Cook functions may be entered while the Timer is counting down. To cancel timer, touch Timer keypad while the Timer countdown is active in the display.

With the microwave oven in Standby mode, touch the Timer keypad, enter time, and then touch the Timer keypad or the Start keypad. Cook functions may be entered while the Timer is counting down. To cancel timer, touch Timer keypad while the Timer countdown is active in the display.

### Control Lock

Activate to avoid unintended start. Touch and hold the Cancel

keypad for about 3 seconds until 2 tones sound and Padlock icon appears in the display. Repeat to unlock control.

### Settings/Clock

Settings/Clock may be adjusted: Set Clock; Scrolling Speed; Sound; Filter Reset; Fan Timer; Light Timer; Calibrate Temp; Demo Mode; Factory Reset.

### Scroll Speed

Scroll speed of the text may be adjusted. Touch Settings/Clock to reach the Scroll Speed submenu and follow the prompts to set speed.

### Sound (Tones)

Programming tones and signals. Programming tones may be turned off or all tones (including end-of-function signals) may be turned off. Touch Settings/Clock to reach the Sound submenu, then follow the prompts to turn off or on the programming tones or all tones.

### Filter Reset

If the charcoal filter is used for more than 6 months, from the last time the filter is reset, the 6 month duration will count continuously. If the Filter Alert condition is met, "Change the Charcoal Filter; Reset Alert through Setup or Settings" will shown on the display. Reset the filter status after replacing the charcoal filter. Touch Settings/Clock repeatedly to reach Filter Reset submenu. Touch Select or Start to reset. After reset, another 6 months duration will be resumed.

### Vent Fan

Various speeds, ranging from high to low, and off. Comes on

automatically as cooling fan during any cook function.

**Fan Timer:** Set vent fan to run for exactly 30 minutes or to run for only 30 minutes more (off after 30 minutes). The vent fan may be turned off at any time using the Vent Fan keypad. Touch Settings/Clock to reach the Fan Timer submenu and select the setting.

**Light Timer** Set the cooktop light to turn on and off at certain times. Touch Settings/Clock to reach the Light Timer submenu and follow the prompts to set the light On time and light Off time in hours and minutes or to cancel Light Timer. NOTE: Light Timer uses 12-hour clock only.

## Calibration

The actual convection cooking temperature may be calibrated higher or lower than the displayed temperature. For example, if you want the microwave oven to be a bit hotter, you may try setting the calibration to +10°. Touch Settings/Clock to reach the Calibration submenu. Use number keypads to select temperature variations in degrees Fahrenheit: 1 = ±0° (reset to default), 2 = +5° (+2.8°C), 3 = +10° (+5.6°C), 4 = +15° (+8.3°C), 5 = +20° (+11.1°C), 6 = -5° (-2.8°C), 7 = -10° (-5.6°C), 8 = -15° (-8.3°C) and 9 = -20° (-11.1°C).

## Demo Mode

Activate to practice using the keypad without actually turning on the magnetron. Touch Settings/Clock to reach the Demo mode submenu, then follow the prompts to activate. The Demo icon will light up in the display. Repeat to deactivate.

## Standby Mode

When no functions are working (12-hour clock is displayed or if the clock has not been set), oven will switch to Standby Power mode and dim the LCD brightness after 5 minutes. Press any keypad or open/close the door, and display will return to the normal brightness.

## Features

### Convection Element and Fan

The convection element and fan are embedded in the wall of the microwave oven cavity, behind the metal screen.

### Grill Element

Depending on your model, the grill element has either one 1,000 W halogen bulb and one 500 W quartz bulb or two 600 W quartz bulbs. The halogen bulb glows very brightly, but the quartz bulb has a very faint glow that might not be visible.

### Turntable On/Off

Turntable may be turned off for manual cooking only. This is helpful when cooking with plates that are bigger than the turntable or when cooking with plates that are side by side. Turntable cannot be turned off during preset or sensor (on some models) functions.

## Accessories

### Air Fry Basket

Use the provided air fry basket for air frying and grilling. The air fry basket can be folded when cleaning in the dishwasher or storing.

NOTE: When cooking juicy meats, a microwave-safe, ovenproof dish or pan can be placed on the turntable and under the Air fry basket to catch the drippings.

### Convection Rack

Use the short convection rack for convection cycles (baking or roasting). Place cookware directly on rack for bake and for some roast functions. Some roast functions require that the food be placed directly on the rack. Use a microwave-safe, ovenproof dish or pan under the rack to catch the drippings.

The Steamer Vessel is not provided but can be purchased from Whirlpool.

### Accessory Configurations

A. *Turntable*

B. *Air fry basket*

C. *Microwave-safe, ovenproof dish* (not provided)

D. *Convection rack*

E. *Cookie sheet* (not provided)

F. *Steamer base* (not provided)

G. *Steamer insert* (not provided)

H. *Steamer lid* (not provided)

### Cookware and Dinnerware



## Microwave-Safe

- Browning dish (Follow manufacturer recommendations.)
- Ceramic glass, glass
- China, earthenware (Follow manufacturer recommendations.)
- Melamine (Follow manufacturer recommendations.)
- Paper towels, paper plates, napkins (Use non-recycled paper.)
- Plastic wraps, bags, covers, dinnerware, containers (Follow manufacturer recommendations.)
- Pottery and clay (Follow manufacturer recommendations.)
- Silicone bakeware (Follow manufacturer recommendations.)
- Wax paper

## For Use With Grill Cycles

- Use ovenproof, microwave-safe cookware to catch drippings.

## For Use With Convection/Combination Cycles

- Metal bakeware may be used only during convection (bake) cycles. Use ovenproof, microwave-safe cookware for all other convection and combination cycles.

## Do Not Use

- Metal cookware and bakeware
- Straw or wicker
- Gold, silver, or pewter
- Non-approved meat thermometers, skewers
- Twist ties
- Foil liners, such as sandwich wrappers
- Staples
- Objects with gold or silver trim or with metallic glaze

To Test Cookware/Dinnerware: Place dish in microwave oven with 1 cup (250 mL) of water beside it. Program 1 minute of cook time at 100%. If dish becomes hot and the water stays cool, do not use the dish in the microwave oven.

## Microwave Oven Use

For a list of preset programs, see the Quick Reference Guide provided with your model.

### To Cook with Only Microwave Power

Touch Cook Time/Power, touch number keypads to enter time, touch Cook Time/Power (if not 100%), touch number keypads to enter power level (10-90), then touch the Start keypad.

If programming additional stages (up to three), touch Settings/Clock to enter programming for the next stage, then enter the cook time and cook power of each, then touch the Start

keypad.

### Sensor Cooking

A sensor in the microwave oven detects moisture released from food as it heats and adjusts the cooking time accordingly.

Make sure microwave oven has been plugged in for at least 1 minute. Use microwave-safe dish with loose-fitting lid or cover microwave-safe dish with plastic wrap, and vent. For optimal performance, wait at least 30 minutes after convection cooking or grilling (on some models) before sensor cooking.

### To Cook with Convection

Touch START to begin preheat. Preheat may be skipped by touching START again. After preheat, place baking dish with food on the convection rack, then touch START to begin cooking.

### Add More Time

At the end of any cycle using less than 100% cook power, "PRESS 0 TO ADD MORE TIME" scrolls in the display. Enter the additional time, if desired, and start the microwave oven. The cook power for all non-sensor cycles will be the same as in the finished cycle but may be changed. If Add More Time is used after a sensor cycle, the cook power will be 100% but may be changed.

### Doneness

Adjust doneness for automatic cooking functions by touching Cook Time/Power repeatedly to scroll through "NORMAL," "MORE DONE," or "LESS DONE" within the first 20 seconds of starting the cook cycle. Doneness cannot be adjusted for Defrost functions.

## Food Poisoning Hazard

Do not let food sit in oven more than one hour before or after cooking.

Doing so can result in food poisoning or sickness.

Hot cooked food can be kept warm in the microwave oven. The Keep Warm function uses 10% cook power. Keep Warm can be used by itself or can be programmed to follow a cooking cycle.

## MICROWAVE OVEN CARE

### General Cleaning

Before cleaning, make sure all keypads are Off and the microwave oven is cool. Always follow label instructions on cleaning products.

To avoid damage to the microwave oven caused by arcing due to soil buildup, keep cavity, microwave inlet cover, cooking rack supports, and area where the door touches the frame clean.

Clean with mild soap, water, and a soft cloth or sponge or as indicated below.

- Grease filter: Mild soap and water or dishwasher.
- Door and exterior: Mild soap and water, or glass cleaner applied to paper towel.
- Control panel: Sponge or soft cloth and water.

- Stainless steel (on some models): Mild soap and water, then rinse with clean water and dry with soft cloth, or use stainless steel cleaner.
- Turntable: Mild soap and water or dishwasher.
- Rack(s): Mild soap, water, and washcloth. Dishwasher cleaning is not recommended.
- Air fry basket: Mild soap, water and washcloth. It is easy to clean in the dishwasher after folding the legs.
- Steamer vessel: Mild soap, water, and soft brush or dishwasher.

## Installing/Replacing Filters and Light Bulbs

NOTE: A filter status indicator appears in the display when it is time to replace the charcoal filter. See the "Settings" section to reset filter status.

- Grease filters: Grease filters are on the underside of the microwave oven. Clean at least monthly. Slide the filter away from the tab area and drop out the filter. To Install, place end of the filter into the tab area, slide the other end into the opposite tab area.
- Charcoal filters: The Charcoal filters are behind the vent grille at the top front of the microwave oven. The charcoal filters cannot be cleaned and should be replaced every 6 months as prompted on the display. Remove 3 screws on the vent grille, tilt the grille forward, lift it out, and remove filters. To reinstall, place the filters into their slotted area wire mesh side up, replace vent grille, and secure with screws. After replace the

charcoal filters. See the "Settings" section to reset filter status.

- Cooktop light: The cooktop light is located on the underside of the microwave oven and is replaceable. Remove bulb cover screw and open the bulb cover. Replace bulb, close bulb cover, and secure with screw.
- Cavity light: The cavity light bulb is located behind the vent grille at the top front of the microwave oven, under the bulb cover, and is replaceable. Remove three screws on the vent grille, tilt the grille forward, and lift it out. Open bulb cover and replace bulb.
- Close bulb cover, replace vent grille, and secure with screws.

## ACCESSORIES

Following is a list of available parts and supplies which may be purchased separately. Please refer to the cover for contact and model identification information.

### Replacement Parts

- Turntable
- Turntable support and rollers
- Turntable hub
- Grease filter
- Charcoal filter

- Cooktop light bulb
- Cavity light bulb

### Provided Accessories

- Air fry basket
- Convection rack

### Cleaning Supplies

- Heavy Duty Degreaser
- Affresh® Kitchen Appliance Cleaner
- Affresh® Stainless Steel Cleaner
- Affresh® Stainless Steel Wipes

## TROUBLESHOOTING

First try the solutions suggested here. If you need further assistance or more recommendations that may help you to avoid a service call, please visit the "Troubleshooting" section at <https://www.whirlpool.com/owners> for Troubleshooting help. You can also reach us by phone or mail using the information below:

In the U.S.A.:

1-866-698-2538

Whirlpool Brand Home Appliances

Customer eXperience Center  
553 Benson Road  
Benton Harbor, MI 49022-2692

If you experience	Recommended Solutions
Microwave oven will not operate	<p>Check the following:</p> <ul style="list-style-type: none"> <li>Household fuse or circuit breaker: If a household fuse has blown or a circuit breaker has tripped, replace the fuse or reset the circuit breaker. If the problem continues, call an electrician.</li> <li>Magnetron: Try to heat 1 cup (250 mL) of cold water for 2 minutes at 100% cooking power. If water does not heat, try the steps in the bullets below. If microwave oven still does not operate, call for service.</li> <li>Door: Firmly close door. On some models, if a packaging spacer is attached to inside of the door, remove it, then firmly close door. If a message about the door appears in the display, the door has been closed for 5 minutes or more without the microwave oven being started. This occurs to avoid unintended starting of the microwave oven. Open and close the door, then start the cycle.</li> <li>Control: Make sure control is set properly. Make sure Control Lock is OFF. Make sure Demo mode (on some models) is OFF.</li> </ul>
Arcing in the microwave oven	<p>Check the following:</p> <ul style="list-style-type: none"> <li>Soil buildup: Soil buildup on cavity walls, microwave inlet cover, cooking rack supports, and area where the door touches the frame can cause arcing. See "General Cleaning" in the "Microwave Oven Care" section.</li> </ul>
Turntable alternates rotation directions	<ul style="list-style-type: none"> <li>This is normal and depends on motor rotation at the beginning of the cycle.</li> </ul>
Display shows messages	<ul style="list-style-type: none"> <li>"Enter clock" with flashing digits means there has been a power failure. Reset the clock.</li> <li>A letter followed by a number is an error indicator. Call for assistance.</li> </ul>
Odor and smoke coming from microwave oven during convection cooking	<ul style="list-style-type: none"> <li>This is normal for the first few convection cycles. The odor will dissipate with repeated use.</li> </ul>
Quartz bulb does not appear to be ON	<ul style="list-style-type: none"> <li>This is not unusual. See "Grill Element" in the "Features" section.</li> <li>Is the element still working properly? Place 2 slices of bread on the air fry basket, place the air fry basket on the turntable, and close the door. Program the microwave oven using manual grill - without microwaves - for 4 minutes. The bread should toast dark brown. If it does not toast, call for service.</li> </ul>
Fan running during cooktop usage	<ul style="list-style-type: none"> <li>This is normal. The microwave oven's cooling fan, which is separate from the vent fan, automatically comes on during microwave oven operation to cool the microwave oven. It may also automatically come on and cycle on and off to cool the microwave oven's keypads while the cooktop below is being used.</li> </ul>



Radio, TV, or cordless phone interference	<p>Check the following:</p> <ul style="list-style-type: none"> <li>• Proximity: Move the receiver away from the microwave oven or adjust the radio or TV antenna.</li> <li>• Soil: Make sure the microwave oven door and sealing surfaces are clean.</li> <li>• Frequency: Some 2.4 GHz based cordless phones and home wireless networks may experience static or noise while microwave oven is ON. Use a corded phone, a different frequency cordless phone, or</li> </ul>
---	---

## MICROWAVE HOOD COMBINATION SAFETY

Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

You can be killed or seriously injured if you don't immediately follow instructions.

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed, including the following:

To reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy:

- Read all instructions before using the microwave oven.
- Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found in this section.
- The microwave oven must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" found in this section and in the provided Installation Instructions.
- Install or locate the microwave oven only in accordance with the provided Installation Instructions.
- Some products such as whole eggs in the shell and sealed containers - for example, closed glass jars - are able to explode and should not be heated in the microwave oven.
- Use the microwave oven only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in the microwave oven. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
- As with any appliance, close supervision is necessary when

used by children.

- Do not operate the microwave oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- The microwave oven should be serviced only by qualified service personnel. Call an authorized service company for examination, repair, or adjustment.
- Do not cover or block any openings on the microwave oven.
- Do not store this microwave oven outdoors. Do not use the microwave oven near water - for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
- Do not immerse cord or plug in water.
- Keep cord away from heated surfaces.
- Do not let cord hang over edge of table or counter.
- See door surface cleaning instructions in the "Microwave Oven Care" section.
- To reduce the risk of fire in the oven cavity:
  - Do not overcook food. Be sure to attend the microwave oven when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
  - Remove wire twist-ties from paper or plastic bags before placing bags in oven.
  - If materials inside the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.

- Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
- Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.  
To reduce the risk of injury to persons:
  - Do not overheat the liquid.
  - Stir the liquid both before and halfway through heating it.
  - Do not use straight-sided containers with narrow necks.
  - After heating, allow the container to stand in the microwave oven for a short time before removing the container.
  - Use extreme care when inserting a spoon or other utensil into the container.
- Do not mount over a sink.
- Do not store anything directly on top of the microwave oven when the microwave oven is in operation.
- Oversized foods or oversized metal utensils should not be inserted in the microwave oven as they may create a fire or risk of electric shock.
- Do not clean with metal scouring pads. Pieces can burn off the

pad and touch electrical parts involving a risk of electric shock.

- Do not use paper products when appliance is operated in convection, combination, grill or "PAN BROWN" mode.
- Do not store any materials, other than manufacturer's recommended accessories, in this microwave oven when not in use.
- Do not cover racks or any other part of the microwave oven with metal foil. This will cause overheating of the microwave oven.
- Clean Ventilating Hoods Frequently - Grease should not be allowed to accumulate on hood or filter.
- When flaming foods under the hood, turn the fan on.
- Suitable for use above both gas and electric cooking equipment.
- Intended to be used above ranges with maximum width of 36" (91.44 cm).
- Use care when cleaning the vent-hood filter. Corrosive cleaning agents, such as lye-based oven cleaners, may damage the filter.

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- a. Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to

microwave energy. It is important not to defeat or tamper with the safety interlocks.

- b. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- c. Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
  - 1. Door (bent),
  - 2. Hinges and latches (broken or loosened),
  - 3. Door seals and sealing surfaces.
- d. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## Electrical Requirements

### Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Observe all governing codes and ordinances.

Required:

- A 120 V, 60 Hz AC only, 15 or 20 A electrical supply with a fuse or circuit breaker.

Recommended:

- A time-delay fuse or time-delay circuit breaker.
- A separate circuit serving only this microwave oven.

## GROUNDING INSTRUCTIONS

- For all cord connected appliances:  
The microwave oven must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. The microwave oven is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the microwave oven is properly grounded.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the microwave oven.

**SAVE THESE INSTRUCTIONS**

## Documents / Resources

### References

[Welcome to Whirlpool® Customer Care | Whirlpool](#)

### Download manual

Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc.

[Download Whirlpool WMH78519LV - 1.9 Cu. Ft. Microwave with Air Fry Mode Manual](#)

### Need Assistance?

Do you have a question about the WMH78519LV that isn't answered in the manual?  
Leave your question here.



Stay updated with the latest solutions  
Submit your question



## Related Manuals for Whirlpool WMH78519LV

[Whirlpool WMC50522HV - 2.2 cu. ft. Countertop Microwave with 1,200-Watt Cooking Power Manual](#)

(article)

[Whirlpool WMC30516HV - 1.6 cu. ft. Countertop Microwave with 1,200-Watt Cooking Power Manual](#)

(article)

[Whirlpool WML75011HN - 1.1 cu. ft. Low Profile Microwave Hood Combination Manual](#)

(article)

[Whirlpool WMH32519HV - 1.9 cu. ft. Capacity Steam Microwave with Sensor Cooking Manual](#)

(article)

[Whirlpool WML35011KS - 1.1 cu. ft. Low Profile Microwave Hood Combination Manual](#)

(article)

[Whirlpool WMH78019HV - 1.9 cu. ft. Smart Over-the-Range Microwave with Scan-to-Cook technology Manual](#)

(article)

[Whirlpool WMH53521HV - 2.1 cu. ft. Over-the-Range Microwave with Steam cooking Manual](#)

(article)

[Whirlpool WMHA9019HV - 1.9 cu. ft. Smart Over-the-Range Microwave Manual](#)

(article)

[Whirlpool WML55011HS - 1.1 cu. ft. Low Profile Microwave Hood Combination Manual](#)

(article)

[Whirlpool WMC30309LS - 0.9 Cu. Ft. Capacity Countertop Microwave with 900 Watt Cooking Power Manual](#)

(article)

[Whirlpool WMC10007AB - 0.7 cu. ft. Countertop Microwave with Electronic Touch Controls Manual](#)

(article)

[Whirlpool WMC30311LD - 1.1 Cu. Ft. Capacity Countertop Microwave with 900 Watt Cooking Power Manual](#)

(article)

[Whirlpool WMC20005YB - 0.5 cu. ft. Countertop Microwave Manual](#)

(article)

[Whirlpool UMC5225GZ - 2.2 cu. ft. Countertop Microwave with Greater Capacity Manual](#)

(article)

[Whirlpool WMH31017HS - 1.7 cu. ft. Microwave Hood Combination with Electronic Touch Controls Manual](#)

(article)

[Whirlpool WOC75EC0HS - 6.4 cu. ft. Smart Combination Convection](#)

[Wall Oven with Air Fry Manual](#)

(article)

[Microwave Oven WHIRLPOOL WMH53520AH0 User Instructions](#)

Microwave hood combination (8 pages)

[Microwave Oven Whirlpool WMH76719 Quick Reference Manual](#)

(2 pages)

[Microwave Oven Whirlpool WMH73521CS User Manual](#)

(9 pages)

[Microwave Oven Whirlpool WMH76719CH User Manual](#)

(9 pages)

[Save Article as PDF](#)