



Whirlpool WMH31017HS - 1.7 cu. ft. Microwave Hood Combination with Electronic Touch Controls Manual

Contents

1 OPERATING YOUR MICROWAVE OVEN

1.1 Settings

1.2 Cookware and Dinnerware

1.3 Microwave Oven Use

2 MICROWAVE OVEN CARE

2.1 General Cleaning

2.2 Installing/Replacing Filters and Light Bulbs

3 ACCESSORIES

4 TROUBLESHOOTING

5 MICROWAVE HOOD COMBINATION SAFETY

6 IMPORTANT SAFETY INSTRUCTIONS

7 PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

7.1 Electrical Requirements

7.1.1 GROUNDING INSTRUCTIONS

8 Documents / Resources

8.1 References

8.2 Download manual

OPERATING YOUR MICROWAVE OVEN

If there are 2 packing spacers on top of the vent grille, remove them before using the microwave oven.

Settings

Clock

The clock is a 12-hour (12:00-11:59) clock. Touch CLOCK, enter time, then touch CLOCK or the Start control.

Timer

With the microwave oven in Standby mode, touch the Timer control, enter time, then touch the Timer control or the Start control. Cook functions may be entered while the Timer is counting down. To cancel timer, touch Timer control while the Timer countdown is active in the display.

Control Lock

Activate to avoid unintended start. Touch and hold the Cancel control for about 3 seconds until 2 tones sound and Padlock icon appears in the display. Repeat to unlock control.

Vent Fan

High ("SPd2"), low ("SPd1"), and off. Comes on automatically as cooling fan during any cook function.

Vent Timer (on some models): Set vent fan to run for exactly 30 minutes or to run for only 30 minutes more (off after 30 minutes). The vent fan may be turned off at any time using the Vent Fan control. Touch and hold number keypad "4" for about 3 seconds, until a tone sounds and the vent fan turns on.

Tones

Programming tones and signals. Programming tones may be turned off, or all tones (including end-of-function signals) may be turned off. To turn off programming tones, touch and hold number keypad "1" for about 3 seconds, until a confirmation tone sounds. Repeat to turn back on programming tones. To turn off all tones, touch and hold number keypad "2" for about 3 seconds, until a confirmation tone sounds. Repeat to turn back on all tones.

Demo Mode

Activate to practice using the control without actually turning on the magnetron. Touch and hold number keypad "3" for about 3 seconds, until a confirmation tone sounds and "DEMO" icon lights up in the display. Repeat to deactivate.

Standby Mode

When no functions are working (12-hour clock is displayed or if the clock has not been set), oven will switch to Standby Power mode and dim the LED brightness after 5 minutes. Press any button or open/close the door, and then display will return to the normal brightness.

Turntable

For best cooking results, do not operate the microwave oven without having the turntable in place.

Cookware and Dinnerware

Microwave-Safe

- Browning dish (Follow manufacturer recommendations.)
- Ceramic glass, glass
- China, earthenware (Follow manufacturer recommendations.)
- Melamine (Follow manufacturer recommendations.)
- Paper towels, paper plates, napkins (Use non-recycled paper.)
- Plastic wraps, bags, covers, dinnerware, containers (Follow manufacturer recommendations.)
- Pottery and clay (Follow manufacturer recommendations.)
- Silicone bakeware (Follow manufacturer recommendations.)
- Wax paper

Do Not Use

- Metal cookware and bakeware
- Straw or wicker
- Gold, silver, or pewter

- Non-approved meat thermometers, skewers
- Twist ties
- Foil liners, such as sandwich wrappers
- Staples
- Objects with gold or silver trim or with metallic glaze

To Test Cookware/Dinnerware: Place dish in microwave oven with 1 cup (250 mL) of water beside it. Program 1 minute of cook time at 100%. If dish becomes hot and the water stays cool, do not use the dish in the microwave oven.

Microwave Oven Use

For list of preset programs, see the Cooking Guide label on the front facing of the microwave oven opening, behind the door.

Manual Cooking/Stage Cooking

Touch COOK TIME, touch number keypads to enter time, touch COOK POWER (if not 100%), touch number keypads to enter power level (10-90), then touch the Start control.

If programming additional stages, enter the cook time and cook power of each before touching the Start control.

Preset Cooking

Touch COOK, enter number code of food item, enter quantity, then touch the Start control.

Preset Reheating

Touch REHEAT, enter number code of food item, enter quantity if

needed, then touch the Start control.

Preset Defrosting

Unwrap food. Touch DEFROST, enter number code of food item, enter weight, then touch the Start control.

Soften/Melt

Touch SOFTEN/MELT, enter number code of food item, enter quantity, then touch the Start control.

Popcorn

Touch POPCORN. Enter bag size in ounces: 3.0 or 3.5 (85 or 99 g), then touch Start control.

(Baked) Potato

Touch (BAKED) POTATO. Enter number of potatoes: 1, 2, 3, or 4, about 10 to 13 oz (283 to 367 g) each, then touch Start control.

NOTE: Place fork-pierced potatoes around turntable edges, at least 1" (2.5 cm) apart. Place a single potato to the side of the turntable (not in the center).

Pizza (reheat)

Touch PIZZA. Enter number of slices: 1, 2, or 3, about 4 oz (113 g) each, then touch Start control.

MICROWAVE OVEN CARE

General Cleaning

Before cleaning, make sure all controls are OFF and the

microwave oven is cool. Always follow label instructions on cleaning products.

To avoid damage to the microwave oven caused by arcing due to soil buildup, keep cavity, microwave inlet cover, cooking rack supports, and area where the door touches the frame clean. Clean with mild soap, water, and a soft cloth or sponge or as indicated below.

- Grease filter: mild soap and water or dishwasher
- Door and exterior: mild soap and water, or glass cleaner applied to paper towel
- Control panel: sponge or soft cloth and water
- Stainless steel (on some models): mild soap and water, then rinse with clean water and dry with soft cloth, or use stainless steel cleaner.
- Turntable: mild soap and water or dishwasher

Installing/Replacing Filters and Light Bulbs

- Grease filters: Grease filters are on the underside of microwave oven. Clean monthly. Slide the filter away from the tab area and drop out the filter. To reinstall, place end of the filter into the opening opposite the tab area, swing up the other end, and slide it toward the tab area.
- Charcoal filter: The charcoal filter is behind the vent grille at the top front of the microwave oven. The charcoal filter cannot be cleaned and should be replaced about every 6 months.

Remove 2 screws on the vent grille, slide the vent grille to the left, tilt it forward, lift it out, and remove the filter. To reinstall, place the filter into its 2-hook area with the wire mesh side to the front. Replace the vent grille by inserting the 3 bottom latch hooks of the vent grille into the front holes, tilt the vent grille backwards, slide it to the right, and secure with screws.

- Cooktop light: The cooktop light is located on the underside of the microwave oven and is replaceable. Remove bulb cover screws and open the bulb cover. Replace bulb, close bulb cover, and secure with screws.
- Cavity light: The cavity light bulb is located behind the vent grille at the top front of the microwave oven, under the bulb cover, and is replaceable. Remove 2 screws on the vent grille, slide the vent grille to the left, tilt it forward, and lift it out. Open the bulb cover and replace bulb. To reinstall, close bulb cover. Replace the vent grille by inserting the 3 bottom latch hooks of the vent grille into the front holes, tilt the vent grille backwards, slide it to the right, and secure with screws.

ACCESSORIES

Following is a list of available parts and supplies which may be purchased separately. Please refer to the "Warranty" section for contact information.

Replacement Parts

- Turntable

- Turntable support and rollers
- Turntable hub
- Grease filter
- Charcoal filter
- Cooktop light bulb
- Cavity light bulb

Cleaning Supplies

- Heavy-duty degreaser
- affresh® Kitchen Appliance Cleaner
- affresh® Stainless Steel Cleaner
- affresh® Stainless Steel Wipes

TROUBLESHOOTING

First try the solutions suggested here. If you need further assistance or more recommendations that may help you avoid a service call, refer to the warranty page in this manual and scan the code with your mobile device, or visit

http://www.whirlpool.com/product_help. Contact us by mail with any questions or concerns at the address below:

Whirlpool Brand Home Appliances
Customer eXperience Center
553 Benson Road

Benton Harbor, MI 49022-2692

Please include a daytime phone number in your correspondence.

If you experience	Recommended Solutions
Microwave oven will not operate	<p>Check the following:</p> <ul style="list-style-type: none">• Household fuse or circuit breaker: If a household fuse has blown or a circuit breaker has tripped, replace the fuse or reset the circuit breaker. If the problem continues, call an electrician.• Magnetron: Try to heat 1 cup (250 mL) of cold water for 2 minutes at 100% cooking power. If water does not heat, try the steps in the bullets below. If microwave oven still does not operate, call for service.• Door: Firmly close door. On some models, if a packaging spacer is attached to inside of the door, remove it, then firmly close door. If a message about the door appears in the display, the door has been closed for 5 minutes or more without the microwave oven being started. This occurs to avoid unintended starting of the microwave oven. Open and close the door, then start the cycle.• Control: Make sure control is set properly. Make sure Control Lock is OFF. Make sure Demo mode (on some models) is OFF.• Packing spacers: Make sure to remove the 2 packing spacers from the top of the vent grille before using the microwave oven.
Arcing in the microwave oven	<p>Check the following:</p> <ul style="list-style-type: none">• Soil buildup: Soil buildup on cavity walls, microwave inlet cover, cooking rack supports, and area where the door touches the frame can cause arcing. See "General Cleaning" in the "Microwave Oven Care" section.
Turntable alternates rotation directions	<ul style="list-style-type: none">• This is normal and depends on motor rotation at the beginning of the cycle.
Display shows messages	<ul style="list-style-type: none">• A flashing ":" or "PF" means there has been a power failure. Reset the clock.• A letter followed by a number is an error indicator. Call for assistance.
Fan running during cooktop usage	<ul style="list-style-type: none">• This is normal. The microwave oven's cooling fan, which is separate from the vent fan, automatically comes on during microwave oven operation to cool the microwave oven. It may also automatically come on and cycle on and off to cool the microwave oven's controls while the cooktop below is being used.
Radio, TV, or cordless phone interference	<p>Check the following:</p> <ul style="list-style-type: none">• Proximity: Move the receiver away from the microwave oven, or adjust the radio or TV antenna.• Soil: Make sure the microwave oven door and sealing surfaces are clean.• Frequency: Some 2.4 GHz-based cordless phones and home wireless networks may experience static or noise while microwave oven is ON. Use a corded phone, a different frequency cordless phone or avoid using these items during microwave oven operation.

MICROWAVE HOOD COMBINATION SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

You can be killed or seriously injured if you don't immediately follow instructions.

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed, including the following:

To reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy:

- Read all instructions before using the microwave oven.
- Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found in this section.

- The microwave oven must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" found in this section and in the provided Installation Instructions.
- Install or locate the microwave oven only in accordance with the provided Installation Instructions.
- Some products such as whole eggs in the shell and sealed containers - for example, closed glass jars - are able to explode and should not be heated in the microwave oven.
- Use the microwave oven only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in the microwave oven. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
- As with any appliance, close supervision is necessary when used by children.
- Do not operate the microwave oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- The microwave oven should be serviced only by qualified service personnel. Call an authorized service company for examination, repair, or adjustment.
- Do not cover or block any openings on the microwave oven.
- Do not store this microwave oven outdoors. Do not use the microwave oven near water - for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.

- Do not immerse cord or plug in water.
- Keep cord away from heated surfaces.
- Do not let cord hang over edge of table or counter.
- See door surface cleaning instructions in the "Microwave Oven Care" section.
- To reduce the risk of fire in the oven cavity:
 - Do not overcook food. Carefully attend the microwave oven when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - Remove wire twist-ties from paper or plastic bags before placing bags in oven.
 - If materials inside the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
 - Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
- Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.**
To reduce the risk of injury to persons:

- Do not overheat the liquid.
 - Stir the liquid both before and halfway through heating it.
 - Do not use straight-sided containers with narrow necks.
 - After heating, allow the container to stand in the microwave oven for a short time before removing the container.
 - Use extreme care when inserting a spoon or other utensil into the container.
-
- Do not mount over a sink.
 - Do not store anything directly on top of the microwave oven when the microwave oven is in operation.
 - Clean Ventilating Hoods Frequently - Grease should not be allowed to accumulate on hood or filter.
 - When flambéing foods under the hood, turn the fan on.
 - Suitable for use above both gas and electric cooking equipment.
 - Intended to be used above ranges with maximum width of 36" (91.44 cm).
 - Use care when cleaning the vent-hood filter. Corrosive cleaning agents, such as lye-based oven cleaners, may damage the filter.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO

EXCESSIVE MICROWAVE ENERGY

- a. Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- b. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- c. Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
 - 1. Door (bent),
 - 2. Hinges and latches (broken or loosened),
 - 3. Door seals and sealing surfaces.
- d. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

State of California Proposition 65 Warnings:

This product contains one or more chemicals known to the State of California to cause cancer.

This product contains one or more chemicals known to the State of California to cause birth defects or other reproductive harm.

Electrical Requirements

Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Observe all governing codes and ordinances.

Required:

- A 120-volt, 60 Hz, AC-only, 15- or 20-amp electrical supply with a fuse or circuit breaker.

Recommended:

- A time-delay fuse or time-delay circuit breaker.
- A separate circuit serving only this microwave oven.

GROUNDING INSTRUCTIONS

- For all cord connected appliances:
The microwave oven must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric

shock by providing an escape wire for the electric current. The microwave oven is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the microwave oven is properly grounded. Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the microwave oven.

IF YOU NEED SERVICE:

1. Before contacting us to arrange service, please determine whether your product requires repair. Some questions can be addressed without service. Please take a few minutes to review the Troubleshooting or Problem Solver section of the Use and Care Guide, scan the QR code on the right to access additional resources, or visit www.whirlpool.com/product_help.
2. All warranty service is provided exclusively by our authorized Whirlpool Service Providers. In the U.S. and Canada, direct all requests for warranty service to:
Whirlpool Customer eXperience Center
In the U.S.A., call 1-800-253-1301. In Canada, call

1-800-807-6777.

If outside the 50 United States or Canada, contact your authorized Whirlpool dealer to determine whether another warranty applies.

Register your microwave oven at www.whirlpool.com.

Documents / Resources

References

[Home - Product Help | Whirlpool](#)

[Home, Kitchen & Laundry Appliances & Products | Whirlpool](#)

Download manual

Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc.

[Download Whirlpool WMH31017HS - 1.7 cu. ft. Microwave Hood Combination with Electronic Touch Controls Manual](#)

Need Assistance?

Do you have a question about the WMH31017HS that isn't answered in the manual?

Leave your question here.

■ ■

Stay updated with the latest solutions

Submit your question

Related Manuals for Whirlpool WMH31017HS

[Whirlpool WMC50522HV - 2.2 cu. ft. Countertop Microwave with 1,200-Watt Cooking Power Manual](#)

(article)

[Whirlpool WMC30516HV - 1.6 cu. ft. Countertop Microwave with 1,200-Watt Cooking Power Manual](#)

(article)

[Whirlpool WML75011HN - 1.1 cu. ft. Low Profile Microwave Hood Combination Manual](#)

(article)

[Whirlpool WMH32519HV - 1.9 cu. ft. Capacity Steam Microwave with Sensor Cooking Manual](#)

(article)

[Whirlpool WML35011KS - 1.1 cu. ft. Low Profile Microwave Hood Combination Manual](#)

(article)

[Whirlpool WMH78019HV - 1.9 cu. ft. Smart Over-the-Range Microwave with Scan-to-Cook technology Manual](#)

(article)

[Whirlpool WMH53521HV - 2.1 cu. ft. Over-the-Range Microwave with Steam cooking Manual](#)

(article)

[Whirlpool WMHA9019HV - 1.9 cu. ft. Smart Over-the-Range Microwave Manual](#)

(article)

[Whirlpool WML55011HS - 1.1 cu. ft. Low Profile Microwave Hood Combination Manual](#)

(article)

[Whirlpool WMC30309LS - 0.9 Cu. Ft. Capacity Countertop Microwave with 900 Watt Cooking Power Manual](#)

(article)

[Whirlpool WMC10007AB - 0.7 cu. ft. Countertop Microwave with Electronic Touch Controls Manual](#)

(article)

[Whirlpool WMC30311LD - 1.1 Cu. Ft. Capacity Countertop Microwave with 900 Watt Cooking Power Manual](#)

(article)

[Whirlpool WMH78519LV - 1.9 Cu. Ft. Microwave with Air Fry Mode Manual](#)

(article)

[Whirlpool WMC20005YB - 0.5 cu. ft. Countertop Microwave Manual](#)

(article)

[Whirlpool UMC5225GZ - 2.2 cu. ft. Countertop Microwave with Greater Capacity Manual](#)

(article)

[Whirlpool WOC75EC0HS - 6.4 cu. ft. Smart Combination Convection Wall Oven with Air Fry Manual](#)

(article)

[Microwave Oven Whirlpool WMH31017HS User Manual](#)

Microwave hood combination (6 pages)

[Microwave Oven Whirlpool WMH31017AB Warranty Information](#)

Warranty information (1 page)

[Microwave Oven Whirlpool WMH32519FB User Manual](#)

Microwave hood combination (8 pages)

[Microwave Oven Whirlpool WMH32519H User Manual](#)

Microwave hood combination (8 pages)

[Save Article as PDF](#)