

Battery Charging Notice - Toshiba Satellite P30-132 User Manual

Toshiba satellite p30-132: user guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
Table Of Contents
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165



-

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Time

The following table shows the time required to fully charge a discharged battery.

Charging time (hours)

Battery type

Battery pack

RTC battery

The charging time when the computer is on is affected by ambient temperature, the temperature of the computer and how you use the computer.

If you make heavy use of external devices, for example, the battery might scarcely charge at all during operation. Refer also to the section Maximizing battery operating time.

Battery charging notice

The battery may not charge right away under the following conditions:



The battery is extremely hot or cold. To make sure the battery charges to its full capacity, charge the battery at room temperature of 10° to 30°C (50° to 86°F).



The battery is nearly completely discharged. Leave the AC adaptor connected for a few minutes and the battery should begin charging.

Once a battery pack is fully charged, it is recommended that you operate the computer only on battery power until the battery pack completely discharges. Doing so extends battery life and helps ensure accurate monitoring of battery capacity.

The Battery indicator may show a rapid decrease in battery operating time when you try to charge a battery under the following conditions:



The battery has not been used for a long time.



The battery has completely discharged and been left in the computer for a long time.



A cool battery is installed in a warm computer.

User's Manual



Power on

about 12 or longer

about 24

Power and Power-Up Modes

Power off

about 4 or longer

about 24 with AC or

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

107

108

109

110

Quick Links:

[Hardware](#)

[Specifications](#)

Related Manuals for Toshiba Satellite P30-132

[Laptop Toshiba P30-S6362ST User Manual](#)

P30-s6362st user's guide (230 pages)

[Laptop Toshiba Satellite P30 Maintenance Manual](#)

Toshiba personal computer (208 pages)

[Laptop Toshiba Satellite P30 User Manual](#)

(170 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

[Laptop Toshiba dynabook P53 Series User Manual](#)

(129 pages)

[Laptop Toshiba A205-S5800 User Manual](#)

A205-s5800 user's guide (245 pages)

[Laptop Toshiba Satellite L650-0QP01X Resource Manual](#)

Toshiba satellite l650-0qp01x: reference guide (36 pages)

[Laptop Toshiba P740-BT4N22 User Manual](#)

P740-bt4n22 user's guide (246 pages)

[Laptop Toshiba Satellite A305-S6825 Resource Manual](#)

Toshiba satellite a305-s6825: reference guide (52 pages)

[Laptop Toshiba A100-S2211TD User Manual](#)

A100-s2211td user's guide (289 pages)

[Laptop Toshiba L300-ST3502 User Manual](#)

L300-st3502 user's guide (230 pages)

Related Content for Toshiba Satellite P30-132

[Satellite L500 Battery Charging Notice](#)

Toshiba Satellite L500

[Satellite Pro R50-B Series Battery Charging Notice](#)

Toshiba Satellite Pro R50-B Series

[C70-B Battery Charging Notice](#)

Toshiba C70-B

[C70-C Battery Charging Notice](#)

Toshiba C70-C

[Satellite S50-C Series Battery Charging Notice](#)

Toshiba Satellite S50-C Series

[Satellite Radius 14 L40W-C Battery Charging Notice](#)

Toshiba Satellite Radius 14 L40W-C

[L70-C Battery Charging Notice](#)

Toshiba L70-C

[Satellite C40-B Battery Charging Notice](#)

Toshiba Satellite C40-B

This manual is also suitable for:

[Satellite p30-rv2](#)[Satellite p30](#)[Satellite p30-s6362t](#)[Satellite p35-sp609](#)[Satellite p35-sp611](#)[Psp30c-jc100e](#) ... [Show all](#)