

Diskette Drive; Sound System; Pc Card - Toshiba Satellite P30-132 User Manual

Toshiba satellite p30-132: user guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
Table Of Contents
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165



-

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Diskette drive

For more information on the diskette drive, refer to Chapter 2, *The Grand Tour*. For information on diskette care refer to Chapter 4, *Operating Basics*.

Problem

Some programs run correctly, but others do not.

You cannot access the diskette drive probably

causing the.

Sound system

Refer also to documentation for your audio devices.

Problem

No sound is heard.

Annoying sound
is heard.

PC Card

Refer also to Chapter 7, Optional Devices.

Problem

PC Card error occurs.

User's Manual

Procedure

The software or hardware configuration may be causing a problem. Make sure the hardware configuration match's your software's needs.

Try another disk. If you can access this disk, the original disk (not the disk drive) is problem.

If problems persist, contact your dealer.

Procedure

Adjust the volume control dial.

Check the software volume settings.

Make sure the headphone connection is secure.

If problems persist, contact your dealer.

You may be experiencing feedback. Refer to Using the microphone in Chapter 4, Operating *Basics*.

If problems persist, contact your dealer.

Procedure

Reseat the PC Card to make sure it is firmly connected.

Make sure the connection between the external device and the card is firm.

Check the card's documentation.

If problems persist, contact your dealer.

Troubleshooting

8-13

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1

...

140

141

142

143

Quick Links:

[Hardware](#)

[Specifications](#)

Related Manuals for Toshiba Satellite P30-132

[Laptop Toshiba P30-S6362ST User Manual](#)

P30-s6362st user's guide (230 pages)

[Laptop Toshiba Satellite P30 Maintenance Manual](#)

Toshiba personal computer (208 pages)

[Laptop Toshiba Satellite P30 User Manual](#)

(170 pages)

[Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

[Laptop Toshiba dynabook P53 Series User Manual](#)

(129 pages)

[Laptop Toshiba A205-S5800 User Manual](#)

A205-s5800 user's guide (245 pages)

[Laptop Toshiba Satellite L650-0QP01X Resource Manual](#)

Toshiba satellite l650-0qp01x: reference guide (36 pages)

[Laptop Toshiba P740-BT4N22 User Manual](#)

P740-bt4n22 user's guide (246 pages)

[Laptop Toshiba Satellite A305-S6825 Resource Manual](#)

Toshiba satellite a305-s6825: reference guide (52 pages)

[Laptop Toshiba A100-S2211TD User Manual](#)

A100-s2211td user's guide (289 pages)

[Laptop Toshiba L300-ST3502 User Manual](#)

L300-st3502 user's guide (230 pages)

Related Content for Toshiba Satellite P30-132

[T1100 PLUS Diskette Drive Parts](#)

Toshiba T1100 PLUS

[Satellite A500 series Usb Floppy Diskette Drive](#)

Toshiba Satellite A500 series

[Satellite A205 Series Connecting An Optional External Diskette Drive](#)

Toshiba Satellite A205 Series

[Satellite L630 Series Diskette Drive](#)

Toshiba Satellite L630 Series

[Satellite L500 Usb Floppy Diskette Drive](#)

Toshiba Satellite L500

[Portege 2010 Connecting The Optional External Usb Diskette Drive](#)

Toshiba Portege 2010

[Tecra 500CS Connect The External Diskette Drive](#)

Toshiba Tecra 500CS

[L550 Usb Floppy Diskette Drive](#)

Toshiba L550

This manual is also suitable for:

[Satellite p30-rv2](#)[Satellite p30](#)[Satellite p30-s6362t](#)[Satellite p35-sp609](#)[Satellite p35-sp611](#)[Psp30c-jc100e](#) ... [Show all](#)