



# Dialing Properties; Connecting; Disconnecting - Toshiba Satellite P30-132 User Manual

Toshiba satellite p30-132: user guide



1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
Table Of Contents
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165



- 

[Table of Contents](#)



- 

Troubleshooting

•

## Bookmarks





---

## Dialing Properties

Select this item to display the dialing properties.

*If you are using the computer in Japan, technical regulations described in the Telecommunications Business Law require that you select Japan region mode. It is illegal to use the modem in Japan with any other selection.*



## Connecting

To connect the internal modem cable(optional), follow the steps below.

**■** In case of a lightning storm, unplug the modem cable(optional) from the telephone jack.

**■** Do not connect the modem to a digital telephone line. A digital line will damage the modem.



1. Plug one end of the modular cable into the modem jack.
2. Plug the other end of the modular cable into a telephone jack

Do not pull on the cable or move the computer while the cable is connected.

If you use a storage device such as a DVD-ROM drive or HDD connected to a 16-bit PC card, modem speed might be slow or communication might be interrupted.




If modem speed is low or communication is interrupted when you are using modem, please check and set CPU speed to Maximum by TOSHIBA Power Saver utility.

## Disconnecting

To disconnect the internal modem cable(optional), follow the steps below.

1. Pinch the lever on the connector in the telephone jack and pull out the connector.
2. Disconnect the cable from the computer in the same manner.

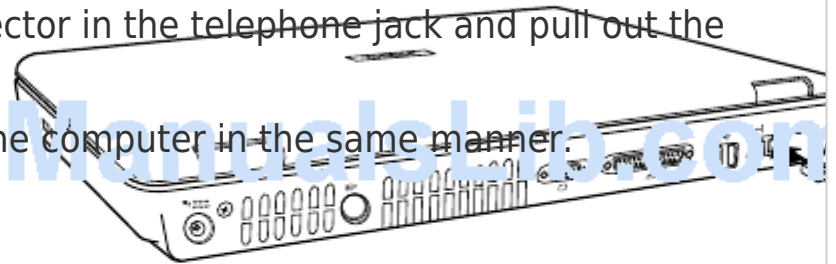

User's Manual

Connecting the internal modem

Operating Basics

4-23

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
87  
88  
89  
90  
91  
92  
93  
94



Quick Links:

[Hardware](#)

[Specifications](#)

## Related Manuals for Toshiba Satellite P30-132

[Laptop Toshiba P30-S6362ST User Manual](#)

P30-s6362st user's guide (230 pages)

[Laptop Toshiba Satellite P30 Maintenance Manual](#)

Toshiba personal computer (208 pages)

[Laptop Toshiba Satellite P30 User Manual](#)

(170 pages)

[Laptop Toshiba P300-ST3014 User Manual](#)

P300-st3014 user's guide (231 pages)

[Laptop Toshiba Satellite P300-0E2028 Resource Manual](#)

Toshiba satellite p300-0e2028: reference guide (52 pages)

[Laptop Toshiba SATELLITE P300 User Manual](#)

Portable personal computer (208 pages)

[Laptop Toshiba Satellite A305-S6839 User Manual](#)

Portable personal computer (226 pages)

[Laptop Toshiba P300 User Manual](#)

Notebook computer (199 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

[Laptop Toshiba dynabook P53 Series User Manual](#)

(129 pages)

[Laptop Toshiba A205-S5800 User Manual](#)

A205-s5800 user's guide (245 pages)

[Laptop Toshiba Satellite L650-0QP01X Resource Manual](#)

Toshiba satellite l650-0qp01x: reference guide (36 pages)

[Laptop Toshiba P740-BT4N22 User Manual](#)

P740-bt4n22 user's guide (246 pages)

[Laptop Toshiba Satellite A305-S6825 Resource Manual](#)

Toshiba satellite a305-s6825: reference guide (52 pages)

[Laptop Toshiba A100-S2211TD User Manual](#)

A100-s2211td user's guide (289 pages)

[Laptop Toshiba L300-ST3502 User Manual](#)

L300-st3502 user's guide (230 pages)

## Related Content for Toshiba Satellite P30-132

[Satellite A200 series Dialing Properties](#)

Toshiba Satellite A200 series

[A200 Series Dialing Properties](#)

Toshiba A200 Series

[Satellite L350 series Dialing Properties](#)

Toshiba Satellite L350 series

[TECRA M3 Dialing Properties](#)

Toshiba TECRA M3

[tecra s3 Dialing Properties](#)

Toshiba tecra s3

[Satellite A500 Dialing Properties](#)

Toshiba Satellite A500

[Qosmio G10 Dialing Properties](#)

Toshiba Qosmio G10

[S300L Dialing Properties](#)

Toshiba S300L

This manual is also suitable for:

[Satellite p30-rv2](#)[Satellite p30](#)[Satellite p30-s6362t](#)[Satellite p35-sp609](#)[Satellite p35-sp611](#)[Psp30c-jc100e](#) ... [Show all](#)