

TOSHIBA

Toshiba 24 WN3D Series Operating Instructions Manual

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

--

Quick Links

[1 Tv Control & Operation \(**\)](#)

[2 Settings](#)

[Download this manual](#)



O
I

TOSHIBA

PERATING

NSTRUCTIONS

32/43 LA2B Series

32/43 LA3B Series

24/32/43 WA20 Series

24/32/43 WA3B Series

24/32 WN3D Series

40 LA32 Series

24/32 WA20 Series

32/42/43 LA20 Series

TOSHIBA

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 24 WN3D Series

[TV Toshiba 24WA2063DAX Quick Start Manual](#)

(49 pages)

[LCD TV Toshiba 32 LA2B Series Quick Start Manual](#)

(49 pages)

[Lantern Toshiba 24 WA20 Series Quick Start Manual](#)

(49 pages)

[TV Toshiba WA3B63DG Operating Instructions Manual](#)

(35 pages)

[TV Toshiba 24W33B Service Manual](#)

(90 pages)

[TV Toshiba 24D153*D Quick Start Manual](#)

Led backlight lcd tv (116 pages)

[TV Toshiba 24D1633DB Operating Instructions Manual](#)

With remote control (12 pages)

[TV Toshiba 24D M8 Series Operating Instructions Manual](#)

(30 pages)

[TV Toshiba 32W1863DG Operating Instructions Manual](#)

(31 pages)

[TV Toshiba 32 L28 Series Quick Start Manual](#)

(9 pages)

[TV Toshiba 24 WD2A Series Operating Instructions Manual](#)

(45 pages)

[TV Toshiba 24W3753DB Operating Instructions Manual](#)

Colour television with remote control (37 pages)

[TV Toshiba 49L1763DA Operating Instructions Manual](#)

Colour television with remote control (31 pages)

[TV Toshiba 24/32 WL2C Series Operating Instructions Manual](#)

(50 pages)

[TV Toshiba 32/42/43 L21 Series Operating Instructions Manual](#)

(52 pages)

[TV Toshiba 24WL3A63DB Quick Start Manual](#)

(16 pages)

Summary of Contents for Toshiba 24 WN3D Series

[Page 1](#) PERATING NSTRUCTIONS 32/43 LA2B Series 32/43 LA3B Series 24/32/43 WA2B Series 24/32/43 WA3B Series 24/32 WN3D Series 40 LA32 Series 24/32 WA20 Series 32/42/43 LA20 Series...

[Page 2: Table Of Contents](#)

Software Update34 Table of Contents Troubleshooting & Tips35 Safety Information2 Troubleshooting & Tips35 Introduction4 VGA Input Typical Display Modes 36 Features4 AV and HDMI Signal Compatibility 37 Stand Installation &...

[Page 3: Safety Information](#)

• Do not expose the TV to direct sunlight or do Safety Information not place open flames such as lit candles on the top of or near the TV. • Do not place any heat sources such as electric CAUTION heaters, radiators, etc. near the TV set. RISK OF ELECTRIC SHOCK • Do not place the TV on the floor and inclined DO NOT OPEN surfaces.

[Page 4](#) WARNING WALL MOUNTING WARNINGS Do not ingest the battery, Chemical Burn Hazard • Read the instructions before mounting your TV on the wall. This product or the accessories supplied with the product may contain a coin/button cell battery. If the • The wall mount kit is optional. You can obtain from coin/button cell battery is swallowed, it can cause your local dealer, if not supplied with your TV.

[Page 5: Introduction](#)

Stand Installation & Introduction Wall Mounting Thank you for choosing our product. You'll soon be enjoying your new TV. Please read these instructions Assembling / Removing the pedestal carefully. They contain important information which will Preparations help you get the best from your TV and ensure safe Take out the pedestal(s) and the TV from the packing and correct installation and operation.

[Page 6: Antenna Connection](#)

Antenna Connection Connect the aerial or cable TV plug to the AERIAL INPUT (ANT) socket or satellite plug to the SATELLITE INPUT (LNB) socket located on the rear side of the TV. Rear side of the TV 1. Satellite (**) 2.

[Page 7: Other Connections](#)

Other Connections If you want to connect a device to the TV, make sure that both the TV and the device are turned off before making any connection. After the connection is done, you can turn on the units and use them. To enable VGA/Component audio, Connector Type Cables Device you will need to use the back audio inputs with a VGA/Component Component audio cable for audio connection.

[Page 8: Turning On/Off The Tv \(**\)](#)

Turning On/Off the TV (**) Turning On/Off the TV (**) Connect power Connect power IMPORTANT: The TV set is designed to operate on IMPORTANT: The TV set is designed to operate on 220-240V AC, 50 Hz socket. 220-240V AC, 50 Hz socket. After unpacking, allow the TV set to reach the ambient After unpacking, allow the TV set to reach the ambient room temperature before you connect the set to the...

[Page 9: Tv Control & Operation \(**\)](#)

To switch the TV into standby To turn on the TV: Press the centre of the joystick in, the TV will turn on. The TV cannot be switched into standby mode via control button. Press and hold the Standby button on Operation with the Remote Control the remote control.

[Page 10](#) Operation with the Remote Control application etc. Press Return/Back to return to the previous menu screen. Press the Menu button on your remote control to Input Selection display Live TV settings menu when in Live TV mode. Press Home button to display or return to the Home Once you have connected external systems to your Screen of the Android TV.

[Page 11: Remote Control \(**\)](#)

Remote Control (**) Standby: Quick Standby / Standby / On Numeric buttons: Switches the channel in Live TV mode, enters a number or a letter in the text box on the screen Language: Switches among sound modes (analogue TV), displays and changes audio language (digital TV, where available) Home: Opens the Home Screen Mute: Completely turns off the volume of the TV...

[Page 12](#) Remote Control (**) Standby: Quick Standby / Standby / On Numeric buttons: Switches the channel in Live TV mode, enters a number or a letter in the text box on the screen Language: Switches among sound modes (analogue TV), displays and changes audio language (digital TV, where available) Volume +/- Microphone: Activates the microphone on the remote...

[Page 13](#) Remote Control (**) Standby: Quick Standby / Standby / On Numeric buttons: Switches the channel in Live TV mode, enters a number or a letter in the text box on the screen

Language: Switches among sound modes (analogue TV), displays and changes audio language (digital TV, where available) Volume +/- Microphone: Activates the microphone on the remote...

[Page 14: Initial Setup Wizard](#)

5. Network Connection Initial Setup Wizard You will be directed to the next step automatically, if you Note: Follow the on-screen instructions to complete the initial connect your TV to internet via Ethernet at this point. If setup process. Use the directional buttons and the OK button not, available wireless networks will be searched and on the remote to select, set, confirm and proceed.

[Page 15](#) also view Terms of Service, Privacy Policy and can perform a channel search later using the related Channels menu options. Play Terms of Service on this screen. To display the content an internet connection is needed. A message The next step is the selection of the tuner mode. Select will be displayed mentioning the web site address on your tuner preference to install channels for Live TV which this information can also be viewed, in case...

[Page 16: Initial Setup Wizard](#)

DVBS Configuration Setting screen will be displayed network scan, make sure that you have adjusted the next. First Antenna type(*) should be set. Universal, Frequency, Symbol Rate (Ksym/s) and Polarisation Single Cable and Jess Singlecable options are parameters under the Transponder option accurately available.

[Page 17](#) 3. Search for accessories and enter the code you see on your TV screen into the related entry field. Then follow the instructions A search for accessories will be performed after on your device and complete the process. the initial setup has started. Follow the on-screen instructions to pair your remote control (depends on •...

[Page 18](#) 12. Select TV Mode Satellite (**) If Satellite option is selected, Satellite Type screen In the following step of the initial setup, you can set the TV's operation mode either as Home or as Store. will be displayed next. Preferred Satellite and General Store option will configure your TV's settings for store Satellite options will be available.

[Page 19: Home Screen](#)

If Load Preset List option is selected in the previous selection in the initial setup the Home menu may step next steps will be skipped and the preset channel contain different items. list installation will start. If the correct satellite has not The available options of the Home Screen are posi- been selected for SatcoDX installation, a warning toned in rows.

[Page 20: Live Tv Mode Menu Content](#)

CI Card: Display available menu options of the CI card Live TV Mode Menu Content in use. This item may not be available depending on the input source setting. Switch the TV to Live TV mode first and then press the Menu button on the remote to see Live TV menu Advanced Options options.

[Page 21: Record](#)

Subtitle Tracks: Set your subtitle track preference, Set TimeShift: Tag the selected USB storage if any available. device or a partition on it for time shift recording. Digital Subtitle Language: Set one of the listed Set PVR: Tag the selected USB storage device or language options as first digital subtitle language a partition on it for PVR.

[Page 22: Settings](#)

Manual Service Update: Start a service update Settings manually. You can access the Settings menu from the Home LCN: Set your preference for LCN. LCN is the Logical Screen or from the TV options menu in Live TV mode. Channel Number system that organizes available broadcasts in accordance with a recognizable channel Network &...

[Page 23](#) OK. Scan Mode, Channel Scan Type, Frequency Press Back to cancel. This item may not be visible, and Network ID options may be available. The options depending on whether or not the last watched channel may vary depending on the operator and the Scan was analogue.

[Page 24: Accounts & Sign In](#)

if available. Depending on the channel other options depending on whether or not the last watched channel may also be editable. You can press the Blue button was digital. to delete the highlighted channel. Second Audio Language Clear Channel List: Delete all channels stored in the Set one of the listed language options as second channel list of the selected channel installation mode.

[Page 25: Device Preferences](#)

- Set the TV to disallow or warn before installation of No Signal Auto Power Off: Set the behaviour of apps that may cause harm. the TV, when no signal is detected from the currently set input source. Define a time after which you want Device Preferences your TV to turn itself off or set as Off to disable.

[Page 26](#) Adaptive Luma Control: Adaptive Luma control TV screen. Highlight this option and press OK to adjust contrast settings globally according to turn this function on or off. content histogram in order to provide deeper black Sound Style: For easy sound adjustment, you and brighter white perception. Set your Adaptive can select a preset setting.

[Page 27: Bluetooth Remotes & Accessories](#)

Home screen: Customise your Home Screen. Select on-screen action, body language, expressions and channels which will be displayed on the Home Screen, movements for people with visual disabilities. enable/disable video and audio previews. Organise Speaker: Turn this option on if you want to hear apps and games, change their order or get more of the audio commentary through the TV speakers.

[Page 28](#) the list page by page, or press the Green button to To add the currently watched channel to one of your scroll down. favourite lists select the desired favourite list as described above and press the Menu button on the If desired, you can filter or sort the channels or find a remote.

[Page 29: Connecting To The Internet](#)

Wireless Connection Connecting to the Internet A wireless LAN modem/router is required to connect the TV to the Internet via wireless LAN. You can access the Internet via your TV, by connecting Highlight Wi-Fi option in the Network & Internet menu it to a broadband system. It is necessary to configure and press OK to enable wireless connection.

[Page 30: Connecting To The Internet](#)

values for the wireless standards. They are not the A network with hidden SSID can not be detected by actual speeds of data transmission. other devices. If you want to connect to a network with hidden SSID, highlight the Add new network option The location where the transmission is most effective under the Settings>Network &...

[Page 31](#) frame. You will also be able to copy, paste and delete Stop: Stop the playback. the media files using the related options of this menu, if Programme +: Switch to next file. a FAT32 formatted USB storage device is connected to Programme -: Switch to previous file. the TV. Additionally you can switch the viewing style by selecting either Normal Parser or Recursive Parser. Back/Return: Return to the media player screen.

[Page 32: From Usb Connection](#)

Pause/Play: Pause and resume the playback or the playback will start from the beginning. Highlight an slide show. option and press OK to change the setting. Repeat: Set the repeat option. Highlight an option and Seek: Jump to a specific time of the video file. Use press OK to change the setting. If Repeat One option is the numeric and directional buttons to enter the time selected the current media file will be repeatedly played and press OK.

[Page 33: Usb Recording \(**\)](#)

Please note that any commercial use of the recording will erase ALL the data on it and its file system will be function could lead to copyright infringement of converted to FAT32. In most cases operation errors will authors' rights. Toshiba asks you to respect the be fixed after a format but you will lose ALL your data. intellectual property rights of third parties. Schedule List...

[Page 34: Cec](#)

the Replace option, the timer will be saved with the The TV supports also ARC(Audio Return Channel) new settings. If you choose the Add option, the timer feature. This feature is an audio link meant to replace will be added to the list as a new timer. Highlight other cables between the TV and the audio system Replace or Add according to your preference and (A/V receiver or speaker system).

[Page 35: Hbbtv System](#)

On your smartphone or tablet, open an app that within 5 minutes after it is switched into quick standby supports Google Cast mode and search for channels. Standby LED will blink during this process. Once the standby LED stops Tap the Google Cast icon blinking the search process is completed.

[Page 36: Troubleshooting & Tips](#)

No sound / poor sound Troubleshooting & Tips • Make sure that the sound settings are correctly set. TV does not switch on • Make sure that all cables are properly connected. • Make sure the power cord is plugged in securely to • Make sure that the volume is not muted or set to power outlet.

[Page 37: Vga Input Typical Display Modes](#)

No picture / distorted picture VGA Input Typical • Make sure that the antenna is properly connected Display Modes to the TV. • Make sure that the antenna cable is not damaged. The following table is an illustration of some of the typical video display modes.

[Page 38: Av And Hdmi Signal Compatibility](#)

AV and HDMI Signal Compatibility Source Supported Signals SECAM Composite / Back AV NTSC4.43 NTSC3.58 480i, 480p 60Hz 576i, 576p 50Hz Component / YPbPr 720p 50Hz,60Hz 1080i 50Hz,60Hz 480i 60Hz 480p 60Hz 576i, 576p 50Hz 720p 50Hz,60Hz HDMI 1080i 50Hz,60Hz 24Hz, 25Hz, 30Hz, 1080p 50Hz, 60Hz...

[Page 39: Supported File Formats For Usb Mode](#)

Supported File Formats for USB Mode Video Video Codec Resolution Bit Rate Profile Container MKV (.mkv) 1920x1080@60fps 40Mbps Profile0,2 WebM (.webm) MP4 (.mp4, .mov), 3GPP (.3gpp, .3gp), Main/Main10 MPEG transport stream (.ts, .trp, .tp), HEVC/H.265 1920x1080@60fps 50Mbps Profile, High Tier MKV (.mkv), WebM (.webm), FLV (.flv), @Level 4.1 AVI (.avi), H265 (.265) MPEG program stream (.DAT, .VOB, .MPG, .MPEG), MPEG transport stream...

[Page 40: Audio](#)

Video Codec Resolution Bit Rate Profile Container AVI (.avi), 3GPP (.3gpp, .3gp), MP4 Motion JPEG 640x480@30fps 10Mbps (.mp4, .mov), MKV (.mkv), WebM (.webm), FLV (.flv), OGM (.ogm) MKV (.mkv), WebM (.webm), FLV (.flv), 1920x1080@60fps 20Mbps 3GPP (.3gpp, .3gp), MP4 (.mp4, .mov), AVI (.avi), OGM (.ogm) RM (.rm, .rmvb), MKV (.mkv), WebM RV30/RV40 1920x1080@60fps 40Mbps...

[Page 41](#) Audio Codec Sample rate Channel Bit Rate Container Note AAC-LC: AAC (.aac), AVI (.avi), MKV (.mkv, .mka), WebM (.webm), 3GPP 12kbps~ (.3gpp, .3gp), MP4 (.mp4, .mov, 576kbps m4a), MPEG transport stream (.ts, AAC-LC, HEAAC 8KHz ~ 48KHz Up to 5.1 V1 6kbps ~ .trp, .tp), MPEG program stream (.DAT, .VOB, .MPG, .MPEG), FLV...

[Page 42: Picture](#)

Audio Codec Sample rate Channel Bit Rate Container Note 8KHz 6Kbps ~ 11.025KHz, LBR (cook) Up to 5.1 RM (.rm, .rmvb, .ra) 128Kbps 22.05KHz, 44.1KHz MKV (.mkv, .mka), WebM (.webm), FLAC 8KHz~96KHz Up to 7.1 < 1.6Mbps FLAC (.flac) 6Kbps ~ MKV (.mkv, .mka) OPUS 8KHz ~ 48KHz...

[Page 43: Supported Dvi Resolutions](#)

External File Extension Subtitle Parser Remark .srt SubRip SubStation Alpha .ssa/ .ass Advanced SubStation Alpha .smi SAMI MicroDVD .sub SubIdx (VobSub) .txt TMPlayer Supported DVI Resolutions When connecting devices to your TV's connectors by using DVI converter cable(DVI

to HDMI cable - not supplied), you can refer to the following resolution information.

[Page 44](#) Mobil TV Instructions (**) Switching On the TV Using Car Plug In order to supply the power via the cigarette lighter socket of your vehicle, plug one end of the cigarette lighter adaptor cable (car plug - can be purchased separately if not supplied with the TV) into the vehicle socket and plug the other end of the adaptor cable into the DC 12V terminal on the backside of the TV.

[Page 45: Licences](#)

Licences The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. Manufactured under licence from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

[Page 46: Disposal Information](#)

Disposal Information The following information is only for EU-member states: Disposal of products The crossed out wheeled dust bin symbol indicates that products must be collected and disposed of separately from household waste. Integrated batteries and accumulators can be disposed of with the product. They will be separated at the recycling centres. The black bar indicates that the product was placed on the market after August 13, 2005. By participating in separate collection of products and batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health.

[Page 47: Reach Information](#)

Restriction of Chemicals), entered into force on 1 June 2007. Toshiba will meet all REACH requirements and is committed to provide our customers with information about the presence in our articles of substances included on the candidate list according to REACH regulation.

This manual is also suitable for:

43 la2b series32 la3b series43 la3b series24 wa2b series32 wa2b series43 wa2b series ... [Show all](#)