 


Exit Menu - Asus PRIME H510T2-CSM R2.0 Manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30



•

•

Bookmarks




2.3

Exit menu

The Exit menu items allow you to load the optimal default values for the BIOS items, and save or discard your changes to the BIOS items.

Load Optimized Defaults

This option allows you to load the default values for each of the parameters on the Setup menus. When you select this option or if you press <F5>, a confirmation window appears.

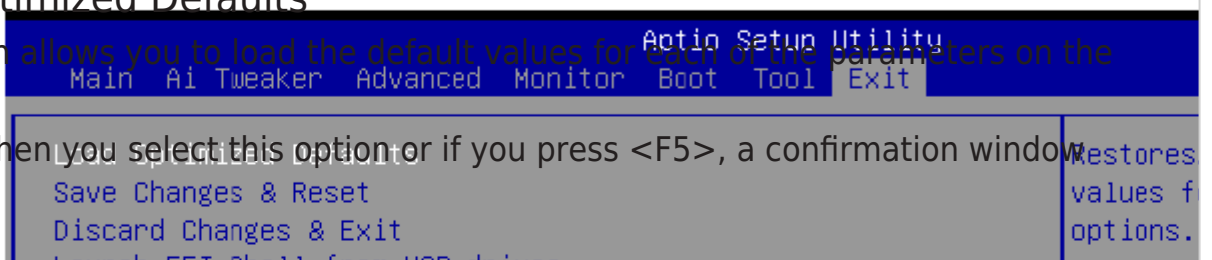

Select OK to load the default values.

Save Changes & Reset

Once you are finished making your selections, choose this option from the Exit menu to ensure the values you selected are saved. When you select this option or if you press <F10>,

a confirmation window appears. Select OK to save changes and exit.

Discard Changes & Exit

This option allows you to exit the Setup program without saving your changes. When you

select this option or if you press <Esc>, a confirmation window appears. Select OK to discard


changes and exit.

Launch EFI Shell from USB drives

This option allows you to attempt to launch the EFI Shell application (shellx64.efi) from one of the available USB devices.

PRIME H510T2-CSM R2.0

2-3

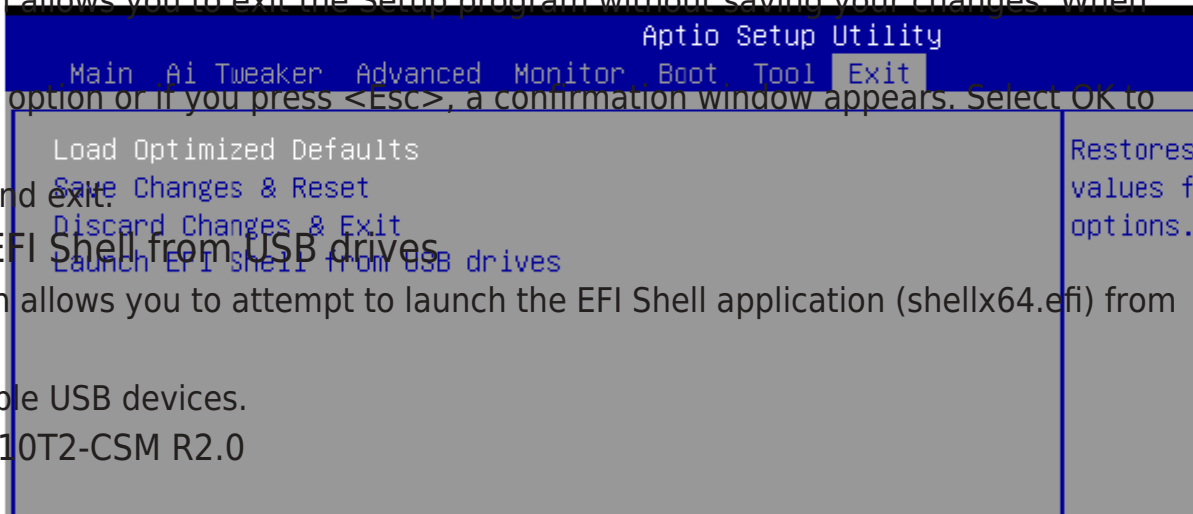

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
18
19
20
21
22
23
24
25

Quick Links:

[Prime H510T2-Csm R2.0 Specifications Summary
Before You Proceed](#)
[Motherboard Overview](#)

Related Manuals for Asus PRIME H510T2-CSM R2.0

[Motherboard Asus PRIME H570M-PLUS Manual](#)

(36 pages)

[Motherboard Asus PRIME H510M-A WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus Prime H510M-A Manual](#)

(34 pages)

[Motherboard Asus Prime H510M User Manual](#)

(34 pages)

[Motherboard Asus PRIME H510M-A Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H510M-E Manual](#)

(32 pages)

[Motherboard Asus PRIME H510M-E Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H510M-R Manual](#)

(30 pages)

[Motherboard Asus PRIME H510M-F Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H510TS Manual](#)

(30 pages)

[Motherboard Asus PRIME H510M-A R2.0 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H510M-A R2.0 Manual](#)

(34 pages)

[Motherboard Asus H61M-K User Manual](#)

H61m-k user's manual (82 pages)

[Motherboard ASUS H61M-PRO User Manual](#)

(64 pages)

[Motherboard Asus PRIME H610M-D D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H310-PLUS R2.0 Manual](#)

(27 pages)

Related Content for Asus PRIME H510T2-CSM R2.0

[ROG RAMPAGE V EDITION 10 Exit Menu](#)

Asus ROG RAMPAGE V EDITION 10

[Q170A-IM-A Exit Menu](#)

Asus Q170A-IM-A

[Z13PE-D16 Exit Menu](#)

Asus Z13PE-D16

[WS X299 SAGE Exit Menu](#)

Asus WS X299 SAGE

[Pro A620M-C-CSM Exit Menu](#)

Asus Pro A620M-C-CSM

[PRIME H310M-A R1.0 Exit Menu](#)

Asus PRIME H310M-A R1.0

[H110M-P/DVI Exit Menu](#)

Asus H110M-P/DVI

[PRIME X570-PRO Exit Menu](#)

Asus PRIME X570-PRO