

 


# Chapter 1: Product Introduction; Before You Proceed - Asus PRIME H510T2-CSM R2.0 Manual



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30



•

•

## Bookmarks







# Product Introduction

## 1.1

### Before you proceed

Take note of the following precautions before you install motherboard components or change any motherboard settings.

-

Unplug the power cord from the wall socket before touching any component.

- Before handling components, use a grounded wrist strap or touch a safely grounded object or a metal object, such as the power supply case, to avoid damaging them due to static electricity.

- Hold components by the edges to avoid touching the ICs on them.

- Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that came with the component.

- Before you install or remove any component, ensure that the ATX power supply is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, or components.

- The pin definitions in this chapter are for reference only. The pin names depend on the location of the header/jumper/connector.

For more information on installing your motherboard, please scan the code below:

PRIME H510T2-CSM R2.0



[Previous Page](#)  
[Next Page](#)

1  
...  
6  
7  
8  
9  
10  
11  
12  
13

Quick Links:

[Prime H510T2-Csm R2.0 Specifications Summary  
Before You Proceed](#)  
[Motherboard Overview](#)

## Related Manuals for Asus PRIME H510T2-CSM R2.0

[Motherboard Asus PRIME H570M-PLUS Manual](#)

(36 pages)

[Motherboard Asus PRIME H510M-A WIFI Quick Start Manual](#)

(2 pages)

[Motherboard Asus Prime H510M-A Manual](#)

(34 pages)

[Motherboard Asus Prime H510M User Manual](#)

(34 pages)

[Motherboard Asus PRIME H510M-A Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H510M-E Manual](#)

(32 pages)

[Motherboard Asus PRIME H510M-E Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H510M-R Manual](#)

(30 pages)

[Motherboard Asus PRIME H510M-F Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H510TS Manual](#)

(30 pages)

[Motherboard Asus PRIME H510M-A R2.0 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H510M-A R2.0 Manual](#)

(34 pages)

[Motherboard Asus H61M-K User Manual](#)

H61m-k user's manual (82 pages)

[Motherboard ASUS H61M-PRO User Manual](#)

(64 pages)

[Motherboard Asus PRIME H610M-D D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H310-PLUS R2.0 Manual](#)

(27 pages)

## Related Content for Asus PRIME H510T2-CSM R2.0

[Z790-AYW OC WIFI Chapter 1: Product Introduction](#)

Asus Z790-AYW OC WIFI

[Pro Q670M-CE Chapter 1: Product Introduction](#)

Asus Pro Q670M-CE

[Pro Q670M-CE D4 Chapter 1: Product Introduction](#)

Asus Pro Q670M-CE D4

[PRIME B760M-F D4 Chapter 1: Product Introduction](#)

Asus PRIME B760M-F D4

[PRIME A620-PLUS WIFI6 Chapter 1: Product Introduction](#)

Asus PRIME A620-PLUS WIFI6

[Z790 GAMING WIFI7 Chapter 1: Product Introduction](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series Chapter 1: Product Introduction](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI Chapter 1: Product Introduction](#)

Asus A620M-AYW WIFI