

TOSHIBA

Toshiba 32W153 DB Series Online Manual

Led backlight lcd tv

1	
2	
Table Of Contents	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55

--

•

[Table of Contents](#)

•

Bookmarks

--

[Download this manual](#)

Quick Links



ONLINE MANUAL

TOSHIBA
32D153*DB/32W153*DB
Leading Innovation

LED Backlight LCD TV

During the life of your TV firmware updates will be made available to

ensure that your TV maintains optimum performance.

You can download the latest version of firmware from

www.toshiba-europe.com.net/firmware.php

Some features listed in this document are limited due to local legislation

and may not be available in all countries.

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 32W153 DB Series

[Hd led tv Toshiba 32D153*DB Starting Manual](#)

(29 pages)

[LCD TV Toshiba 32W134*DG Online Manual](#)

Led backlight lcd satellite tv (46 pages)

[LCD TV Toshiba 32W1333N Online Manual](#)

Led backlight lcd tv (44 pages)

[LCD TV Toshiba 32W1333DB Service Manual](#)

Lcd color television (27 pages)

[LCD TV Toshiba 32W143 DG Owner's Manual](#)

Led backlight lcd tv (46 pages)

[LCD TV Toshiba 32L133*DG Online Manual](#)

Led backlight lcd tv (44 pages)

[LCD TV Toshiba 32W1333DG Online Manual](#)

(44 pages)

[LCD TV Toshiba 32W1333B Manual](#)

Led backlight lcd tv (22 pages)

[LCD TV Toshiba 32W1863DB Quick Start Manuals](#)

(12 pages)

[LCD TV Toshiba 32L154 DG Series Online Manual](#)

Led backlight lcd satellite tv (49 pages)

[LCD TV Toshiba 32L153 DG Series Online Manual](#)

Led backlight lcd tv (44 pages)

[LCD TV Toshiba WLT66 Series Owner's Manual](#)

Toshiba crt television user manual (40 pages)

[LCD TV Toshiba 32WL58A Owner's Manual](#)

Lcd color tv (56 pages)

[LCD TV Toshiba 26WL36P Owner's Manual](#)

(42 pages)

[LCD TV Toshiba 32W2431D Service Manual](#)

(51 pages)

[LCD TV Toshiba 40L28 Series Operating Instructions Manual](#)

(37 pages)

Summary of Contents for Toshiba 32W153 DB Series

[Page 1](#) During the life of your TV firmware updates will be made available to ensure that your TV maintains optimum performance. You can download the latest version of firmware from www.toshiba-om.net/firmware.php Some features listed in this document are limited due to local legislation and may not be available in all countries.

[Page 2](#) New channels are launched on Freeview from time to time along with other updates to the service. So it pays to retune your digital TV periodically to make sure your Digital TV/Radio channels are up to date. To retune your Toshiba Digital TV, please refer to the Re-tune section for guidance.

[Page 3: Table Of Contents](#)

Contents Safety Precautions5 Electronic Programme Guide.....21 Language Selection22 Air Circulation 5 Heat Damage.....5 Language Settings22 Mains Supply5 Preferred22 Current22 Warning 5 Do 5 Digital Settings - Parental Control, Menu Lock, Set PIN.....

[Page 4](#) Appendix F: Compatible disc types 46 Setting Date/Time31 Re-tune Section 48 Configuring Date/Time Settings31 Re-tuning: TOSHIBA Freeview Products48 Configuring Source Settings31 Specifications and Accessories49 Input Selection31 License Information

[Page 5: Safety Precautions](#)

Safety Precautions This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety. They are of a general nature, intended to help with all electronic consumer products.

[Page 6: Installation And Important Information](#)

Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product.

[Page 7: Important Safety Information](#)

Important safety information • Any function related to the digital television (with the DVB logo) is available only within the country or area where such signals are transmitted. Verify with the salesperson if it is possible to receive a DVB - T/C signal in the area where you live.

[Page 8: Fitting Or Removing The Stand](#)

Fitting or Removing the stand Fitting or Removing the stand (1) Carefully lay the front of the unit face down on a flat, cushioned surface with the stand hanging over the edge. (2) To fit the stand use the screws supplied. (3) Remove the screws fixing the stand (4) After the screws are removed, hold the stand in place, then remove the stand and the plastic moulding from the TV.

[Page 9: The Remote Control \(Tv - Dvd\)](#)

The Remote Control (TV - DVD) Simple at-a-glance reference of the remote control. Standby 16. No function Standby 17. Pause Pause Numeric buttons Numeric buttons 18. Play TV-AV / Channel list / Switches Play among broadcast types 19. Stop Mute Stop Mute 20.

[Page 10: Connecting External Equipment](#)

Connecting External Equipment Before connecting any external equipment, remove the mains plug from the wall socket. (*) Number of these inputs may change according to the model of your TV. Before running first time installation, any connected devices A wide variety of external equipment can be connected to the need to be set to standby mode.

[Page 11: Connecting An Hdmi ® Or Dvi Device To The Hdmi Input](#)

Connecting an HDMI or DVI Device to the HDMI Input ® The HDMI inputs on your TV receive digital audio and To Connect a DVI Device uncompressed digital video from an HDMI source device Connect an HDMI-to-DVI cable (HDMI type A connector) to or uncompressed digital video from a DVI (Digital Visual the HDMI input socket and audio cables to the AUDIO inputs Interface) source device.

[Page 12: Connecting A Computer](#)

Connecting a Computer Connecting a USB Memory To Connect a Computer To Connect a USB Flash Drive • You can connect a USB Flash Drive to your TV by using With either an RGB/PC or an HDMI connection, you can watch the USB input/inputs on the TV.

[Page 13: Power Save Mode](#)

Power Save Mode Environmental Information This television is designed to be environment friendly. You not only help to save the environment but also you can save money by reducing electricity bills thanks to the energy efficiency feature of this TV. To reduce energy

consumption, you should take the following steps: You can use Power Save Mode setting, located in the Picture Settings menu.

[Page 14: Controlling The Tv](#)

Controlling the TV A wide variety of external equipment can be connected via the sockets located on the side and back of the TV. Whilst all the necessary adjustments and controls for the TV are made using the remote control, the buttons on the Back of the TV may be used for some functions.

[Page 15: Initial Installation](#)

Initial Installation Before switching on the TV, put your decoder and media recorder to Standby if they are connected and ensure the aerial is connected to your TV. To set up the TV, use the buttons on the remote control as detailed on The Remote Control page.

[Page 16](#) Initial Installation - continued Note: You can press MENU button to cancel. You can select Network, Frequency, Network While the search continues a message will appear, ID and Search Step from this screen. For asking whether you want to sort channels according highlighting lines you see, use Up or Down button.

[Page 17: Auto Tuning](#)

Auto Tuning Note: Menu list of available features may change depending Auto Tuning on the model. As new services are broadcast, it will be necessary to retune the television in order to view them. • It is recommended to run Auto Tuning periodically to ensure that all new services are added.

[Page 18: Manual Tuning, Analogue Fine Tuning](#)

Manual Tuning, Analogue Fine Tuning The television can be tuned-in manually using Manual Search feature. Digital Aerial Manual Search Analogue Manual Search The feature is available for service engineers or The television can be tuned-in manually. For example: can be used for direct channel entry if the multiplex if the television cannot be connected to a media channel is known.

[Page 19: General Operation](#)

General Operation Stereo and Bilingual Transmissions Standby Notifications If the TV switches off while in No Signal mode, the If stereo or dual language broadcasts are transmitted, the word Stereo or Dual will appear on the screen each time following on-screen message will be displayed on the positions are changed, disappearing after a few seconds.

[Page 20: Channel List, Sorting Programmes, Programme Locking](#)

Channel List, Sorting Programmes, Programme Locking You can view stored channels and sort them by using the Channel List feature. Viewing Channel List Deleting a Channel You can press GREEN button to tag/untag all The channel order may be changed to suit your channels;...

[Page 21: Viewing Info Banner, Electronic Programme Guide](#)

Viewing Info Banner, Electronic Programme Guide Viewing Info Banner • Press YELLOW button for zooming to a programme. • Press BLUE button to display filtering options. • Press "INFO - " button. The information screen will appear giving details of the channel and •...

[Page 22: Language Selection](#)

Language Selection Language Settings Using this menu you can adjust the preferred language settings. Some features may not be available. • Press MENU button and select Settings by using Left or Right button. • Select Language and press OK to view this menu. Select the desired language by using Left or Right button.

[Page 23: Digital Settings - Parental Control, Menu Lock, Set Pin](#)

Digital Settings - Parental Control, Menu Lock, Set PIN You can view or set parental preferences of your TV. Viewing Parental Control Menu Set PIN Press MENU button and select the Settings by using • Use Up or Down buttons to select Set PIN option. Left or Right button.

[Page 24: Configuring Picture Settings](#)

Configuring Picture Settings You can configure picture settings of your TV by using Picture Settings menu. Configuring Picture Settings Colour You can use different picture settings in detail. You Sets the colour value, adjusting the colours. Press Left or Right button to adjust the colour. can customize current picture mode settings as desired.

[Page 25: Reset](#)

Configuring Picture Settings - continued Picture Zoom: Sets the picture size to Auto, Full, 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3 or Cinema. Press Left or Right button to change the setting. Film Mode (optional): Films are recorded at a different number of frames per second to normal television programmes.

[Page 26: Changing Picture Format](#)

Changing Picture Format Press "SCREEN - " button repeatedly to select between Auto(*), Full(**), 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3 or Cinema. Using the special functions to change the size of the displayed image (i.e. changing the height/width ratio) for the purposes of public display or commercial gain may infringe on copyright laws.

[Page 27: Configuring Pc Picture Settings](#)

Configuring PC Picture Settings PC Picture Settings (*) Dot Clock (*) While in VGA/PC mode, some items in Picture Dot Clock adjustment corrects the interference menu will be unavailable. Instead, VGA mode settings that appear as vertical banding in dot intensive will be added to the Picture Settings while in VGA/ presentations like spreadsheets or paragraphs or PC mode.

[Page 28: Configuring Sound Settings](#)

Configuring Sound Settings You can configure sound settings of your TV by using Sound Settings menu. Configuring Sound Settings Balance (Only for speaker) Sound settings can be configured according to your This setting is used for emphasizing left or right speaker personal preferences.

[Page 29: Settings Menu Operation, Conditional Access](#)

Settings Menu Operation, Conditional Access Configuring Your TV's Settings Using a Conditional Access Module The Common Interface Slot, situated on the side of the Detailed settings can be configured to suit your television, enables the insertion of a CAM (Conditional personal preferences.

[Page 30: Setting Timers](#)

Setting Timers (*) Default PIN can be set to 0000 or 1234. If you have defined Timers the PIN(is requested depending on the country selection) To view Timers menu, press MENU button and during the First Time Installation use the PIN that you select Settings by using Left or Right button.

[Page 31: Setting Date/Time](#)

Setting Date/Time Source Settings Configuring Date/Time Settings Configuring Source Settings You can configure date/time preferences by using You can enable or disable selected source options. The TV will not switch to the disabled source options when the this menu screen. "SOURCE - "...

[Page 32: Other Controls](#)

Other Controls Configuring Other Settings - General Blue Background You can configure the settings of your TV. Select If the signal is weak or absent, the TV will automatically Settings from main menu and press OK to view the change to a blue screen. To enable this, set Blue Settings menu.

[Page 33: Audio Description](#)

Other Controls - continued Audio Description Audio description refers to an additional narration track for blind and visually impaired viewers of visual media, including television and movies. The description narrator talks through the presentation, describing what is happening on the screen during the natural pauses in the audio (and sometimes during dialogue, if deemed necessary).

[Page 34: Using Media Browser](#)

To display Media Browser window, press the " " Toshiba cannot and does not grant such permission. button on the remote control. The Media Browser menu is also accessible from the main menu. Press •...

[Page 35: Playing Mp3 Files](#)

Using Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB device. Playing MP3 Files Viewing JPEG Files To play mp3 files from a USB memory, you can use To view photo files from a USB Memory, you can use this menu screen.

[Page 36: Slideshow Feature](#)

Using Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB device. Slideshow Feature Red button: Sort files by name. Play (button): Start to play all files listed beginning You can use this feature to display all images with the selected one.

[Page 37: Media Browser Settings](#)

Using Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB device. Note: You can set subtitles by using "LANG - " button during the playback. Selected subtitles may not be displayed correctly in some cases.

[Page 38: Analogue Only Text Services](#)

- For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer. Below is a guide to the functions of the remote control text buttons. Accessing Sub-Pages If a text page has sub-pages, press Left/Right buttons or enter the sub-page number 0001, 0002, 0003 etc.

[Page 39: Appendix A: Pc Input Typical Display Modes](#)

Appendix A: PC Input Typical Appendix B: AV and HDMI Signal Display Modes Compatibility (Input Signal Types) The following table is an illustration of some of the Source Supported Signals Available typical video display modes. Some, due to the display PAL 50/60 native resolution, are scaled automatically to enable correct image to be displayed.

[Page 40: Appendix C: Pin Information](#)

Appendix C: PIN Information Before connecting any external equipment, turn off all main power switches. If there is no switch, remove the mains plug from the wall socket. Signal information for Mini D-sub 15 pin connector Pin No. Signal name Pin No.

[Page 41: Appendix D: Supported File Formats For Usb Mode](#)

Appendix D: Supported File Formats for USB Mode Media Extension Format Notes Video .mpg, MPEG1-2 MPEG1: 768x576 @ 30P, MPEG2:1920x1080 @ 30P .mpeg .vob MPEG2 .mp4 MPEG4, Xvid, H.264 .mkv H.264, 1920x1080 @ 30P MPEG4,VC-1 .avi MPEG2, MPEG4, Xvid, H.264 .flv H.264/VP6/ H.264/VP6: 1920x1080 @ 30P...

[Page 42: Dvd Mode](#)

DVD Mode If your television has a built-in DVD module. The following instructions are for correct operation of the integrated DVD unit. • Multi-Audio (up to 8) support (according to disc Warning: Risk of exposure to radiation from • content). class 1/class 3b visible and invisible laser beams.

[Page 43: How To Watch A Dvd](#)

DVD Mode General Operation How to watch a DVD Notes on DVD Playback Note: DVD mode cannot be accessed unless a DVD is a. No sound will be heard during Rapid advance or inserted or a DVD control button is pressed. Rapid reverse.

[Page 44: Dvd Mode Configuration](#)

DVD Mode General Operation DVD Mode Configuration Preferences 1. While in DVD source, press "MYBUTTON1 - " These are the DVD mode preferences. Menu contents button to access DVD Setup menu. This is only are detailed below: possible if there is no playback. Default If you choose Reset and press OK, the factory-presets are loaded.

[Page 45: The Dvd Picture Quality Is Poor](#)

DVD Mode Troubleshooting & Tips The DVD picture quality is poor protection technology must be authorized by Rovi Corporation, and is intended for home and other 1. Make sure the DVD disc surface is not damaged limited viewing uses only unless otherwise authorized (no scratches, fingerprints etc.).

[Page 46: Appendix E: Dvd Mode Supported File Formats](#)

Appendix E: DVD Mode Supported file formats Format Supported File Media Extension (Maximum resolution/Bit rate etc.) Video Audio MPEG Layer MPEG1 .mpg/ .dat/ 1/2/3 .vob MPEG2 MPEG2 Movie XviD/ 3ivx PCM/MP3 XviD Version up to: 1.1.2 MPEG4 PCM/MP3 .avi MS ISO PCM/MP3 Support SP and ASP MPEG4...

[Page 47](#) DVD Mode You can operate DVD, movie CD, music or picture CD's content by using the buttons on your remote control. Below are the main functions of commonly used remote control buttons. Buttons on Movie Picture the Remote Music Playback Playback Playback Playback...

[Page 48: Re-Tune Section](#)

You must allow the television to complete the search. * This retune process may affect any saved information stored on your product. Please consult your on-line web manual or contact the Toshiba support as detailed below. TOSHIBA Customer Helpline: 0333 222 7111 TOSHIBA Online Support: www.toshiba.co.uk/tv-dvd-support...

[Page 49: Specifications And Accessories](#)

Specifications and Accessories Broadcast Systems/Channels DVB-T MPEG2, DVB-T MPEG4 HD DVB-C MPEG2, DVB-C MPEG4 Video Input PAL, SECAM, NTSC 4.43 Stereo Nicam External Connections 1-SCART 1 Input 21-pin SCART RGB, A/V 2-SCART-S (via SCART 1) Input 21-pin SCART S-Video 3-YpPr (via VGA) Input Mini D-Sub 15-Pin Analogue 4-SIDE AV...

[Page 50: License Information](#)

For more detailed information about the collection and recycling programmes available in your country, please visit our website (www.toshiba.eu/recycling) or contact your local city office or the shop where you purchased the product.

[Page 51: Q & A Section](#)

Q & A Section Question Answer Check if the TV is not in standby mode Why is there no sound or picture? Check the mains plug and all mains connections Check if the volume has not been turned off or sound mute has Why is there a picture but no sound? not been selected Why does the sound come only from...

[Page 52](#) Restriction of Chemicals), entered into force on 1 June 2007, with phased deadlines to 2018. Toshiba will meet all REACH requirements and is committed to provide our customers with information about the presence in our articles of substances included on the candidate list according to REACH regulation.

[Page 53](#) (12) months (Warranty Period), provided that any claims under 1. Any System not manufactured by or for Toshiba, or sold this Limited Warranty must be applied for within the Warranty to an end-user in a country not covered under this war- Period.

[Page 54](#) Toshiba will arrange pick-up of the defective unit from your location, repair it and return it back to any claim by any third party. Any liability of Toshiba or its sup- plier which is not excluded shall be limited to the purchase your location.

[Page 55](#) Toshiba product. The latest terms and conditions of the Toshiba Limited Warranty can be found at our website: www.toshiba-europe.com/services...

This manual is also suitable for:

32d153 db series