

System Memory - Asus PRIME H610M-E Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33

--

•

[Table of Contents](#)

•

Bookmarks



1.4

System memory

This motherboard comes with two Double Data Rate 5 (DDR5) Dual Inline Memory Module

(DIMM) sockets. The figure illustrates the location of the DDR5 DIMM sockets:

A DDR5 memory module is notched differently from a DDR, DDR2, DDR3, or DDR4 module. DO NOT install a DDR, DDR2, DDR3, or DDR4 memory module to the DDR5 slot.

You may install ~~varying memory sizes in Channel A~~ and Channel B. The system maps the total size of the lower-sized channel for the dual-channel configuration. Any excess memory from the higher-sized channel is then mapped for single-channel operation.

• You may install 8 GB, 16 GB, 24 GB, 32 GB and 48 GB unbuffered and Non-ECC DDR5 DIMMs into the DIMM sockets.

• The default memory operation frequency is dependent on its Serial Presence Detect (SPD), which is the standard way of accessing information from a memory module. Under the default state, some memory modules for overclocking may operate at a lower frequency than the vendor-marked value.

• For system stability, use a more efficient memory cooling system to support a full memory load.

• Always install DIMMs with the same CAS latency. For optimal compatibility, we recommend that you install memory modules of the same version or date code (D/C) from the same vendor. Check with the retailer to get the correct memory modules.

• Supported memory types, data rate (speed), and number of DRAM modules vary depending on the CPU and memory configuration, for more information please refer to CPU/Memory Support list under the Support tab of product information site or visit <https://www.asus.com/support/>.

Recommended memory configurations

DIMM_A

PRIME H610M-E

DIMM_A

DIMM_B

DIMM_B

Channel A

Channel B

DIMM_A

DIMM_B

DIMM_A

DIMM_B

1-11

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
18
19
20
21
22
23
24
25

Related Manuals for Asus PRIME H610M-E

[Motherboard Asus PRIME H610M-E Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H610M-E D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-E D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H610M-K D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-A D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-D D4 Manual](#)

(32 pages)

[Motherboard Asus Pro H610M-CT D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-F D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M2 FPT Manual](#)

(32 pages)

[Motherboard Asus Prime H610M-R D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-A WIFI D4 Manual](#)

(36 pages)

[Motherboard Asus H610M-IM-A Manual](#)

Industrial motherboard (53 pages)

[Motherboard Asus PRIME H610M-D Instruction Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-K ARGB Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-R Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-C/PS D4 Manual](#)

(62 pages)

Related Content for Asus PRIME H610M-E

[ROG RAMPAGE V EDITION 10 System Memory](#)

Asus ROG RAMPAGE V EDITION 10

[Q170A-IM-A System Memory](#)

Asus Q170A-IM-A

[Z13PE-D16 System Memory](#)

Asus Z13PE-D16

[WS X299 SAGE System Memory](#)

Asus WS X299 SAGE

[Pro A620M-C-CSM System Memory](#)

Asus Pro A620M-C-CSM

[PRIME H310M-A R1.0 System Memory](#)

Asus PRIME H310M-A R1.0

[TUF GAMING B650-E WIFI System Memory](#)

Asus TUF GAMING B650-E WIFI

[H110M-P/DVI System Memory](#)

Asus H110M-P/DVI