



# Chapter 2: Bios Information; Knowing Bios - Asus PRIME H610M-E Manual



1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33

--

•

[Table of Contents](#)

•

## Bookmarks







# BIOS Information

## 2.1

### Knowing BIOS

The new ASUS UEFI BIOS is a Unified Extensible Interface that complies with UEFI architecture, offering a user-friendly interface that goes beyond the traditional keyboard-only BIOS controls to enable a more flexible and convenient mouse input. You can easily navigate the new UEFI BIOS with the same smoothness as your operating system. The term "BIOS" in this user guide refers to "UEFI BIOS" unless otherwise specified.

BIOS (Basic Input and Output System) stores system hardware settings such as storage



device configuration, overclocking settings, advanced power management, and boot

device configuration that are needed for system startup in the motherboard CMOS. In normal circumstances, the default BIOS settings apply to most conditions to ensure optimal performance. DO NOT change the default BIOS settings except in the following

circumstances:

An error message appears on the screen during the system bootup and requests you to run the BIOS Setup.

You have installed a new system component that requires further BIOS settings or update.

Inappropriate BIOS settings may result to instability or boot failure. We strongly recommend that you change the BIOS settings only with the help of a trained service personnel.

BIOS settings and options may vary due to different BIOS release versions. Please refer to the latest BIOS version for settings and options.

For more information on BIOS configurations, please refer to <https://www.asus.com/support>, or download the BIOS manual by scanning the code.

PRIME H610M-E

# 2



2-1

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
20  
21  
22  
23  
24  
25  
26  
27

## Related Manuals for Asus PRIME H610M-E

[Motherboard Asus PRIME H610M-E Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H610M-E D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-E D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H610M-K D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-A D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-D D4 Manual](#)

(32 pages)

[Motherboard Asus Pro H610M-CT D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-F D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M2 FPT Manual](#)

(32 pages)

[Motherboard Asus Prime H610M-R D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-A WIFI D4 Manual](#)

(36 pages)

[Motherboard Asus H610M-IM-A Manual](#)

Industrial motherboard (53 pages)

[Motherboard Asus PRIME H610M-D Instruction Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-K ARGB Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-R Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-C/PS D4 Manual](#)

(62 pages)

## Related Content for Asus PRIME H610M-E

[Motherboard A7N8X-VM Chapter 2: Bios Information](#)

Asus Motherboard A7N8X-VM

[PRIME H610T2-CSM D4 Chapter 2: Bios Information](#)

Asus PRIME H610T2-CSM D4

[PRIME H310M-A R1.0 Chapter 2: Bios Information](#)

Asus PRIME H310M-A R1.0

[H110M-P/DVI Chapter 2: Bios Information](#)

Asus H110M-P/DVI

[EX-B660M-V5 D4 Chapter 2 Bios Information](#)

Asus EX-B660M-V5 D4

[PRIME H610I-PLUS Chapter 2: Bios Information](#)

Asus PRIME H610I-PLUS

[PRIME H370M-PLUS Chapter 2: Bios Information](#)

Asus PRIME H370M-PLUS

[PRIME H510T2-CSM R2.0 Chapter 2: Bios Information](#)

Asus PRIME H510T2-CSM R2.0