

About This Guide - Asus PRIME H610M-E Manual

| |
|-------------------|
| 1 |
| 2 |
| Table Of Contents |
| 3 |
| 4 |
| 5 |
| 6 |
| 7 |
| 8 |
| 9 |
| 10 |
| 11 |
| 12 |
| 13 |
| 14 |
| 15 |
| 16 |
| 17 |

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33

| |
|--|
| |
|--|

•

[Table of Contents](#)

•

Bookmarks



About this guide

This user guide contains the information you need when installing and configuring the motherboard.

How this guide is organized

This guide contains the following parts:

-

Chapter 1: Product Introduction

This chapter describes the features of the motherboard and the new technology it supports. It includes description of the switches, jumpers, and connectors on the

motherboard.

•

Chapter 2: BIOS Information

This chapter tells how to boot into the BIOS and upgrade BIOS using the EZ Flash Utility.

Where to find more information

Refer to the following sources for additional information and for product and software

updates.

1.

ASUS website

The ASUS website (www.asus.com) provides updated information on ASUS hardware and software products.

2.

Optional documentation

Your product package may include optional documentation, such as warranty flyers,

that may have been added by your dealer. These documents are not part of the standard package.

Conventions used in this guide

To ensure that you perform certain tasks properly, take note of the following symbols used

throughout this user guide.

CAUTION: Information to prevent damage to the components and injuries to yourself when trying to complete a task.

IMPORTANT: Instructions that you **MUST** follow to complete a task.

NOTE: Tips and additional information to help you complete a task.

v

[Previous Page](#)
[Next Page](#)

1
2
3
4
5
6
7
8
9

Related Manuals for Asus PRIME H610M-E

[Motherboard Asus PRIME H610M-E Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H610M-E D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-E D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H610M-K D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-A D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-D D4 Manual](#)

(32 pages)

[Motherboard Asus Pro H610M-CT D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-F D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M2 FPT Manual](#)

(32 pages)

[Motherboard Asus Prime H610M-R D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-A WIFI D4 Manual](#)

(36 pages)

[Motherboard Asus H610M-IM-A Manual](#)

Industrial motherboard (53 pages)

[Motherboard Asus PRIME H610M-D Instruction Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-K ARGB Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-R Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-C/PS D4 Manual](#)

(62 pages)

Related Content for Asus PRIME H610M-E

[PRIME B760M-F D4 About This Guide](#)

[Asus PRIME B760M-F D4](#)

[PRIME A620-PLUS WIFI6 About This Guide](#)

[Asus PRIME A620-PLUS WIFI6](#)

[Z790 GAMING WIFI7 About This Guide](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series About This Guide](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI About This Guide](#)

Asus A620M-AYW WIFI

[PRIME H610T2-CSM D4 About This Guide](#)

Asus PRIME H610T2-CSM D4

[ROG RAMPAGE V EDITION 10 About This Guide](#)

Asus ROG RAMPAGE V EDITION 10

[WS X299 SAGE About This Guide](#)

Asus WS X299 SAGE