



# Power Supply Input Wiring Diagram - Toshiba RAS-24PAVSG-E Installation Manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17




- 

[Table of Contents](#)

•

## Bookmarks



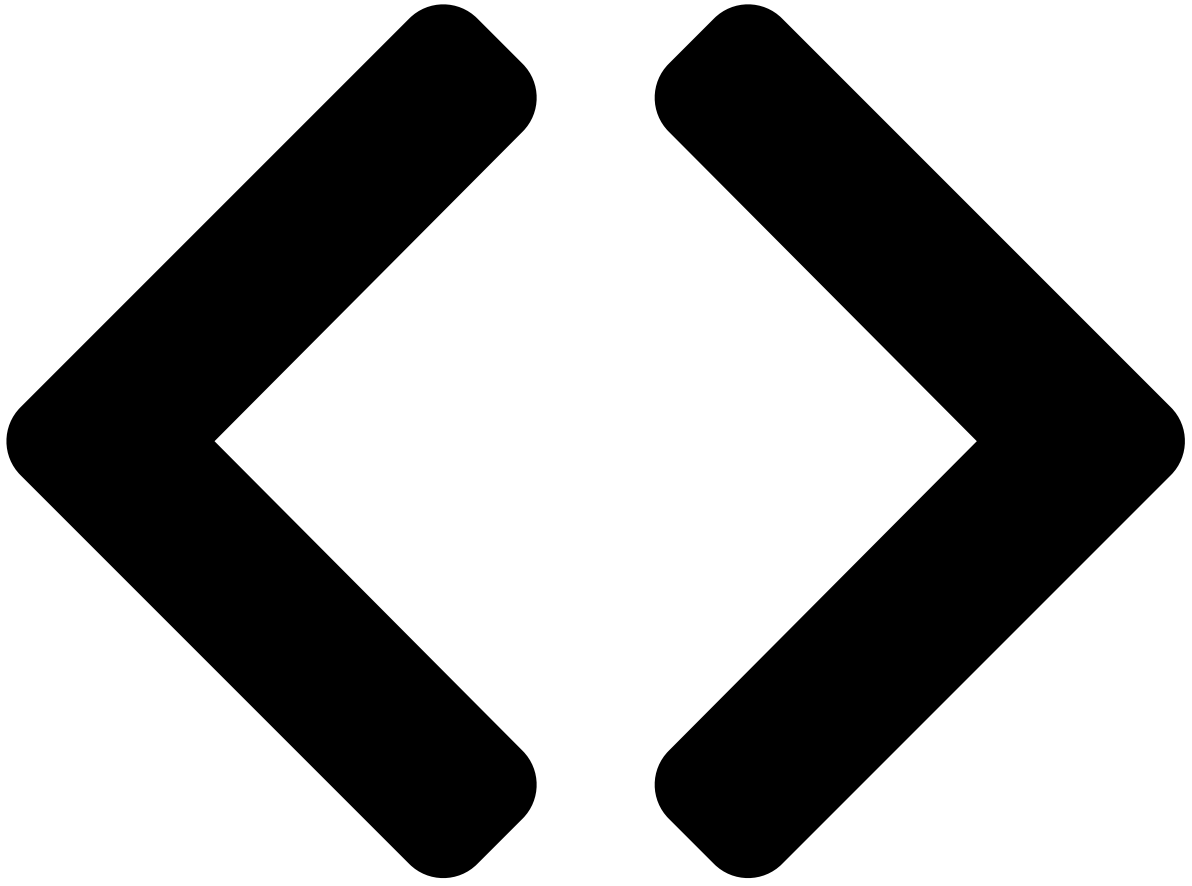



## Power supply input at Indoor unit Terminal Block (Recommend)

Power supply  
input

## Power supply input at Outdoor unit Terminal Block (Optional)


INDOOR UNIT

OUTDOOR UNIT

### CAUTION

1. The power supply must be same as the rated of air conditioner.
2. Prepare the power source for exclusive use with air conditioner.
3. Circuit breaker must be used for the power supply line of this air conditioner.
4. Be sure to comply power supply and connecting cable for size and wiring method.
5. Every wire must be connected firmly.
6. Perform wiring works so as to allow a general wiring capacity.
7. Wrong wiring connection may cause some electrical part burn out.
8. Incorrect or incomplete wiring is carried out, it will cause an ignition or smoke.
9. This product can be connected to main power supply.

Connection to fixed wiring : A switch which disconnects all poles and has a contact separation at least 3 mm must be incorporated in the fixed wiring.

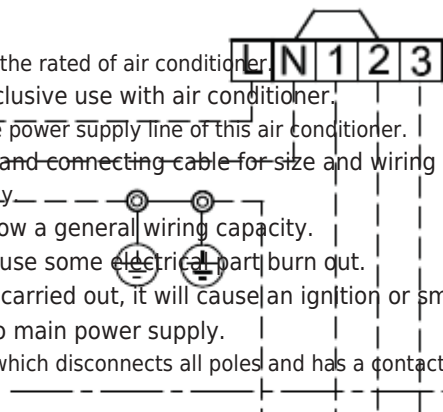

# Power supply input Wiring Diagram

CHASSIS  
CHASSIS  
EARTH

Indoor  
Terminal

Block

CHASSIS  
CHASSIS  
EARTH

Indoor  
Terminal

Block

Outdoor  
Terminal


Block

Outdoor  
Terminal

Block

14

INDOOR UNIT  
OUTDOOR UNIT  
Power supply  
input

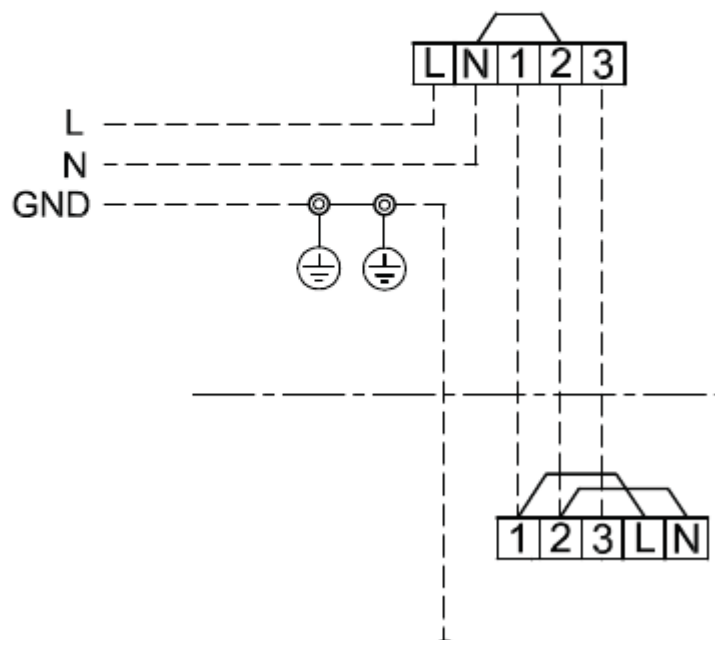

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
13  
14  
15  
16  
17  
18

## Related Manuals for Toshiba RAS-24PAVSG-E

[Air Conditioner Toshiba RAS-18PAVSG-E Owner's Manual](#)

(168 pages)

[Air Conditioner Toshiba RAS-18PKVSG-E Service Manual](#)

(137 pages)

[Air Conditioner Toshiba RAS-B22PKVSG-TR Service Manual](#)

(134 pages)

[Air Conditioner Toshiba RAS-B22PKVSG-E Installation Manual](#)

(22 pages)

[Air Conditioner Toshiba RAS-24PKVSG-E Owner's Manual](#)

(7 pages)

[Air Conditioner Toshiba RAS-22 Owner's Manual](#)

(7 pages)

[Air Conditioner Toshiba RAS-18PACVG -T Owner's Manual](#)

Split type (8 pages)

[Air Conditioner Toshiba RAS-18UFHP-ES Owner's Manual](#)

(26 pages)

[Air Conditioner Toshiba RAS-18UKHP-ES Owner's Manual](#)

(18 pages)

[Air Conditioner Toshiba RAS-18SK Series Owner's Manual](#)

Toshiba split type air conditioner owner's manual (8 pages)

[Air Conditioner Toshiba RAS-24NKHD-E4 Service Manual](#)

Split wall type (92 pages)

[Air Conditioner Toshiba AS-24UKHP-ES3 Service Manual](#)

(82 pages)

[Air Conditioner Toshiba RAS-10 Owner's Manual](#)

(12 pages)

[Air Conditioner Toshiba RAS-18BKS Series Installation Manual](#)

(20 pages)

[Air Conditioner Toshiba RAS-24J2KVG-E Owner's Manual](#)

For general public use (6 pages)

[Air Conditioner Toshiba RAS-24S3KHS-EE Owner's Manual](#)

(8 pages)

## Related Content for Toshiba RAS-24PAVSG-E

[RAS-24E2KVG-TR Power Supply Input Wiring Diagram](#)

Toshiba RAS-24E2KVG-TR

[RAS-05E2KVG-TR Power Supply Input Wiring Diagram](#)

Toshiba RAS-05E2KVG-TR

[RAS-25N4KVPG-ND Power Supply Input Wiring Diagram](#)

Toshiba RAS-25N4KVPG-ND

[RAS-25E2KVPG-ND Power Supply Input Wiring Diagram](#)

Toshiba RAS-25E2KVPG-ND

[RAS-18J2KVG-TR Power Supply Input Wiring Diagram](#)

Toshiba RAS-18J2KVG-TR

[RAS-24TKVG-UA Power Supply Input Wiring Diagram](#)

Toshiba RAS-24TKVG-UA

[RAS-07BKV-E Power Supply Input Wiring Diagram](#)

Toshiba RAS-07BKV-E

[RAS-18J2KVSG-TR Power Supply Input Wiring Diagram](#)

Toshiba RAS-18J2KVSG-TR

This manual is also suitable for:

[Ras-22pkvsg-eRas-24pkvsg-eRas-18pavsg-eRas-22pavsg-eRas-18pkvsg-e](#)