 


Sanyo R227 Instruction Manual

1
2
3
4
5
6
Table Of Contents
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30



•

•

Bookmarks

[Download this manual](#)

Quick Links



Auto

DHCP—Yes—No

|

L Wired/Wireless

Auto—Wired only—Wireless only

Signal Warning

— Enable Low Signal Warning

|

--Yes



|

LN

°
Fold if desired

Pliegue aquí si desea

—Version

m Upgrade Firmware

Language

~~ Factory Reset

| Register

Please keep near your radio / Por favor mantengalo cerca

Menu Quick Guide / Menú Guía Rápida

(Accessed via scroll/select knob) / (Se accesa via la manivela de control)

Press "BACK" at anytime to cancel / Para cancelar oprima retroceder -back

Stations

Media Player

Configure

Tuner

Auxilia

- Clock Set UD (if not set automatically by Internet) / (Si no fijado automáticamente por el internet)

Set Time/Date

—Time zone—Set Time—Set Date

Backlight

Active

! Standby

— WiFi Strength

* Para evitar que el sistema se conmuta, si desea conectarse a la red en forma inalámbrica, no conecte un cable telefónico de Ethernet. Si va a utilizar la conexión de cable telefónico Ethernet, conéctelo antes de conectar el radio.



Please keep near your radio / Por favor mantengalo cerca

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo R227

[Radio Sanyo R227 Instruction Manual](#)

Sanyo radio menu quick guide (57 pages)

[Radio Sanyo R227 Instruction Manual](#)

Internet radio (30 pages)

[Radio Sanyo R227 Instruction Manual](#)

(30 pages)

[Radio SANYO RP-DB1 Instruction Manual](#)

Dab+/fm digital radio (8 pages)

[Radio Sanyo RP-LT1000D Instruction Manual](#)

Fm/am digital radio (3 pages)

[Radio Sanyo RP-X3A Instruction Manual](#)

Am/fm-stereo pocket radio with in-ear phones (4 pages)

[Radio Sanyo TPM 2175 Service Manual](#)

Mini b/w. television with am/fm radio & digital alarm clock (22 pages)

Related Products for Sanyo R227

[Sanyo RS1211](#)

[Sanyo RCS-BH80UA.WL](#)

[Sanyo RCS-SH80UA.WL](#)

[Sanyo PCS Vision RL-4920](#)

[Sanyo RL-2000](#)

[Sanyo RS1211 / C1211](#)

[Sanyo RD-X8](#)

[Sanyo RD 5055](#)

[Sanyo RM-6090](#)

[Sanyo RM-5090](#)

[Sanyo RM-X500](#)

[Sanyo RD250](#)

[Sanyo RD 4080](#)

[Sanyo RD 4080 UM](#)

[Sanyo RD W266](#)

[Sanyo RD5035](#)