

TOSHIBA

Toshiba 55L544 DG Series Online Manual

Led backlight lcd satellite tv

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60

--

-

[Table of Contents](#)

•

Bookmarks

[Download this manual](#)

Quick Links



ONLINE MANUAL
TOSHIBA
Leading Innovation >>>

LED Backlight LCD Satellite TV

During the life of your TV firmware updates will be made available to

ensure that your TV maintains optimum performance.

You can download the latest version of firmware from

www.toshiba.com.net/firmware.php

TOSHIBA
Leading Innovation >>>

Some features listed in this document are limited due to local legislation

and may not be available in all countries.

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 55L544 DG Series

[Satellite TV System Toshiba 24D154 DG Series Online Manual](#)

Led backlight lcd satellite tv (55 pages)

[Satellite TV System Toshiba 32L344*DG Quick Start Manual](#)

Led backlight lcd satellite tv (26 pages)

Summary of Contents for Toshiba 55L544 DG Series

Page 1 During the life of your TV firmware updates will be made available to ensure that your TV maintains optimum performance. You can download the latest version of firmware from www.toshiba-om.net/firmware.php Some features listed in this document are limited due to local legislation and may not be available in all countries.

[Page 2: Table Of Contents](#)

Contents Safety Precautions4 Renaming a Channel22 Locking a Channel22
Air Circulation 4 Viewing Info Banner, Electronic Programme Heat Damage.....4
Guide23 Mains Supply4 Viewing Info Banner 23 Warning 4
Electronic Programme Guide.....

Page 3 Q & A Section59 Network Settings, Portal, Internet Browser and YouTube
..... 39 Configuring Network Settings39 First enter to Toshiba Portal39 Using the
Toshiba Portal39 Using the Internet Browser 39 Using YouTube

[Page 4: Safety Precautions](#)

Safety Precautions This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety. They are of a general nature, intended to help with all electronic consumer products.

[Page 5: Installation And Important Information](#)

Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product.

[Page 6: Important Safety Information](#)

Important safety information • Any function related to the digital television (with the DVB logo) is available only within the country or area where such signals are transmitted. Verify with the salesperson if it is possible to receive a DVB - T/C/S/S2 signal in the area where you live.

[Page 7: Fitting Or Removing The Pedestal Stand](#)

Fitting or Removing the pedestal stand Fitting or Removing the pedestal stand (1) Carefully lay the front of the unit face down on a flat, cushioned surface with the stand hanging over the edge. (2) To fit the stand use the screws supplied. (3) Remove the screws fixing the pedestal stand (4) After the screws are removed, hold the pedestal stand in place, then remove the pedestal stand and the plastic moulding from the TV.

[Page 8: The Remote Control](#)

The Remote Control Simple at-a-glance reference of the remote control. The supplied type is model dependant. 1. Standby 18. Play 2. Numeric buttons 19. Subtitle on-off (in Media Browser mode and in DVB 3. 3D Settings channels) 4. Mute 20. Stop 5.

[Page 9: Connecting External Equipment](#)

Connecting External Equipment Before connecting any external equipment, remove the mains plug from the wall socket. COMMON INTERFACE The Common Interface is Audio YPbPr for a Conditional Access Subwoofer Inputs Video Inputs Module (CAM). USB Inputs (*) SIDE AV Headphone 5Vdc/Max.500mA 5Vdc/Max.500mA 5Vdc/Max.500mA...

[Page 10: Connecting An Hdmi ® Or Dvi Device To The Hdmi Input](#)

CEC operation is available if a CEC device is present. This or uncompressed digital video from a DVI (Digital Visual feature is limited to Toshiba disc players that support CEC. Interface) source device. The CEC osd menu is accessed through the "QUICK" button...

[Page 11: Connecting A Computer](#)

Connecting a Computer Connecting a DVD Player To Connect a Computer Connecting to a DVD Player via YPbPr Some DVD players are connected through COMPONENT With either an RGB/PC or an HDMI connection, you can watch SOCKETS (YPbPr). In this case, you must use the your computer's display on the TV and hear the sound from Component YPbPr video connection cable (not supplied) for the TV's speakers.

[Page 12: Connecting A Home Network](#)

You can use this To connect the TV to the home network wirelessly just networking system to connect to the Toshiba Portal or select Network Type as Wireless Device in Network to access photo, video and audio files that are stored Settings menu and then highlight Network.

[Page 13: Power Save Mode](#)

Power Save Mode Environmental Information This television is designed to be environment friendly. You not only help to save the environment but also reduce electricity usage thanks to the energy efficiency feature of this TV. To reduce energy consumption, you should take the following steps: You can use Power Save Mode setting, located in the Picture Settings menu.

[Page 14: Controlling The Tv](#)

Controlling the TV A wide variety of external equipment can be connected via the sockets located on the side and back of the TV. Whilst all the necessary adjustments and controls for the TV are made using the remote control, the buttons on the Back of the TV may be used for some functions.

[Page 15: Initial Installation](#)

Initial Installation Before switching on the TV, put your decoder and media recorder to Standby if they are connected and ensure the aerial/cable and/or Satellite dish is connected to your TV. To set up the TV, use the buttons on the remote control as detailed on The Remote Control page.

[Page 16](#) Initial Installation - continued You can select Network, Frequency, Network Note: You can press MENU button to cancel. ID and Search Step from this screen. For 11. If you select Satellite option from the Search Type highlighting lines you see, use Up or Down button. screen, Antenna Type menu will be displayed.

[Page 17](#) Initial Installation - continued SatcoDX Preset List: When you start a search a message will appear asking whether you want to load preset list or not. This function is correct for countries Germany and Austria. For other countries select No and channel order will be applied if applicable.

[Page 18: Auto Tuning](#)

Auto Tuning button to cancel the process. In such a case, located Auto Tuning channels are not stored. As new services are broadcast, it will be necessary to Note: Menu list of available features may change depending retune the television in order to view them. on the model.

[Page 19: Manual Tuning, Analogue Fine Tuning](#)

Manual Tuning, Analogue Fine Tuning The television can be tuned-in manually using Manual Search feature. Digital Aerial Manual Search Analogue Manual Search The feature is available for service engineers or The television can be tuned-in manually. For example: can be used for direct channel entry if the multiplex if the television cannot be connected to a media channel is

known.

[Page 20: Analogue Fine Tune](#)

Manual Tuning, Analogue Fine Tuning - continue The television can be tuned-in manually using Manual Search feature. • After selecting search type as Satellite, you can set the desired options and press OK button to search. In satellite manual scan, you can enter frequency, polarisation, symbol rate values and change network channel scan and satellite options by using left/right buttons or numeric buttons on the remote.

[Page 21: General Operation](#)

General Operation Stereo and Bilingual Transmissions Standby Notifications If the TV switches off while in No Signal mode, the If stereo or dual language broadcasts are transmitted, the word Stereo or Dual will appear on the screen each time following on-screen message will be displayed on the positions are changed, disappearing after a few seconds.

[Page 22: Channel List, Sorting Programmes, Programme Locking](#)

Channel List, Sorting Programmes, Programme Locking You can view stored channels and sort them by using the Channel List feature. Viewing Channel List Deleting a Channel You can press GREEN button to tag/untag all The channel order may be changed to suit your channels;...

[Page 23: Viewing Info Banner, Electronic Programme Guide](#)

Viewing Info Banner, Electronic Programme Guide Viewing Info Banner • Press GREEN button to view the next day. • Press YELLOW button for zooming to a programme. • Press "INFO - " button. The information screen will appear giving details of the channel and programme • ...

[Page 24: Language Selection](#)

Language Selection Language Settings Using this menu you can adjust the preferred language settings. Some features may not be available. • Press MENU button and select Settings by using Left or Right button. • Select Language and press OK to view this menu. Select the desired language by using Left or Right button.

[Page 25: Digital Settings - Parental Control, Menu Lock, Set Pin](#)

Digital Settings - Parental Control, Menu Lock, Set PIN You can view or set parental preferences of your TV. Note: Maturity Lock is not available in all countries. Viewing Parental Control Menu Child Lock Press MENU button and select the Settings by using Left or Right button.

[Page 26: Configuring Picture Settings](#)

Configuring Picture Settings You can configure picture settings of your TV by using Picture Settings menu. Configuring Picture Settings Brightness You can use different picture settings in detail. You Sets the brightness value for the screen. Press Left or Right button to adjust the brightness. can customize current picture mode settings as desired.

[Page 27: Reset](#)

Configuring Picture Settings - continued Picture Zoom: Sets the picture size to Auto, Full, 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3 or Cinema. Press Left or Right button to change the setting. Film Mode (optional): Films are recorded at a different number of frames per second to normal television programmes.

[Page 28: Changing Picture Format](#)

Changing Picture Format Press "SCREEN - " button repeatedly to select between Auto(*), Full(**), 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3 or Cinema. Using the special functions to change the size of the displayed image (i.e. changing the height/width ratio) for the purposes of public display or commercial gain may infringe on copyright laws.

[Page 29: Configuring Pc Picture Settings](#)

Configuring PC Picture Settings PC Picture Settings (*) Press Left or Right button to adjust the value. Dot Clock (*) While in VGA/PC mode, some items in Picture menu will be unavailable. Instead, VGA mode settings Dot Clock adjustment corrects the interference will be added to the Picture Settings while in VGA/ that appear as vertical banding in dot intensive PC mode.

[Page 30: Configuring Sound Settings](#)

Configuring Sound Settings You can configure sound settings of your TV by using Sound Settings menu. Configuring Sound Settings Balance (Only for speaker) Sound settings can be configured according to your This setting is used for emphasizing left or right speaker personal preferences.

[Page 31: Settings Menu Operation, Conditional Access](#)

Settings Menu Operation, Conditional Access Configuring Your TV's Settings screen. Once you deactivate Netflix, you have to sign in to use Netflix again. Detailed settings can be configured to suit your Also use this option to view your ESN-number, which personal preferences.

[Page 32: Setting Timers](#)

Setting Timers Timers Playback: Controls the permission for the playback of the programme that will be recorded. There are three To view Timers menu, press MENU button and options available, Use parental settings, Disallowed select Settings by using Left or Right button. Press and Allowed.

[Page 33: Recording Configuration](#)

Recording Configuration This feature is not available in all countries. For the countries where this feature is available a USB connected storage device will be required. during the First Time Installation use the PIN that you Recording Configuration have defined. You can configure recording preferences using this IMPORTANT: menu.

[Page 34: Setting Date/Time](#)

Setting Date/Time Source Settings Configuring Date/Time Settings Configuring Source Settings You can configure date/time preferences by using You can enable or disable selected source options. The TV will not switch to the disabled source options when the this menu screen. "SOURCE - "...

[Page 35: Configuring Satellite Settings](#)

Satellite Settings Configuring Satellite Settings Select Satellite settings in the Settings menu to configure satellite settings. Press OK button. Satellite List: To view the list of available satellites select this option. You can add, delete or edit the satellites in the list. Antenna Installation: You can change antenna settings and start a new satellite scan.

[Page 36: Other Controls](#)

Other Controls Configuring Other Settings - General • Press Left or Right button to set this function as Yes or No. You can configure the settings of your TV. Select Hbb TV Settings from main menu and press OK to view the Settings menu.

[Page 37: Audio Description](#)

Other Controls - continued Audio Description Media Renderer Audio description refers to an additional narration This feature allows to share/play files stored in track for blind and visually impaired viewers of visual a compatible mobile device on the TV. Install an appropriate software on your device and read media, including television and movies.

[Page 38: Cec Auto Power On](#)

Other Controls - continued CEC Auto Power On This function allows the connected HDMI-CEC compatible device to turn on the TV and switch to its input source automatically. Press Left or Right button to enable or disable the feature. Note: The audio device should support System Audio Control feature and CEC option should be set as Enabled.

[Page 39: Network Settings, Portal, Internet Browser And Youtube](#)

Point the cursor to " " button and Toshiba Portal is a service, where content (web sites, press OK. applications, online services etc.) can be viewed Press the BACK button to close the virtual keyboard across the web through a simple user interface.

[Page 40: Using Youtube Tm](#)

Network Settings, Portal, Internet Browser and YouTube continued Press the EXIT button to close the portal and watch TV again. NOTES: • The virtual keyboard or numeric buttons on the

remote, which are associated with the letters of the alphabet, can be used for entries. •...

[Page 41: Using 3D Feature](#)

Using 3D Feature IMPORTANT: Before using the 3D feature of your TV, read the Viewing 3D images Cautions for 3D section in the back of the manual. Incoming video signals can either be in 2D or 3D Operating the 3D Mode “ ”...

[Page 42: 3D Settings](#)

Using 3D Feature - continued 3D Settings 3D Viewing Information Refer to the size/distance guidelines below to experience 3D in the best possible way. Viewing Distance Size (inch) Viewing distance 0,8 0,95 1,2 1,35 1,45 1,55 1,7 1,75 1,8 Horizontal Viewing Angle 3D Important Info Highlight 3D Important Info and press OK button on the remote to display safety precautions for 3D...

[Page 43](#) Using 3D Feature - continued Supported 3D Content Resolutions HDMI, MBP, OTHER 1080p@24 FP Supported Not Supported Not Supported 720p@50 FP Supported Not Supported Not Supported 720p@60 FP Supported Not Supported Not Supported 1080p FC SBS, TB SBS, TB SBS, TB 720p FC SBS, TB SBS, TB...

[Page 44: Usb Record Feature](#)

USB Record Feature This feature is not available in all countries. For the countries where this feature is available a USB connected storage device will be required. This feature allows you to record and play back About the USB Record Feature digital broadcast contents stored on a USB storage •...

[Page 45: Using Media Browser](#)

” button on the remote control. The Media Browser menu is also accessible from the main menu. Press Toshiba cannot and does not grant such permission. the MENU button on the remote. Select Media • Depending on the file size and amount in your USB...

[Page 46: Playing Mp3 Files](#)

Using Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB device or media server. Playing MP3 Files Viewing JPEG Files To play mp3 files from a USB memory or media server, To view photo files from a USB Memory or media server, you can use this menu screen.

[Page 47: Slideshow Feature](#)

Using Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB device or media server. Slideshow Feature : Navigate menu. (Play Preview): Display selected file in LANG - You can use this feature to display all images a small preview screen.

[Page 48: Recordings](#)

Using Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB device or media server. Note: You can set subtitles by using button “LANG - ” during the playback. Selected subtitles may not be displayed correctly in some cases.

[Page 49: Using Menu Button In Media Browser Mode](#)

Using Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB device or media server. Using MENU button in Media Browser Mode Pressing MENU button while in Media Browser mode displays the following menu screen: You can access Picture, Sound and Settings menu options using this screen.

[Page 50: Analogue Only Text Services](#)

• For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer. Below is a guide to the functions of the remote control text buttons. Accessing Sub-Pages If a text page has sub-pages, press Left/Right buttons or enter the sub-page number 0001, 0002, 0003 etc.

[Page 51: Appendix A: Pc Input Typical Display Modes](#)

Appendix A: PC Input Typical Display Modes The following table is an illustration of some of the

typical video display modes. Some, due to the display native resolution, are scaled automatically to enable correct image to be displayed. Your TV may not support different resolutions. Supported resolution modes are listed below. If you switch your PC to an unsupported mode, a warning OSD will appear on the screen.

[Page 52: Appendix B: Av And Hdmi Signal Compatibility \(Input Signal Types\)](#)

Appendix B: AV and HDMI Signal Compatibility (Input Signal Types) Supported Source Available Signals 50/60 NTSC 60 EXT1 (SCART) RGB 50/60 SECAM PAL 50/60 NTSC 60 EXT2 (SCART) RGB 50/60 SECAM PAL 50/60 Side AV NTSC 60 SECAM 480i 60Hz 480P 60Hz 576i...

[Page 53: Appendix C: Pin Information](#)

Appendix C: PIN Information Before connecting any external equipment, turn off all main power switches. If there is no switch, remove the mains plug from the wall socket. Signal information for Mini D-sub 15 pin connector Pin No. Signal name Pin No.

[Page 54: Appendix D: Supported File Formats For Usb Mode](#)

Appendix D: Supported File Formats for USB Mode Media Extension Format Notes Video Audio Movie .dat, .mpg, Mpeg1,2 MPEG1/2 Layer 1/2/3, 1080P@30fps 50Mbit/sec .mpeg AAC/HEAAC, AC3/EAC3, LPCM/ADPCM .ts, .trp, .tp, MPEG2 ,H.264, VC1, AVS, MPEG1/2 Layer 1/2/3, H.264:1080Px2@ 25fps .m2ts AAC/HEAAC, AC3/EAC3, 1080P@50fps MVC: LPCM/ADPCM...

[Page 55: Cautions For 3D](#)

- If you are ill or feel ill, you should refrain from function could lead to copyright infringement of viewing 3D images, and consult your health care authors' rights. Toshiba asks you to respect the provider as may be appropriate. intellectual property rights of third parties.

[Page 56: Cautions And Other Information For 3D](#)

Cautions and Other Information for 3D • For optimal 3D effect and to avoid eye fatigue it is Notes on watching the TV important that you properly select your viewing • 3D effect and image quality may vary depending position. The best viewing position is with your upon content quality and display device capability/ eyes at the same level as the center of the display functionality/settings.

[Page 57: Specifications And Accessories](#)

Specifications and Accessories Broadcast Systems/Channels DVB-T MPEG2, DVB-T MPEG4 HD DVB-C MPEG2, DVB-C MPEG4 DVB-S / S2 MPEG2, DVB-S / S2 MPEG4 HD Video Input PAL, SECAM, NTSC 4.43 Stereo Nicam External Connections 1-SCART 1 Input 21-pin SCART RGB, A/V 2-SCART-2 (Mini Scart) Input 21-pin SCART...

[Page 58: License Information](#)

For more detailed information about the collection and recycling programmes available in your country, please visit our website (www.toshiba.eu/recycling) or contact your local city office or the shop where you purchased the product. Disposal of batteries and/or accumulators The crossed out wheeled dust bin symbol indicates that batteries and/or accumulators must be collected and disposed of separately from household waste.

[Page 59: Q & A Section](#)

Q & A Section Question Answer Check if the TV is not in standby mode Why is there no sound or picture? Check the mains plug and all mains connections Check if the volume has not been turned off or sound mute has Why is there a picture but no sound? not been selected Why does the sound come only from...

[Page 60](#) REACH in a concentration above 0.1 % weight by weight. Toshiba hereby declares that this product with an integrated Wireless Function is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.