

Sanyo MR-1020 Service Manual

Auto-reverse stereo tape recorder

•

Table of Contents



Quick Links 1 Mechanical Adjustments

2 Operation

Download this manual



Sanyo Sounds Exciting!

Auto-reverse

Stereo Tape Recorder



SANYO

ELECTRALITO-reverse CO.



LTD.

INTERNATIONAL **DIVISION: SANYO**

ELECTRIC TRADING CO., LTD. OSAKA. IAPAN

SPECIFICATIONS

Speed accuracy

+2% Standard (7-1/2, 3-3/4 ips.)

+3% Standard (1-7/8 ips.)

Speed variation

2% Max. (start to end of reel)

Wow & flutter

0.2% Max. 7-1/2 ips.

(RMS value) Auto-reverse

0.25% Max. 3-35tereo Tape Recorder

0.35% Max. 1-7/8 ips. (RMS value)

SODEL MR-1020 Up to 2 min. for 22 -70 to -72 dBm/o

Fast winding time

Sensitivity Mic. ERVICE MANUAL

AUX. input

--22 to —32 dBm for NYO ELECTRIC CO., LTD.

Power output INTERNATIONAL DIVISION : SANYO ELECTRIC TRADING CO., LTD.

5 Watts each channel OSAKA, JAPAN

(10°% dist.)

Cross-talk

Better than 40 dB Better than 65 **SPECIFICATIONS**

80K Hz Speed accuracy

±2% Standard (7-1/2, 3-3/4 ips.) Better than 40 dB without weighting network % Standard (1-7/8 ips.)
40 mV Max. volume and tone Max.

2 Max. (start to end of reel) At least 60 dB

(channel-channel) & flutter

(track-track) Bias frequency

Erase efficienc Fast winding time Signal to noise Setisitivity Mic. input

Hum & noise

AUX. input

0.25 % Max. 3-3/4 ips. (RMS value) 0.35% Max. 1-7/8 ips. (RMS value)

Up to 2 min. for 1200 ft., on 7" reel -70 to -72 dBm for standard rec. level on

0.2% Max. 7-1/2 ips. (RMS value)

Sanyo Sounds Exciting!

meter

DISASSEMBLY -22 to -32 dBm for standard rec. level on To remove the chassis and amplifier circuit from the cabinet in order to

oil the mechanism collow phese steps: 5 Watts each channel

I. Remove the amplifie (that another back of the chassis.

1. Remove the Speaker box from the cabinet.

2. Place the set on acquishien with the front panel on the dottorn.

3. Remove the four screw on the rear side, and the two on the

bottom (Fig. 1)Bias frequency

80K Hz

4. Open the power source cord container cover and loosen it so that

it will easily separate from the cabinet when it is raised 40 dB without weighting network

5. Lift the cabinet up straight.

TI. Remove the control panel.

40 mV Max, volume and tone Max.

1. Place the set so that the control panel is ontop.

DISASSEMBLY

2. Pull off the Tone Volume control Program selector knobs and from the cabinet in order to

the top and bottom head covers.

3. Remove the Speed selector knob by turning it to the left.

4. Take off the eight strews from the sunface of the control panel.

(Fig. 2)

1. Remove the speaker box from the cabinet.

2. Place the set on a cushion with the front panel on the bottom,





Gain balance (channel-

channel)

3 dB

Frequency response (record/play)

SPEED	
SPEED	100
7-1/2 ips.	+7 -3
3-3/4 ips.	+6 -4
1-7/8 ips.	

Reel torque (gr/cm)

MODE	FE
Play	3
Fast winding	3

Pinch roller pressure

1.1 -

Pad pressure

30 gr.

B

5. Lift off the control panel; be careful not to touch the lead cords for the heads or the auto stop lever. Gain balance (channelchannel) Frequency response (record/play) **FREQUENCY** (Hz) SPEED | - 100 | 1,000 | 3,000 | 5,000 | 10,000 Sanyo Sounds Exciting! 7-1/2 ips. +3 3-3/4 ips. | 78 Auto-reverse 1-7/8 ips. Reel torque (gr**Stereo Tape Recorder** 1.1 - 1.5K gr. 30 gr. Pinch roller preMODEL MR-1020
Pad pressure Unscrew six

Table of Contents

screws (A.,.F) Eig. 1





Related Manuals for Sanyo MR-1020

Measuring Instruments Sanyo MTR-5000 Specifications

Data acquisition system (2 pages)

Measuring Instruments Sanyo MD812 Operation Manual

Digital moisture meter (2 pages)

Measuring Instruments Sanyo MR-909 Service Manual

Solid state stereophonic tape recorder 4-track, 2-channel system (10 pages)

Related Products for Sanyo MR-1020

Sanyo MR-909

Sanyo MR-110

Sanyo MR-929MK-II

Sanyo MR-939

Sanyo MDF-U7386SC

Sanyo MVP-8

Sanyo M2541E

Sanyo MCD-ZX700F

Sanyo M1990FE

Sanyo MCD-Z22L

Sanyo Mini ECOi Series

Sanyo MCD-s900F

Sanyo MCD-ZX100F

Sanyo MCD-ZX570M

Sanyo MCD-Z5F

Sanyo MCD-X77L