

Using The Remote Control; Preparing
The Remote Control For Use;
Installing The Remote Control
Batteries; Using The Remote Control
With A Vcr Or A Cable Converter -
Toshiba COLORSTREAM 43A10
Owner's Manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Using the remote control

Preparing the remote control for use

With the remote control, you can operate your

TV,

most VCR

models, and cable TV converters together, even if they are different

brands. If you will be using your TV with a Toshiba VCR, your

remote control is already programmed

and ready to use. If you own

different brands of VCRs and/or converters, you first have to program

your remote control. (See "Programming

the remote control for use

with a VCR or a cable TV converter" on page 12.)

installing the remote control

batteries

To install the batteries:

1. Slide the battery cover off the back of the remote control.

Using the remote control

Preparing the remote control for use

With the remote control, you can operate your TV, most VCR

models, and cable TV converters together, even if they are different

brands. If you will be using your TV with a Toshiba VCR, your

remote control is already programmed and ready to use. If you own

different brands of VCRs and/or converters, you first have to program

your remote control. (See "Programming the remote control for use

with a VCR or a cable TV converter" on page 12.)

Installing the remote control batteries

Note:

This remote control may not operate your equipment.

Refer to the owner's manual for the equipment that is available. In addition, your equipment may have features that are not available on the original remote control.

/1

2. Install two "AA" size batteries. Match the + and - signs on the batteries to the signs on the battery compartment.
3. Slide the battery cover back on to the remote control until the lock snaps.

Using the remote control

Using the remote control

with a VCR or a cable

TV converter

Preparing the remote control for use

To control a Toshiba VCR:

Set the TV/CABLE/VCR

switch to the VCR position.

The shaded buttons shown at right will then control the VCR. The

rest of the buttons will operate the TV as usual.

To control a non-Toshiba VCR:

If you own different brands of VCRs, program the remote control

to recognize the brand of your VCR. (See "Programming the

remote control for use with a VCR or a cable TV converter" on

page 12.)

Installing the remote control batteries

Note:

This remote control functions may or may

not operate your I/CR or cable TV converter.

Refer to the owner's manuals supplied with

the equipment to see which features are

available. In

addition, the original

controllers

may have features not available on this remote

control

if you

would like to continue to use

these features &

you may want to use the

original remote

control

Caution:

• Dispose of your batteries in a designated disposal area. Do not throw your batteries into a fire.

• Do not mix battery types or combine used batteries with new ones.

• Remove dead batteries immediately to

prevent battery acid from leaking into the

battery compartment.

• If you do not intend to use the remote

control for a long time, remove the

batteries.

POWER

Channel

Number

Enter

Channel

AV

|

Record

I

II

TV/VCR

STOP

PLAY


FastForward

With the remote control, you can operate your TV, most VCR models, and cable TV converters together, even if they are different brands. If you will be using your TV with a Toshiba VCR, your remote control is already programmed and ready to use. If you own different brands of VCRs and/or converters, you first have to program your remote control. (See "Programming the remote control for use with a VCR or a cable TV converter" on page 12.)


Installing the remote control batteries

To install the batteries:

1. Slide the battery cover off the back of the remote control.

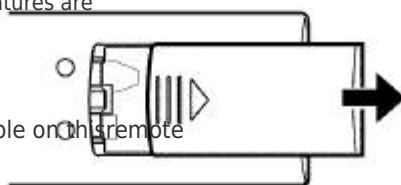

2. Install two "AA" size batteries. Match the + and - signs on the batteries to the signs on the battery compartment.

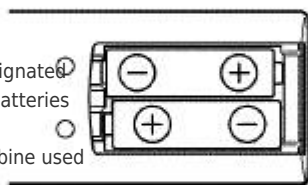

3. Slide the battery cover back on to the remote control until the lock snaps.

Using the remote control with a VCR or a cable TV converter

To control a Toshiba VCR:

Set the TV/CABLE/VCR switch to the VCR position. The shaded buttons shown at right will then control the VCR. The rest of the buttons will operate the TV as usual.

To control a non-Toshiba VCR:

If you own different brands of VCRs, program the remote control to recognize the brand of your VCR. (See "Programming the remote control for use with a VCR or a cable TV converter" on page 12.)

Note:

This remote control may not operate your

equipment. Refer to the owner's

manual for the equipment to see which features are

available. In addition, the original

remote control may have features not available on this remote

control. If you would like to continue to use

these features, you may want to use the

original remote control.


Caution:

• Dispose of your batteries in a designated disposal area. Do not throw your batteries into a fire.

• Do not mix battery types or combine used batteries with new ones.

• Remove dead batteries immediately to prevent battery acid from leaking into the battery compartment.

• If you do not intend to use the remote control for a long time, remove the batteries.

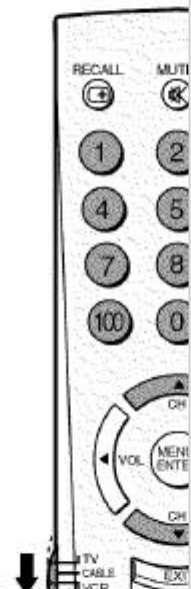

Rewind
II
III
PAUSE
, -
SLOW
11

Using the remote control

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
8
9
10
11
12
13
14
15

Related Manuals for Toshiba COLORSTREAM 43A10

[TV Toshiba 43A10 Service Manual](#)

(104 pages)

[Projection TV Toshiba 43A10 Owner's Manual](#)

Colorstream projection television (47 pages)

[TV Toshiba 43A10 Service Manual](#)

(8 pages)

[Projection TV Toshiba 43H72 Owner's Manual](#)

Toshiba owner's manual projection television 43h72, 50h72 (56 pages)

[Projection TV Toshiba 43H72 Specifications](#)

Theaterview hd (2 pages)

[Projection TV Toshiba 43HX71 Owner's Manual](#)

Toshiba owner's manual projection television 43hx71, 53hx71 (56 pages)

[Projection TV Toshiba 43A61 Owner's Manual](#)

Projection television (52 pages)

[Projection TV Toshiba 43H70 Owner's Manual](#)

Colorstream projection television (48 pages)

[Projection TV Toshiba 43H71 Owner's Manual](#)

Toshiba projection television owner's manual (52 pages)

[Projection TV Toshiba 43H71 Owner's Manual](#)

(53 pages)

[Projection TV Toshiba COLORSTREAM 43A61 Owner's Manual](#)

(53 pages)

[Projection TV Toshiba 43AX60 Owner's Manual](#)

Colorstream projection television (54 pages)

[Projection TV Toshiba COLOASTREAM 43AX60 Owner's Manual](#)

(54 pages)

[Projection TV Toshiba 50PH46P Service Manual](#)

Wh4 chassis (78 pages)

[Projection TV Toshiba 43PH46P Service Manual](#)

(78 pages)

[Projection TV Toshiba 50HX70 Owner's Manual](#)

Colorstream projection television (56 pages)

Related Content for Toshiba COLORSTREAM 43A10

[51H94 Remote Control](#)

Toshiba 51H94

[46H84 Learning About The Remote Control](#)

Toshiba 46H84

[42HM66 Using The Remote Control](#)

Toshiba 42HM66

[65HDX8 Using The Remote Control](#)

Toshiba 65HDX8

[56MX195 Using The Remote Control Mode Button To Control Your Other Devices](#)

Toshiba 56MX195

[46HM84 Remote Control](#)

Toshiba 46HM84

[46HM84 Using The Remote Control](#)

Toshiba 46HM84

[57H82 Preparing The Remote Control For Use](#)

TOSHIBA 57H82