

TOSHIBA

Toshiba IC-20R1THK User Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28


•

•

Bookmarks

--

Available languages

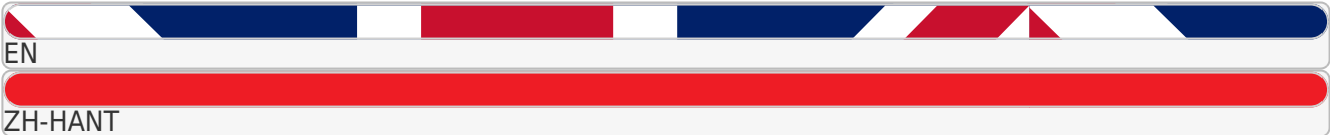


EN

ZH-HANT

Quick Links

[Download this manual](#)



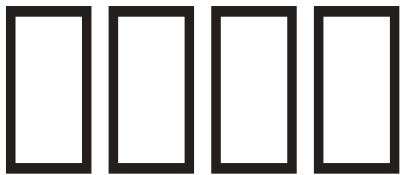

IC-20R1THK



[Table of Contents](#)

[Next Page](#)

- 1
- 2
- 3
- 4
- 5

Chapters

□□ 2

English 16

Related Manuals for Toshiba IC-20R1THK

[Cookers Toshiba IC-S19RH User Manual](#)

(26 pages)

[Cookers Toshiba IC-R19RH User Manual](#)

(26 pages)

Summary of Contents for Toshiba IC-20R1THK

Page 1 □□□□□□□□□□□□□□□□□□□□ □□□□ □□ IC-20R1THK □□ □□ □□...

[Page 2: Table Of Contents](#)

00 000000 000000 000000 00000000 00000000 00000000 00000000 0000000000 00000000000000000000 00000000000000 0 000 0/00...

Page 3

[Page 4](#)

[Page 5](#)

Page 6 • 00000000000000000000 • 00000000000000000000 • 000 • 00000000000000000000
• 000000 • 00000000000000000000IH000000 0000000 • 0000000000000000000000 IC 000
0000000000000000000000 00000000 • 0000000000000000000000000000 0000 000000 0000
000000000000000000000000 00000000 0000 00 00 00 00 0000/00 00 0000 0000 220-240V~
IC-20R1THK 2000W 2.4 kg 350x280x53 50/60Hz...

Page 7: □□□□□□

0000000000000000000000000000000000 0000 0000 0000 0000 00 00 00 00 0000 0/00 0000 0000 00000000 00 • 0
000000000000000000000000000000000000 0000000000 000 000000000000 0000
00 00000 00000 00 00 00 0000 00 00000 00 00 200 2000W 100- 300 120-2000W 0000000000000000 00000
0000000000...

[illegible][illegible]

[Page 12:](#)

Page 15 USER MANUAL INDUCTION COOKER IC-20R1THK

Page 20 Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot. Weight(kg) 220-240V~ IC-20R1THK 2000W 2.4 kg 350x280x53 50/60Hz...

Preparation outlet. Before placing the pot on the cooker plate, please clean up water stains, oil spots or any other adherent dirt from the outside surface of the pot and cooker plate. Please put the pot to be heated on the central part of the induction cooker. Do not put an empty pot on the cooker plate to be heated.

Page 23 Power adjustment After selecting a mode, you can press “+” or “-” to adjust the power. For some modes, during the heating procedure, the induction cooker can automatically adjust the power according to the cooking requirement. For certain modes, the power is restricted complying with the cooking requirement.

[Page 24: Functional Cooking Mode Instructions](#)

V. FUNCTIONAL COOKING MODE INSTRUCTIONS purpose. For your convenience, we provide the following instructions: such as hotpot and boiling water. In the heating procedure, the time and power can be adjusted at any time. If the water in the pot dries up or the temperature is abnormally high, the induction cooker automatically HOT POT temperature cooking.

[Page 25: Cleaning And Maintenance](#)

The maximum load for the frying pan is 4kg. When using it, do not let the weight of the ingredients exceed this weight to avoid danger. If other pots are used, please comply with the following conditions: 1. Requirements for pot material: containing iron material. 2.

[Page 26: Self-Diagnosis For Abnormalities](#)

VIII. SELF-DIAGNOSIS FOR ABNORMALITIES Protection for over-high The temperature inside the induction cooker is too high. temperature of the When the temperature lowers, press the "ON/STANDBY " induction cooker key, the heating can start normally. Protection for over-high The temperature of the cooker plate is too high. When the temperature of the temperature lowers, press the "ON/STANDBY "...

[Page 28](#) Matter Details...