



Toshiba AW-DUM1000JS, AW-DUM1100JS, AW-DUM1300KS - Fully Automatic Washing Machine Manual

# Contents

## 1 INSTALLATION

- 1.1 Product description
- 1.2 Accessories
- 1.3 Installation Area
- 1.4 Unpacking The Washing Machine
- 1.5 Installation of the cabinet base cover
- 1.6 Levelling the washing machine
- 1.7 Selection of tap
- 1.8 Connection of inlet hose, tap and washing machine
  - 1.8.1 Connection between ordinary tap and inlet hose.
  - 1.8.2 Connection between screw tap and inlet hose.

## 2 OPERATION

- 2.1 Preparation Before Washing
- 2.2 Washing
- 2.3 After Washing
- 2.4 Washing matters needing attention
- 2.5 The usage of detergent and washing powder
- 2.6 Control Panel
- 2.7 Option

2.8 Personalized setting of washing program

2.9 Operations of washing process

2.10 Washing Course Table

2.11 Lid lockopen/close

2.12 Recommended Detergent Amount

### 3 MAINTENANCE

3.1 Cleaning And Care

3.2 Cleaning the cabinet

3.3 Cleaning the inlet filter

3.4 Trouble Shooting

3.5 Technical Specifications

### 4 SAFETY INSTRUCTIONS

4.1 Explanation of the symbols

### 5 Documents / Resources

5.1 Download manual

## INSTALLATION

Product description

Note

All illustrations in this manual are for reference only. Please refer to the product, for actual appearance of the parts.

## Accessories

## Installation Area

- Stability is important to prevent the product from moving!
- Make sure that the product does not stand on the power cord.

Before installing the machine, the location characterized as follows shall be selected:

1. Rigid, dry, and level surface
2. Avoid direct sunlight
3. Sufficient ventilation
4. Room temperature is above 0°C
5. Keep far away from fuel sources such as coal or gas

## Unpacking The Washing Machine

- Packaging material (e.g. Films, Styrofoam) can be dangerous

for children.

- There is a risk of suffocation! Keep all packaging materials well away from children.

1. Remove the cardboard box and styrofoam packing.
2. Lift the washing machine and remove the base packing.
3. Remove the tape securing the power supply cord and drain hose.
4. Pick up the inlet hose from the drum.

## Installation of the cabinet base cover

- Running the machine or washing while placing on the bottom foam is strictly forbidden

Lay the washing machine backward on the soft fabric. Then Insert the cabinet base cover into washing machine base trough, push into the end and tighten screw at one position.

- Do not kink protract or compress the drain hose.
- Position the drain hose properly, otherwise, improper position may result in water leakage.
- If drain hose is too long, do not force it into washing machine as this will cause abnormal noises.

The way to place the end of drain hose:

## Levelling the washing machine

The lock nuts on all four feet must be screwed tightly against the housing.

1. Check if the feet are properly attached to the cabinet. If not, please rotate them to their original position and tighten the nuts.
2. Check alignment of the product with a leveler and do the succeeding steps if necessary.
3. Loosen the lock nut and rotate the foot either clockwise or counter clockwise, until it closely contacts with the floor.
4. Assure that the lock is secure and then alternately press the four top corners of the machine, to check if the proper adjustment has been done.

## Selection of tap

Please select appropriate tap.

## Connection of inlet hose, tap and washing machine

## Connection between ordinary tap and inlet hose.

1. Loosen clamp nut to show 5mm groove
2. Loosen four screws
3. Set connecting base on tap and tighten screws evenly
4. Tighten clamp nut
5. Press slide bushing, insert inlet hose into connecting base
6. Connection finished
7. After connection and installation, check if there is water leakage

## Connection between screw tap and inlet hose.

- Tap with threads and inlet hose
- Special tap for washing machine
  
- To prevent leakage or water damage, follow the above-mentioned instructions!
- Do not kink, crush, modify or cut the water inlet hose.



# OPERATION

## Preparation Before Washing

- Before washing, please make sure that the unit is installed properly.
- Before washing for the first time, the washing machine shall be operated without clothes using tub clean as the recommended course.
- Do not use water with temperatures over 50°C

A complete cycle is as shown below

1. Plug in
2. Open tap
3. Put clothes in the drum
4. Add detergent
5. Close lid

### Note

In the case of Liquid detergent, it is used by this case.

## Washing

1. Power on
2. Select course
3. Start up

#### Note

Water level can be selected manually.

#### After Washing

The buzzer will beep after washing finished and the power supply will be cut off automatically. At this point, you may unload the laundry.

#### Washing matters needing attention

- Before washing, please check the clothes labels and the detergent usage instructions. Use low-density detergent before wash suitable for washing machines.

Check the label

Take items out

Tie tassels into Knot, fasten zippers and buttons

Put small clothes into a laundry net

Turn the following clothes inside out those that easily form fiber

on its surface and those with long strands of fiber

Segregate clothes with varying textures or materials

- Washing a single piece of clothing may cause, severe unbalance and consequently sound an alarm. In this case, it is suggested to add one or two more pieces of clothing to the wash load that will also make spinning smoother.
- Do not wash clothes stained with kerosene, touching gasoline, alcohol and other flammable materials.

The usage of detergent and washing powder

- As for powder detergent that can form into clusters or masses, it is suggested to dilute the detergent with some water, before pouring into the detergent box, this will prevent the inlet of the detergent box from clogging and water from over flowing during the filling process.
- Choose the suitable type of detergent for the various washing temperature to get the best washing effect with less water and energy consumption.

Control Panel

Note

This illustration is for reference only. Please refer to the product,

for actual appearance.

1. On/Off

Turns the unit on and off.

2. Start/Hold

Press this button to start or Hold the washing cycle.

3. Course

Available according to the laundry type.

4. Option

This allows you to select an additional function and will light up when selected.

5. Display

The display shows the settings, estimated remaining time, options, and status messages for your washer. The display will remain on throughout the cycle.

6. Lid lock

Lid lock refer in "Lid lock open/close" section.

7. UFB Function

Ultra Fine Bubble (UFB) is an invisibly small Nano size air bubble that is smaller than a fiber gap of cotton.

UFB deliver surfactants to stain deep inside the cloth. Thus UFB promotes the easy removing stains.

All washing program with the UFB function

## Option

Only for models having these functions.

<p>Water level select the water level according to clothing categories, degree of soiling and washing habits of users</p>
<p>Wash /Rinse /Spin washing time, number of rinses, spinning time and other settings can be selected</p>
<p>Softener active To select the softener active to increase the soaking time of a set</p>
<p>Preset 1. Select a course 2. Press the Preset button to choose the finish time before operation starts 3. Press to commence the Preset operation</p> <p>Press the [ Preset ] button repeatedly, to see Preset time choices, the Preset time should be set before starting the course. If you want to set the Preset time, after the course has already started, the on/off button should be pressed to reset the course</p> <p>If there is any interruption in the power supply while the machine is operating, a special memory stores the selected program and recalls the memory setting when the power is restarted.</p>
<p>GREATWAVES is able to shorten wash time by special rhythm and water flow.</p>
<p>CHILD PROOF To avoid mis operation by children</p> <p>To activate CHILD PROOF press the two buttons at the same time</p>

- If this mode is set to ON and the lid opened during operation, the buzzer beeps, the indicator flashes, the washer stops water supply and stops wash/spin operation, and drains water from wash tub approximately 5 seconds of the lid opening.
- The "CHILD PROOF " will lock all buttons except [On/Off ].

## Personalized setting of washing program

Customers can select washing program according to actual demand.

# Operations of washing process

Wash only

Spin only

Wash+Rinse+Spin

## Washing Course Table

Courses are available according to the laundry type.

Only for models having these functions:

Course	
SPEED:	Suitable to wash lightly- stained clothes and clothes for summer.
DELICATE:	Mid/High/Low water level selection, the tempo is soft, slow washing and spinning speed, for minimal wear and deformation.
SPIN ONLY:	Select this program to Spin and drain only.
TUB CLEAN:	With intermittent spinning the dirt on the inner & outer surfaces of the drum, as well as the pulsafor are removed.
REGULAR:	Standard fabric washing program, suitable to wash cotton fabric. Washing is done once, twice for rinsing and the spin time is a bit long.
SOAK:	Select this program if clothes need to be soaked before washing.
BLANKET:	The wash time is longer, the water action stronger, so the washing effect is better.
HEAVY WASH:	Heavily-stained/thick clothes.

\* For AW-DUM1000JS and AW-DUM1100JS, "Speed program, 15°C water temperature, '4'levels default." is the recommended washing program designed to minimize water consumption for normally soiled load at rated capacity.

\* For AW-DUM1300KS, "Speed program, 15°C water temperature, '3'levels default." is the recommended washing program designed to minimize water consumption for normally soiled load at rated

capacity.

## Lid lockopen/close

- During operation, the lid lock light is on, but the door cover cannot be opened; when the lid lock light is off.
- During operation, the lid lock light is on, when the power cord is pulled out directly, or the power is off, the lid lock light is off, and the door cover cannot be opened.
- During operation, the lid lock light is on, press the pause button, the door lock light is off, and the door cover can be opened.

## Note

- If press pause during the process of washing and dehydration of the whole machine, the lid lock cannot be remove immediately, and the cover can be opened after it completely stopped.
- If the lid lock fault and cannot be removed, please stop the operation and contact the after-sales service.

## Recommended Detergent Amount

Rated capacity (kg)	Manual Water Level Setting	Detergents		Softener	
	12kg		Powder	Liquid	Normal type

12kg 10kg	73L (8gear)	Approx. 55g-100g	Approx. 35mL-50mL	Approx. 55mL-75mL	Approx. 18mL-25mL
6kg	62L (6gear)	Approx. 33g-55g	Approx. 20mL-35mL	Approx. 36mL-55mL	Approx. 12mL-18mL
3kg	48L (4gear)	Approx. 11g-33g	Approx. 10mL-20mL	Approx. 18mL-36mL	Approx. 9mL-14mL
1kg	29L (2gear)	Approx. 11g	Approx. 10mL	Approx. 18mL	Approx. 9mL
	Blanket		Approx. 50mL	Approx. 75mL	Approx. 25mL

## Note

- This is just for reference.
- Only 1 gear water level can be selected manually

## MAINTENANCE

### Cleaning And Care

Before your maintenance starts, please unplug the machine and close the tap.

### Cleaning the cabinet

Proper maintenance of the washing machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use a wet cloth to wipe it off immediately. No sharp items are allowed.



## Note

Formic acid and its diluted solvents or equivalent are forbidden, such as alcohol, solvents or chemical products, etc.

## Cleaning the inlet filter

### Note

Inlet filter must be cleaned if pressure of water from the inlet drops.

Washing the filter in the washing machine:

1. Screw off the inlet pipe from the back of the machine.
2. Pull out the filter with a pair of long nose pliers and reinstall it back after being washed.
3. Use a brush to clean the filter.
4. Reconnect the inlet hose.

## Lint filter cleaning

1. There is a built-in lint filter in your washer. It can help to collect lint during washing cycle.
2. It is suggested to clean the lint filter every 10 cycles.
3. Take it out and clean the filter with water. Then place it back into the washer.

## Trouble Shooting

If the appliance does not start or it stops during the operation, initially try to find a solution to the problem based on the table below. Otherwise, contact the service center.

Description		Inspection Items
No washing		<p>If the power is off.</p> <p>If the water volume reaches the required water level. (The washer will not work if the water amount does not reach the required water level)</p> <p>If it is set to "Preset" washing mode. (It will only start to work until the reservation time is reached)</p>
No water flows in		<p>If the power is off or the fuse is burned out.</p> <p>If the water supply is cut off or the water pressure is too low.</p> <p>If the inlet hose is properly connected and the water tap is opened.</p> <p>If the filtering screen of inlet valve is blocked by dirt.</p> <p>If the "Start / Hold" button is pressed after the power switch is pressed.</p>
Abnormal draining		<p>If the end of the water drain hose is placed very high.</p> <p>If the end of water drain hose is immersed in and blocked by a pool of water.</p>
Abnormal spin		<p>If the top lid is closed.</p> <p>If most of the clothing are at one side of the drum or if too many clothes are loaded in the machine.</p> <p>If the washer is not placed in stable condition or it is placed in an inclined state. (The ground is not flat).</p>
Description	Reason	Solution
E1	Alarm for abnormal water filling.	Check if the water tap is opened or not.
E2	Alarm for water unfinished water draining	Check the water level sensor and drain pump.
E3	Alarm for lid that is not closed before wash and spin.	Close the lid.
E4	Unbalanced wash load during spinning	Evenly distribute the clothes in the drum by hand.
E7-1 E7-2 E7-3 E7-4 E7-5	Abnormal behavior with dangerous fault. (break wires, brake, sensors)	<p>E7-1 E7-2 E7-3 E7-4 E7-5 appears after pressing the power button, Please call for service.</p> <p>If E7-1 E7-2 E7-3 E7-4 E7-5 appears during the operation, press the power button to stop the machine.</p>
FXX	Others	Try to look for solutions first then call for service, if no solutions work.

## Note

- After the checking, try to use the appliance again, If problems persist or the display shows other alarm code again, contact the service center.
- E1-E4 alarm clear on some models need to be stimulated by "Start" button.

## Technical Specifications

Standard Water Pressure: 0.03MPa~0.8MPa

Model	Washing Capacity	Dimension (W*D*Hmm)	Net Weight	Rated Power	Power Supply
AW-DUM1000JS	9.0kg	550x595x980	40.5kg	500W	220-240V~,50Hz
AW-DUM1100JS	10.0kg	550x595x980	40.5kg	500W	220-240V~,50Hz
AW-DUM1300KS	12.0kg	601*630*1010	43kg	480W	220-240V~,50Hz

## SAFETY INSTRUCTIONS

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, personal injury or loss of life.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- The openings must not be obstructed by a carpet.
- This appliance is intended to be used in household.

Model	Washing Capacity	Standard Water Pressure
AW-DUM1000JS	9.0kg	0.03MPa~0.8MPa
AW-DUM1100JS	10.0kg	0.03MPa~0.8MPa
AW-DUM1300KS	12.0kg	0.03MPa~0.8MPa

## Explanation of the symbols

This combination of symbol and descriptive word indicates a potentially dangerous situation which may result in death or serious injuries unless it is avoided.

This combination of symbol and descriptive word indicates a potentially dangerous situation which may result in slight or minor injuries or damage to property and the environment.

### Note

This combination of symbol and descriptive word indicates a potentially dangerous situation which may result in slight or minor injuries.

## The electric shock!

- This washing machine is for indoor use only.
- Do not put this washing machine in a humid place.
- Hands should not be inserted into the rotating drum.
- Before doing any maintenance the unit, unplug the appliance from the electrical source.
- Always unplug the machine and turn off the water supply after use. Be aware of the maximum and minimum inlet water pressure which is in megapascals (MPa)
- To ensure your safety, power plug must be inserted into an earthed three-pole socket. Check carefully and make sure that your socket is properly and reliably earthed.
- Make sure that the water and electrical devices provisions are connected by a qualified technician in accordance with the manufacturer's instructions and local safety regulations
- This product is used only domestic.

## Risk to children!

- The appliance can not be used by children and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.  
Cleaning and user maintenance shall not be done by children

without supervision.

- Animals and children can not climb into the machine. Check the machine before every operation.
- Children should be supervised that they do not play with the appliance.
- Keep children and animals far away from the machine during operation.

### Risk of explosion!

- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or dabbed with combustible or explosive substances( such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.).
- This may result in fire or explosion.
- Rinse the clothes or wash articles thoroughly by hand before putting them in the appliance.

### Installing the product!

- This washing machine is for indoor use only.
- It is not intended for built-in using.
- The openings must not be obstructed by a carpet.
- The washing machine shall not be installed in bath rooms or

very wet rooms as well as in the rooms with explosive or caustic gases.

- Remove all packaging materials before using the appliance. Otherwise, serious damage may result.
- The washing machine with single inlet valve may only be connected to a cold water supply.
- The plug must be accessible after installation.
- Avoid place where the machine is exposed to direct sunlight. Plastic parts may become deformed or discolored. Avoid place where the machine may become frozen during cold weather.
- This appliance is intended to be used in household.

#### Risk of damaging appliance!

- Your product is only for home use and is only designed for textiles suitable for machine washing.
- Do not climb up and sit on the glass lid of the machine.
- Cautions during Machine Handling and transport:
  1. The accumulated water shall be drained out of the machine.
  2. Handle the machine carefully. Never hold protruding parts of the machine while lifting.
  3. This appliance is heavy, it should be transported carefully.
- Please do not close the glass lid with excessive force.

- It is forbidden to wash carpets.

## Operating the appliance!

- Before washing the clothes for the first time, the product shall be operated without clothes using tub clean as the displayed program on the control panel.
- Flammable and explosive or toxic solvents are forbidden. Gasoline and alcohol etc. Shall not be used as detergents. Please only select the detergents suitable for machine washing, especially for top-loading fully automatic washing machines.
- Make sure that all pockets are emptied. Sharp and rigid items such as coins, brooches, nails, screws or stones etc. may cause serious damage to this machine.
- Never refill the water by hand during washing.

## Documents / Resources

### Download manual

Here you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc.

[Download Toshiba AW-DUM1000JS, AW-DUM1100JS, AW-DUM1300KS - Fully Automatic Washing Machine Manual](#)



## Need Assistance?

Do you have a question about the AW-DUM1000JS that isn't answered in the manual?  
Leave your question here.



Stay updated with the latest solutions  
Submit your question

## Related Manuals for Toshiba AW-DUM1000JS

[Toshiba AW-DUK1300K Series - Fully Automatic Washing Machine Manual](#)

(article)

[Toshiba TWD-BM105GF4S, TWD-BM115GF4S, TWD-BM135GF4S - 10.5/7.0 KG COMBO WASHER DRYER Manual](#)

(article)

[Toshiba TW-BK95GF4, TW-BK105GF4, TW-BK115GF4 - FRONT LOADING WASHING MACHINE Manual](#)

(article)

[Toshiba TWD-BJ120M4M - 11/7KG WASHER DRYING FRONT LOAD MACHINE Manual](#)

(article)

[Toshiba TW-BL85A2, TW-BL95A4, TW-BL105A4, TW-BL115A2 Series - 8.5KG FRONT LOAD WASHING MACHINE Manual](#)

(article)

[Toshiba TW-BH85S2M, TW-BH95S2M - 8.5KG FRONT LOAD WASHING MACHINE Manual](#)

(article)

[Washer Toshiba AW-DUM1000JS Owner's Manual](#)

Fully automatic washing machine (24 pages)

[Washer Toshiba AW-7480EM Owner's Manual](#)

Fully automatic washing machine (16 pages)

[Washer Toshiba AW-8570SM Owner's Manual](#)

Fully automatic washing machine (20 pages)

[Washer Toshiba AW-DUM1600LT Owner's Manual](#)

Fully automatic washing machine (22 pages)

[Washer Toshiba AW-DUM1500L Series Owner's Manual](#)

Fully automatic washing machine (24 pages)

[Washer Toshiba AW-G9930S Service Manual](#)

Fully automatic washing machine (52 pages)

[Washer Toshiba AW-B1100GM User Manual](#)

(20 pages)

[Washer Toshiba AW-J800A-PH Owner's Manual](#)

(22 pages)

[Washer Toshiba AW-SD120SM Owner's Manual](#)

(36 pages)

[Washer Toshiba AW-SD150SBA Service Manual](#)

Fully automatic washing machine (81 pages)

[Washer Toshiba AW-8450SBE Owner's Manual](#)

Fully automatic washing machine (6 pages)

[Washer Toshiba aw-dc series Owner's Manual](#)

Fully automatic washing machine (37 pages)

[Washer Toshiba AW-DC1000CM Owner's Manual](#)

Fully automatic washing machine (36 pages)

[Washer Toshiba AW-J750APH Owner's Manual](#)

Fully automatic washing machine (24 pages)

[Save Article as PDF](#)