

 


# Using The Strobe Function - Toshiba 43H71 Owner's Manual



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
Table Of Contents  
53



•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks







## Using the strobe function

The strobe function strobos the action of the current program in a 9-picture multi-window.

For example, you can watch a decisive moment of a sports program that has been recorded previously.

To start the strobe function: Press STROBE.

To cancel the strobe function:

Press STROBE again.

\_0Q .....

FAVORITE

STROBE

Note:

- When the main picture source is ColorStream, the STROBE function is not available.



29

## Using the strobe function

The strobe function strobos the action of the current program in a 9-picture multi-window. For example, you can watch a decisive moment of a sports program that has been recorded previously.

To start the strobe function:

Press STROBE.

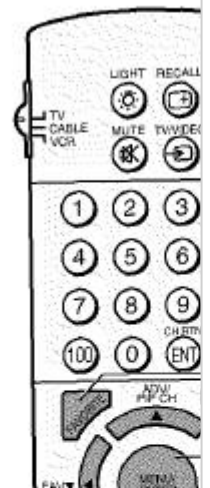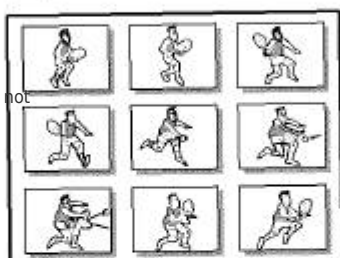

## Table of Contents

[Previous Page](#)  
[Next Page](#)

1  
...  
26  
27  
28  
29  
30  
31  
32  
33

## Related Manuals for Toshiba 43H71

### [TV Toshiba 43HX71 Service Manual](#)

(102 pages)

### [Projection TV Toshiba 43H71 Owner's Manual](#)

Toshiba projection television owner's manual (52 pages)

### [TV Toshiba 53HX71 Service Manual](#)

(8 pages)

### [Projection TV Toshiba 43H72 Owner's Manual](#)

Toshiba owner's manual projection television 43h72, 50h72 (56 pages)

### [Projection TV Toshiba 43H72 Specifications](#)

Theaterview hd (2 pages)

### [Projection TV Toshiba 43HX71 Owner's Manual](#)

Toshiba owner's manual projection television 43hx71, 53hx71 (56 pages)

### [Projection TV Toshiba 43A61 Owner's Manual](#)

Projection television (52 pages)

### [Projection TV Toshiba 43A10 Owner's Manual](#)

Colorstream projection television (47 pages)

### [Projection TV Toshiba COLORSTREAM 43A10 Owner's Manual](#)

(47 pages)

### [Projection TV Toshiba 43H70 Owner's Manual](#)

Colorstream projection television (48 pages)

### [Projection TV Toshiba COLORSTREAM 43A61 Owner's Manual](#)

(53 pages)

### [Projection TV Toshiba 43AX60 Owner's Manual](#)

Colorstream projection television (54 pages)

### [Projection TV Toshiba COLOASTREAM 43AX60 Owner's Manual](#)

(54 pages)

### [Projection TV Toshiba 50PH46P Service Manual](#)

Wh4 chassis (78 pages)

### [Projection TV Toshiba 43PH46P Service Manual](#)

(78 pages)

### [Projection TV Toshiba 50HX70 Owner's Manual](#)

Colorstream projection television (56 pages)

## Related Content for Toshiba 43H71

### [53AX61 Using The Multi-Window Strobe Function](#)

Toshiba 53AX61

### [50H71 Using The Strobe Function](#)

Toshiba 50H71

### [43H70 Using The Strobe Function](#)

Toshiba 43H70

[51HC85 Remote Control Function Key Chart](#)

Toshiba 51HC85

[ColorStream TP50H50 Vcr And Cable Function Buttons](#)

Toshiba ColorStream TP50H50

[COLOASTREAM 43AX60 Using The Strobe Fimction](#)

Toshiba COLOASTREAM 43AX60

[DLP 44HM85 Function Status Indicators](#)

Toshiba DLP 44HM85

[65HDX8 Using The Favorite Channel Search Function](#)

Toshiba 65HDX8

This manual is also suitable for:

[53h7161h71](#)