

Toshiba 24L2900 Owner's Manual

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26

•

-

Troubleshooting


•

Bookmarks

--

[Download this manual](#)

Quick Links

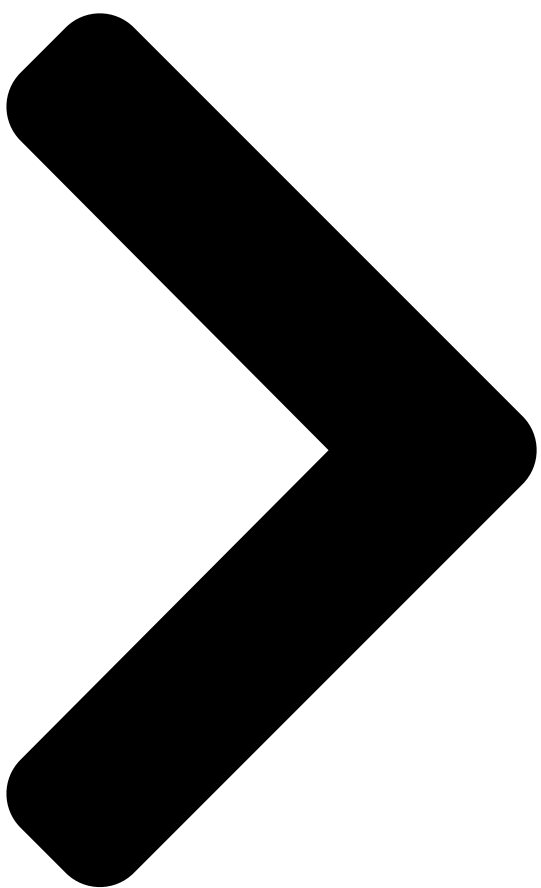

24L2900/24L2900EA/24L2900EE/24L2900EV
32L2900/32L2900EA/32L2900EE/32L2900EV
32S2900/32S2900EA/32S2900EE/32S2900EV
40S2900/40S2900EA/40S2900EE/40S2900EV
43S2900/43S2900EA/43S2900EE/43S2900EV

TOSHIBA

Owner's Record

You will find the model number and serial number on the back of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your TOSHIBA dealer regarding this product.

Model number:

Serial number:

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 24L2900

[Monitor Toshiba LED TV Series Owner's Manual](#)

(22 pages)

[LED TV Toshiba 19L4200U User Manual](#)

Integrated high definition led television (141 pages)

[LED TV Toshiba 19L4200UOM User Manual](#)

Integrated high definition led television (139 pages)

[LED TV Toshiba 26SL400U Specifications](#)

720p hd led tv (2 pages)

[LED TV Toshiba 23L1350U Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba 39L2300U User Manual](#)

Integrated high definition led television (123 pages)

[LED TV TOSHIBA 50L2300U User Manual](#)

(123 pages)

[LED TV Toshiba 23L2300U Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba 23PU200 series Owner's Manual](#)

(32 pages)

[LED TV Toshiba 23PB200 Series Owner's Manual](#)

(29 pages)

[LED TV Toshiba 23L2300UC Resource Manual](#)

Integrated high definition led television (2 pages)

[LED TV Toshiba 23L1400UC User Manual](#)

Integrated high definition led television (110 pages)

[LED TV Toshiba 32L110U Quick Setup Manual](#)

28" 720p, 60hz, led tv; 32" 720p, 60hz, led tv (2 pages)

[LED TV Toshiba 24W144*DG Online Manual](#)

Led backlight lcd satellite tv (48 pages)

[LED TV Toshiba 24L3965 Owner's Manual](#)

(25 pages)

[LED TV Toshiba 24L3965EA Owner's Manual](#)

(29 pages)

Summary of Contents for Toshiba 24L2900

Page 1 You will find the model number and serial number on the back of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your TOSHIBA dealer regarding this product. Model number: Serial number:...

Page 2: Table Of Contents

Contents Welcome to Toshiba • Thank you for purchasing this Toshiba LED TV. This manual will help you use the exciting features of your new TV. • Instructions in this manual are based on using the remote control. Please read all safety and operating instructions in this manual •...

[Page 3: Important Safety Precautions](#)

Important Safety Precautions Be sure to observe the following instructions and precautions to ensure safe use of this TV. • Never block or cover the slots and openings in the cabinet. • Never place the TV so that it is facing upward or on its side. •...

[Page 4](#) Important Safety Precautions Cleaning Be especially careful that children do not insert objects in the TV. 4. When the TV will not be used for a long period of time, such as during vacation or travel, remove the power plug from the CAUTION: Avoid using chemicals (such as air refreshers, wall outlet for safety).

[Page 5](#) • Toshiba is not liable for any damage caused by neglect of the instructions described in the owner's manual. • Toshiba is not liable for any damage caused by misuse or malfunction through simultaneous use of this product and the connected equipment.

[Page 6: Getting Started](#)

2. Remove the stand from the accessory bag and then insert the stand into the bottom slot of the TV. 3. Secure the Base Stand to the TV with the screw in accessory tightly.
24"(24L2900/24L2900EA/24L2900EE/24L2900EV) Screws:M4x25 Base Stand
43"(43S2900/43S2900EA/43S2900EE/43S2900EV) Base Stand...

[Page 7](#) Getting started Installing the wall mount bracket 200X200 mm (24"/43") Wall mount hole pattern (mm) 100X200 mm (32"/40") Wall mount screw size (mm) 4XM6 8.0 - 10.0 mm Wall Mount Bracket Wall Mount Screw Rear cover of the TV Wall Mount Spacer Follow instructions provided with the Wall mount bracket.

[Page 8: Tv Front](#)

TV Front 32"(32S2900/32S2900EA/32S2900EE/32S2900EV)
40"(40S2900/40S2900EA/40S2900EE/40S2900EV)
24"(24L2900/24L2900EA/24L2900EE/24L2900EV)
43"(43S2900/43S2900EA/43S2900EE/43S2900EV) Joystick button(Remote sensor / Power indicator / Standby) Single button(Remote sensor / Power indicator / Standby) Item Description
Item Description Receive remote signals from the remote Receive remote signals from the remote Remote sensor control.

[Page 9: Tv Rear](#)

Getting started TV Rear 24"(24L2900/24L2900EA/24L2900EE/24L2900EV)
32"(32L2900/32L2900EA/32L2900EE/32L2900EV)

[Page 10](#) Getting started 32"(32S2900/32S2900EA/32S2900EE/32S2900EV)
40"(40S2900/40S2900EA/40S2900EE/40S2900EV)

[Page 11](#) Getting started 43"(43S2900/43S2900EA/43S2900EE/43S2900EV) NOTES • Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure. • Not all A/V devices have the ability to connect to a TV, please refer to the user's manual of your A/V device for compatibility and connections procedure.

[Page 12: Terminals](#)

Getting started Terminals VIDEO Connect a composite video cable and left-right audio cables from an external AV device. VIDEO The VIDEO can be used to connect a range of equipment, including video recorders, camcorders, INPUT decoders, satellite receivers, DVD players, or games consoles. (Only for 24") Connect a composite video cable and left-right audio cables from an external AV device.

[Page 13: Connecting With An Hdmi Cable](#)

Getting started Connecting with an HDMI cable Connect an HDMI cable from an external A/V equipment. Some devices such as DVD player require HDMI signal to be set to output in the device's settings. Please consult your device user manual for instructions.

[Page 14: Remote Control](#)

Remote Control Buttons on the Remote Control POWER: Switch the TV on or into standby mode □ Select input source P.MODE: Select picture mode S.MODE: Select sound mode SLEEP: Set the

sleep timer : Select aspect ratio MEDIA: Enter the media TV: Enter the Live TV 0-9: Direct channel selection or numbers input : To return to the last view programme...

[Page 15: Installing Batteries In The Remote Control](#)

Remote Control Installing Batteries in the Remote Control Remote Control Operation Range 24" (24L2900/24L2900EA/24L2900EE/24L2900EV) Press the release button on the back of the remote control to remove the battery compartment cover. Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.

[Page 16: General Operation](#)

General Operation Adding channels to a Favorites list Turning the TV on for the First Time Press [▲/▼] buttons to select channel then press [Yellow] button to add the selected channel to the favorite list. 1. Connect the mains cable to the mains socket after you have Deleting channels from Favorites list completed all the connections.

[Page 17: Sound](#)

General Operation Choosing a sound mode Direct Point to point display also known as 1:1 Pixel Mapping in HDMI > Sound > Sound Mode source. You can select a favourite sound mode suitable for the content type or the listening environment. NOTES You can adjust the equalizer at specific frequency points (Such as •...

[Page 18: Timer](#)

General Operation Channel Edit Key Lock: If this switch is set to ON, the button on the machine Manually edit the channel list order to your preference. will not respond. Hotel Mode: Allows you to lock your desired item on screen •...

[Page 19: Media Operation](#)

- Press [◀/▶/▲/▼] buttons to select the name of the content/folder that contains your content. • Press the [OK] button to play/enter content/the folder. NOTE • You must obtain any required permission from copyright owners to download or use copyrighted content. TOSHIBA cannot and does not grant such permission.

[Page 20: Troubleshooting](#)

Troubleshooting Picture Problem The Problem Possible Solutions When the TV has trouble with the picture, these steps may help No sound and • Check if the power cord is plugged into a resolve the problem. picture. powered AC outlet. • Press the button in the remote control to The Problem Possible Solutions...

[Page 21: Specifications](#)

Specifications Features, appearance and specifications are subject to change without notice. 24" 32" 32" Item (24L2900/24L2900EA/ (32L2900/32L2900EA/ (32S2900/32S2900EA/ 32S2900EE/32S2900EV) 24L2900EE/24L2900EV) 32L2900EE/32L2900EV) Without Stand 553 x 335 x 70 mm 730 x 443 x 73 mm 730 x 432 x 72.8 mm Dimension (W x...

[Page 22](#) Media Format List Video: Video Codec(file File Extension Sampling rate Number Container Bit Rate Profile Remark type) Name SPEC Mpeg1 .dat .mpg.mpeg 1080P @ 30fps 20Mbps Main Profile Max Resolution: 1280x720 Mpeg2 .dat .mpg.mpeg 1080P @ 30fps 20Mbps Main Profile .dat: not support this container.

[Page 23](#) Specifications Audio: Audio Codec(file Number Container File Extension Name Bit Rate Remark type) supported bit rate: MPEG1 32kbps ~ 448kbps(Bit rate) .MP3 64kbps ~ 320kbps Layer2 32kHz ~ 48kHz(Sampling rate) supported sampling frequency: 32kHz ~ 48kHz supported bit rate: MPEG1 32kbps ~ 320kbps(Bit rate) .MP3 64kbps ~ 320kbps...

[Page 24](#) Specifications Photo: File Required Number Container Extension Photo Resolution DRAM size bytes Remark Name (Mbytes) 15360x8640 Base-line 3.96 414720 (1920X8 1080X8) Max Size:8096*6144 .jpeg Progressive 1024x768 6.00 6291456 Max Size: 1200*720 JPEG 15360x8640 Base-line 3.96 414720 (1920X8 1080X8) Max Size: 8096*6144 .jpg Progressive 1024x768...

[Page 25: License Information](#)

For more detailed information about the collection and recycling programmes available in your country/region, please visit our website (www.toshiba.eu/recycling) or contact your local city office or the shop where you purchased the product.

[Page 26](#) For more detailed information about the collection and recycling programmes available in your country/region, please visit our website (www.toshiba.eu/recycling) or contact your local city office or the shop where you purchased the product. The CE-mark is available only for EE/EV models.

This manual is also suitable for:

24I2900ea24I2900ee24I2900ev32I290032I2900ea32I2900ee ... [Show all](#)