



# Power Input +12V (Cn23); Dc Jack Power Input [Reserved] (Cn24) - Asus AAEON PICO-ADN4 User Manual

Pico-itx single board computer



1

2

3

4

5

6

7

8

9

10

Table Of Contents

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117



•

[Table of Contents](#)

•

## Bookmarks







## 2.4.18

Power Input +12V (CN23)

Pin

Pin Name


1

+V\_IN

2

GND

## 2.4.19

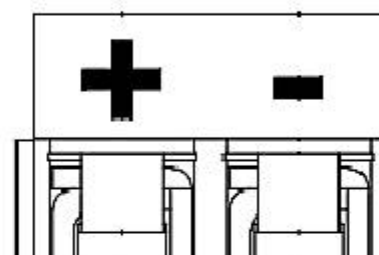

## DC Jack Power Input [Reserved] (CN24)

Pin

Pin Name

1

+V\_IN

2

GND

3

GND

Chapter 2 - Hardware Information

Signal Type

PWR

GND

,

Signal Type

PWR

GND

GND


Signal Level

+12V

Signal Level

+12V

29

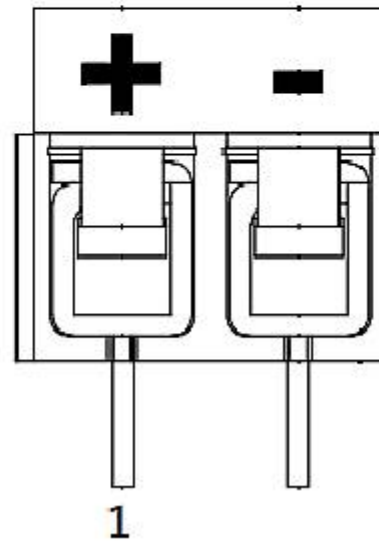

[Previous Page](#)  
[Next Page](#)

1  
...  
40  
41  
42  
43  
44  
45  
46  
47

## Related Manuals for Asus AAEON PICO-ADN4

[Single board computers Asus AAEON PICO-WHU4-SEMI Quick Installation Manual](#)

(6 pages)

[Single board computers Asus AAEON PICO-KBU4 User Manual](#)

(93 pages)

[Single board computers Asus AAEON PICO-APL4 User Manual](#)

(90 pages)

[Single board computers Asus AAEON PICO-EHL4 User Manual](#)

(108 pages)

[Single board computers Asus AAEON PICO-V2K4 User Manual](#)

(98 pages)

[Single board computers Asus AAEON PICO-V2K4 User Manual](#)

Pico-itx single board computer (101 pages)

[Single board computers Asus AAEON PICO-IMX8PL User Manual](#)

Pico-itx single board computer (85 pages)

[Single board computers Asus AAEON GENE-WHU6 User Manual](#)

3.5" subcompact board (105 pages)

[Single board computers Asus E394S-IM-AA User Manual](#)

(102 pages)

[Single board computers Asus AAEON GENE-ADN6 User Manual](#)

3.5" subcompact board (124 pages)

[Single board computers Asus AAEON EPIC-KBS7 User Manual](#)

(92 pages)

[Single board computers Asus Tinker Edge T Getting Started](#)

(12 pages)

[Single board computers Asus Aaeon RICO-3288 User Manual](#)

Rockchip rk3288 platform (36 pages)

[Single board computers Asus AAEON de next-V2K8 User Manual](#)

(83 pages)

[Single board computers Asus Aaeon UP-CORE Quick Installation Manual](#)

(14 pages)

## Related Content for Asus AAEON PICO-ADN4

[Aaeon RICO-3288 Dc Power Input \(Cn25\)](#)

[Asus Aaeon RICO-3288](#)

[AAEON PICO-KBU4 External +12V Input \(Cn14\)](#)

[Asus AAEON PICO-KBU4](#)

[AAEON de next-V2K8 Sata Power \(Jsatap1\)](#)

Asus AAEON de next-V2K8

[AAEON UP Element i12 EDGE Power Button \(1\)](#)

Asus AAEON UP Element i12 EDGE

[AAEON EPIC-KBS7 Hdmi Port \(Cn23\)](#)

Asus AAEON EPIC-KBS7

[E394S-IM-AA Lvds Panel Power Selection Jumper \(On Selected Models\)](#)

Asus E394S-IM-AA