

Lvds Panel Configuration - Asus AAEON PICO-ADN4 User Manual

Pico-itx single board computer

1
2
3
4
5
6
7
8
9
10
Table Of Contents
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117



-

[Table of Contents](#)

•

Bookmarks



3.5.1.2

LVDS Panel Configuration

Options

LVDS

Enable/Disable this panel.

LVDS Panel Type

Select LCD panel used by Internal Graphics Device by selecting the appropriate setup item.

Chapter 3 - AMI BIOS Setup Configuration

Disabled

Aptio Setup - AMI		
Chipset		
LVDS Panel Configuration	[Enabled]	Enable/Disable

Enabled

640x480,18bit,60Hz

800x480,18bit,60Hz

800x600,18bit,60Hz

1024x600,18bit,60Hz

1024x768,18bit,60Hz

1024x768,24bit,60Hz

1280x768,24bit,60Hz

1280x1024,48bit,60Hz

Chipset

Aptio Setup - AMI

1366x768,24bit,60Hz

LVDS Panel Configuration

Enable/Di

1440x900,48bit,60Hz

1600x1200,48bit,60Hz

[Enabled]

1920x1080,48bit,60Hz

Panel Type

[1024x768@60Hz]

1920x1200,48bit,60Hz

Color Depth

[18-Bit]

Bit Clock Mode

[Windows Slider]

Optimal Default, Failsafe Default

Optimal Default, Failsafe Default

66

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
77
78
79
80
81
82
83
84

Related Manuals for Asus AAEON PICO-ADN4

[Single board computers Asus AAEON PICO-WHU4-SEMI Quick Installation Manual](#)

(6 pages)

[Single board computers Asus AAEON PICO-KBU4 User Manual](#)

(93 pages)

[Single board computers Asus AAEON PICO-APL4 User Manual](#)

(90 pages)

[Single board computers Asus AAEON PICO-EHL4 User Manual](#)

(108 pages)

[Single board computers Asus AAEON PICO-V2K4 User Manual](#)

(98 pages)

[Single board computers Asus AAEON PICO-V2K4 User Manual](#)

Pico-itx single board computer (101 pages)

[Single board computers Asus AAEON PICO-IMX8PL User Manual](#)

Pico-itx single board computer (85 pages)

[Single board computers Asus AAEON GENE-WHU6 User Manual](#)

3.5" subcompact board (105 pages)

[Single board computers Asus E394S-IM-AA User Manual](#)

(102 pages)

[Single board computers Asus AAEON GENE-ADN6 User Manual](#)

3.5" subcompact board (124 pages)

[Single board computers Asus AAEON EPIC-KBS7 User Manual](#)

(92 pages)

[Single board computers Asus Tinker Edge T Getting Started](#)

(12 pages)

[Single board computers Asus Aaeon RICO-3288 User Manual](#)

Rockchip rk3288 platform (36 pages)

[Single board computers Asus AAEON de next-V2K8 User Manual](#)

(83 pages)

[Single board computers Asus Aaeon UP-CORE Quick Installation Manual](#)

(14 pages)

Related Content for Asus AAEON PICO-ADN4

[AAEON de next-V2K8 Graphics Configuration](#)

[Asus AAEON de next-V2K8](#)

[AAEON PICO-EHL4 Lvds Back Light Inverter \(Cn2\)](#)

[Asus AAEON PICO-EHL4](#)

[AAEON PICO-APL4 Front Panel Connector \(Cn3\)](#)

Asus AAEON PICO-APL4

[Aaeon RICO-3288 Lvds Power Selection \(Jp1\)](#)

Asus Aaeon RICO-3288

[AAEON PICO-KBU4 Lvds Backlight Lightness Control Mode Selection \(Jp3\)](#)

Asus AAEON PICO-KBU4