



Toshiba ASD-MTG-KIT9 Installation Procedure

1
2


--

•

Bookmarks

[Download this manual](#)

Quick Links

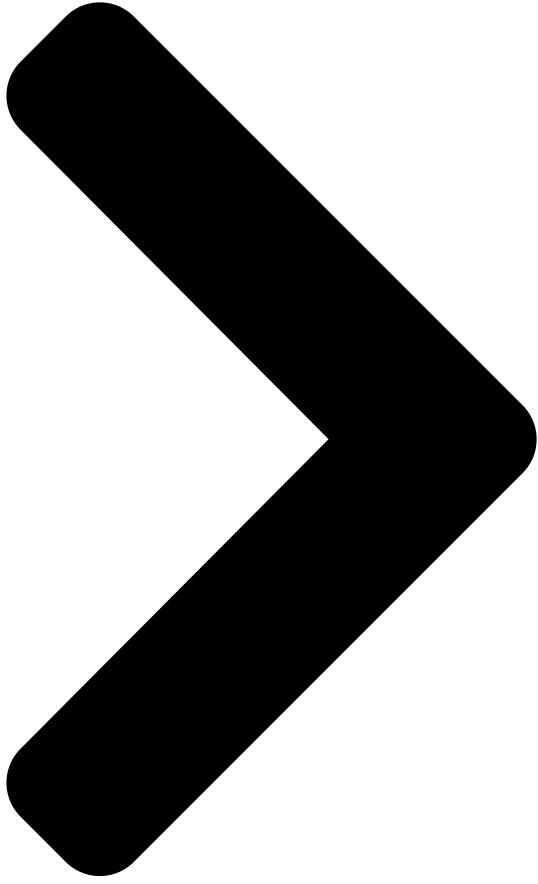

efesotomasyon.com -Toshiba inverter,drive,servo,plc

ASD-MTG-KIT9 Installation Procedure

The ASD may be controlled from a remotely-mounted Electronic Operator Interface (EOI).

The EOI can operate up to distances of up to 15 feet away from the ASD via the RS485 Port.

An EOI extender cable is required for remote mounting. Extender cables are available in lengths of 7, 10, or 15 feet and may be ordered through your sales representative.

Required Remote-mount Hardware

EOI Remote-Mount Assembly

- ASD-MTG-KIT9 Assy.

Extender Cables

- Cable, RJ45, 7 ft. — P/N ASD-CAB7F

Cable, RJ45, 10 ft. — P/N ASD-CAB10F

Cable, RJ45, 15 ft. — P/N ASD-CAB15F

TOSHIBA

Mounting Precautions

Mount the unit securely in a well ventilated area that is out of direct sunlight using the four mounting studs of the ASD-MTG-KIT9 Assy. The ambient operating temperature of the EOI is 14 - 104° F (-10 - 40° C).

Read and adhere to the Safety Precautions and Warnings of the Installation and Operation Manual of the ASD.

When mounting the ASD-MTG-KIT9:

- Select a mounting location that is easily accessible by the user.

- Avoid installation in areas where vibration, heat, humidity, dust, metal particles, or high levels of electrical noise (EMI) are present.

- Do not install the EOI where it may be exposed to flammable chemicals or gasses, water, solvents, or other fluids.

- Turn the power on only after securing the front cover or securing the door of the ASD.

Plate Installation and Module Removal/Installation

Reference Figures 1 and 2 on pg. 2 for instructions 5 - 8 below.

1.

At the Remote EOI mounting location, identify and mark the locations of the 4.56" by 4.44" hole and the four 7/32" screw holes (see Figure 1).

2.

Cut the 4.56" by 4.44" rectangular mounting hole.

3.

Drill the four 7/32" screw holes for the four mounting studs of the Bezel plate.

4.

Attach and secure the Bezel plate to the front side of the mounting location using the four #10 flat washers, #10 split lock washers, and the 10-32 hex nuts.

5.

Remove the Display Module from the EOI of the ASD.

Document Number: 60172

1

[Next Page](#)

1

2

Related Manuals for Toshiba ASD-MTG-KIT9

[Recording Equipment Toshiba APOGEE FLN APG001Z Function Manual](#)

Option unit for tosvert vf-ps1 series inverter (28 pages)

[Recording Equipment Toshiba BMS-IWF0320E Installation Manual](#)

Smart device control interface (15 pages)

[Recording Equipment Toshiba Carrier RBM-Y0611F4PUL Installation Manual](#)

Multi port flow selector unit (32 pages)

[Recording Equipment Toshiba BMS-IFMB1280U-E Installation Manual](#)

Modbus (22 pages)

[Recording Equipment Toshiba RBM-Y1123FE Installation Manual](#)

Flow selector unit (16 pages)

[Recording Equipment Toshiba OIS PLUS Series Manual](#)

Operator interface stations (24 pages)

[Recording Equipment Toshiba RAV-DXC010 Installation Manual](#)

Lc dx interface (28 pages)

[Recording Equipment Toshiba ESTiA Owner's Manual](#)

Wireless interface for air to water heat pump (20 pages)

[Recording Equipment Toshiba TCS-NET Service Manual](#)

General purpose interface (38 pages)

[Recording Equipment Toshiba TCS-NET Setting Tool Manual](#)

Tcs-net general purpose interface (12 pages)

[Recording Equipment Toshiba BMS-IFBN1280U-E Installation Manual](#)

Bn interface (52 pages)

[Recording Equipment Toshiba BMS-IFBN1280U-E Installation Manual](#)

Central control device for commercial use bn interface (20 pages)

[Recording Equipment Toshiba TCB-IFMB641TLE Installation Manual](#)

Modbus interface (12 pages)

[Recording Equipment Toshiba Black Pear Installation And User Manual](#)

Bms interface for toshiba air-conditioning (40 pages)

[Recording Equipment Toshiba GR 200 Series Instruction Manual](#)

Interface unit (22 pages)

[Recording Equipment Toshiba TCB-IFTH1GUL Installation Manual](#)

24v thermostat interface (16 pages)

Summary of Contents for Toshiba ASD-MTG-KIT9

[Page 1](#) Mount the unit securely in a well ventilated area that is out of direct sunlight using the four mounting studs of the ASD-MTG-KIT9 Assy. The ambient operating temperature of the EOI is 14 – 104° F (-10 – 40° C).

[Page 2](#) -Toshiba inverter,drive,servo,plc Install the Connector Module onto the ASD. Install the Display Module into the ASD-MTG-KIT9 assembly. When installing the Connector Module or the Display Module into the housing ensure that the left side of the module is inserted first with the top and bottom catches securely in place (see Phillips screws at underside of display).