

Toshiba 24W3163DB Quick Start Manual

ł.

Bookmarks

•

Download this manual

Quick Links



24W3163DB QUICK START GUIDE Please www.toshiba-tv.com to download the full user manual.

Next Page

Related Manuals for Toshiba 24W3163DB

Smart TV Toshiba 24WK3C63DB Quick Start Manual (13 pages) Smart TV Toshiba 32WK3C63DB Quick Start Manual (13 pages) Smart TV Toshiba 32WD2A63DB Quick Start Manual (17 pages) Smart TV Toshiba 46TL933F How To Upgrade The Software (4 pages) Smart TV Toshiba 43 UF3D Series Quick Start Manual (113 pages) Smart TV Toshiba 32WK3A63DB Quick Start Manual (12 pages) Smart TV Toshiba 32L2163DB Quick Start Manual (12 pages) Smart TV Toshiba 32WL3C63DB Quick Start Manual (12 pages) Smart TV Toshiba 43LL3C63DB Quick Start Manual (13 pages)

Summary of Contents for Toshiba 24W3163DB

Page 1 24W3163DB QUICK START GUIDE Please visit www.toshiba-tv.com to download the full user manual.

<u>Page 3</u> Building and fitting stand Inserting the batteries into the remote Remove the back cover to reveal the battery compartment. Insert two 1.5V size AAA batteries. Make sure the (+) and (-) signs match (observe correct polarity). Do not mix old and new batteries. Replace only with same or equivalent type.

<u>Page 4</u> Connections Antenna External Devices Connect the antenna cable/s to your TV. PLEASE ENSURE BOTH UNITS ARE SWITCHED OFF BEFORE CONNECTING satellite Use the proper cable to connect two units together. dish To select the desired input source, press the Source rear side of the TV button on the remote control.

<u>Page 5</u> You can also review your TV's full user manual online or download as you like. Scan this QR code or visit https://toshiba-tv.com If you like to register your Toshiba TV, please visit the Toshiba support website as per link above and select "Register".

Page 6 TV model. Please check the product fiche for the product specifications relating to your model For more detailed information and videos on installation, function and features of your TV, refer to the full manual on our website: http://toshiba-tv.com /uk-uk/support English - 4

<u>Page 7</u> • Do not place any heat sources such as electric Safety Information heaters, radiators, etc. near the TV set. • Do not place the TV on the floor and inclined CAUTION surfaces. • To avoid danger of suffocation, keep plastic bags RISK OF ELECTRIC SHOCK out of the reach of babies, children and domestic DO NOT OPEN...

Page 8 Using the special functions to change the size of the WARNING displayed image (i.e. changing the height/width ratio) Do not ingest the battery, Chemical Burn Hazard. for the

purposes of public display or commercial gain This product or the accessories supplied with the may infringe on copyright laws.

Page 9 [1] EIA/CEA-861-D compliance covers the Country Restriction transmission of uncompressed digital video with high- In-door use only for 5470 MHz to 5725 MHz bandwidth digital content protection, which is being Greece band standardized for reception of high-definition video General authorisation required for network and Luxembourg signals.

Page 10 REACH (Registration, Evaluation, Authorisation and Restriction of Chemicals), entered into force on 1 June 2007. Toshiba will meet all REACH requirements and is committed to provide our customers with information about the presence in our articles of substances included on the candidate list according to REACH regulation.