



Asus PRIME Z270-A Quick Start Manual

1
2

--


•

Bookmarks

--

[Download this manual](#)

Quick Links

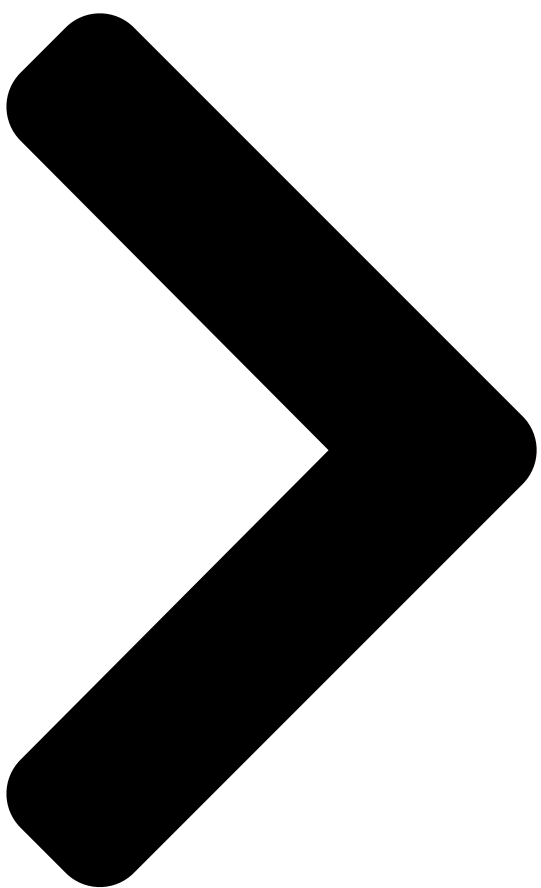

PRIME Z270-A

- quick start guide
- Краткое руководство по установке
- Stručná příručka
- Quick Start-vejledning
- Snabbstartsguiden
- Lühijuhend
- Guide de démarrage rapide
- Pikakäynnistysopas
- Schnellstarthilfe
- Оδηγός γρήγορης έναρξης
- Beüzemelési útmutató
- Guida Rapida
- Panduan Ringkas
- Қысқаша нұсқаулығы
- راهنمای شروع سریع
- Greitos darbo pradžios vadovas
- Īsa pamācība
- Hurtigstartsveiledning
- Guia de consulta rápida
- Instrukcja szybkiej instalacji
- Краткое руководство

قم بتثبيت وحدة المعالجة المركزية (CPU)

تجهة المركزية

CPU را نصب کنید

را نصب کنید

CPU орнатыңыз

CPU желді





Ghid de pornire rapidă
Guía de inicio rápida
Vodič za brzo korišćenje
Stručný návod na spuštění
Snabbstartsguide
Hızlı Başlatma Kılavuzu
Hướng dẫn khởi động nhanh
vodič za brzi početak rada
Список керівництво для початку експлуатації

Motherboard Layout

Step 7
Step 1
Step 1

دليل التشغيل السريع

Australia statement notice

From 1 January 2012 updated warranties apply to all ASUS products, consistent with the Australian Consumer Law. For the latest product warranty details please visit <http://www.asus.com/support/>. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If you require assistance please call ASUS Customer Service 1300 2787 88 or visit us at <http://www.asus.com/support/>

India E-waste (Management and Handling) Rule 2011

This product complies with the "India E-waste (Management and Handling)Rule 2011" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls(PBBs) and polybrominated diphenyl ethers (PBDEs) in concentrations exceeding 0.1 % by weight in homogenous materials and 0.01 % by weight in homogenous materials for cadmium, except for the exemptions listed in Schedule-II of the Rule AEEE Yönetmeliğine Uygundur

Q11956

First Edition

October 2016

Copyright © ASUSTeK Computer Inc.

All Rights Reserved

Step 1

Install the CPU

Инсталируйте процессора

Instalace procesoru

Installer CPU'en

De CPU installeren

Paigaldage CPU

Installer le CPU

Asenna suoritin

Installieren der CPU

Εγκατάσταση της CPU

Helyezze be a CPU-t

Installare la CPU

Pasang CPU

CPU□□□□□

Step 3

Install memory modules

Step 2

Инсталируйте модули памяти

Instalace pamětových modulů

Step 3

Installer hukommelsesmodulerne

Geheugenmodules installeren

Paigaldage mäluoodulid

Step 7

Installer les modules mémoire

Asenna muistimoduulit

Installieren der Speichermodule

Εγκατάσταση των στοιχείων μνήμης

Helyezze be a memória modulokat

Installare i moduli di memoria

Pasang modul memori

□□□□□□□□□□

Step 4

Step 6

15060-66080000

CPU □□

Sumontuokite centrinį procesorių

Uzstādiet centrālo procesoru

Installer sentralprocessoren (CPU)

Instale a CPU

Instalacja procesora

Установка процессора

Instalați CPU-ul

Instalar la CPU

Instalirajte CPU

Instalácia centrálneho procesora

Installera CPU

□□□□□ CPU

CPU'yu takin

Lâp CPU

Instalacija procesora

Інстальуйте процесор

قم بتثبيت وحدة المعالجة المركزية (CPU)


الجهة المركزية

CPU را نصب کنید

را نصب کنید

CPU орнатыңыз

CPU желді

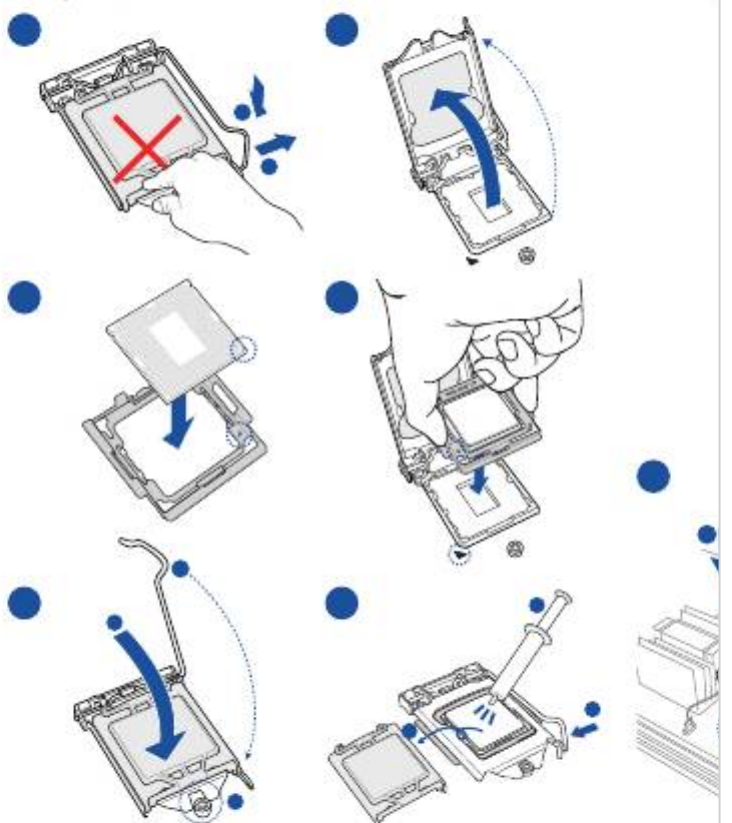

تثبيت وحدات الذاكرة

SATA جهاز

ماتول های حافظه را نصب کنید

را نصب کنید

Жад модульдерін орнатыңыз

SATA құры



Motherboard

Sumontuokite atminties modulius

Uzdādiēt atmiņas moduļus

Installer minnmodulur

Instale módulos de memória

Instalacja modułów pamięci

Установка модулей памяти

Instalați modulele de memorie

Instalar los módulos de memoria

Instalirajte module memorije

Instalácia pamäťových modulov

Installera minnesmodulur

Belleg modüllerini takin

Lắp các thanh nhớ

Instalacija memorijskih modula

Інстальуйте модулі пам'яті

Step 2

Install the CPU fan

Інсталируйте вентилятор на процессора

Instalace ventilátoru procesoru

Installer CPU-blæseren

De CPU-ventilator installeren

Paigaldage CPU ventilaator

Installer le ventilateur de CPU

Asenna suorittimen tuuletin

Installieren des CPU-Lüfters

Εγκατάσταση του ανεμιστήρα της CPU

Szerelje be a CPU ventilátort

Installare la ventola della CPU

Pasang kipas CPU

CPU 〇〇〇〇〇〇〇〇

CPU 〇 〇

Sumontuokite centrinio procesoriaus ventiliatorių

Uzdādiēt centrālā procesora ventilatoru

Installer CPU-viften

Instale a ventoinha de CPU

Instalacja wentylatora procesora

Установка вентилятора

Instalați ventilatorul CPU-ului

Instalar el ventilador de la CPU

Instalirajte CPU ventilator

Instalácia ventilátora centrálneho procesora

Installera CPU-fläkten

CPU fanini takin

Lắp quạt CPU

Instalacija ventilatora procesora

Інстальуйте вентилятор процесора

Step 4

Install SATA devices

Інсталируйте SATA устройства

Instalace zařízení SATA

Installer SATA-udstyret

SATA-apparaten installeren

Paigaldage SATA seadmed

Installer des périphériques SATA

Asenna SATA-laitteet

Installieren der SATA-Geräte

Εγκατάσταση συσκευών SATA

Szerelje be a SATA eszközöket

Installare i dispositivi SATA

Pasang perangkat SATA

SATA 〇〇〇〇〇〇〇〇〇〇

SATA 〇〇 〇〇

Sumontuokite SATA įrenginius

Uzdādiēt SATA ierīces

Installer SATA-einrichtungen

Instale dispositivos SATA

Instalacja urządzeń SATA

Установка SATA устройств

Instalați dispozitivele SATA

Instalar dispositivos SATA

Instalirajte SATA uređaje

Instalácia SATA zariadení

Installera SATA-enheter

Belleg SATA-einrichtungen

Lắp các thiết bị SATA

Instalacija SATA uređaja

Інстальуйте SATA пристрої

قم بتثبيت وحدة المعالجة المركزية (CPU)


الوحدة المركزية

CPU را نصب کنید

را نصب کنید

CPU орнатыңыз

CPU желді

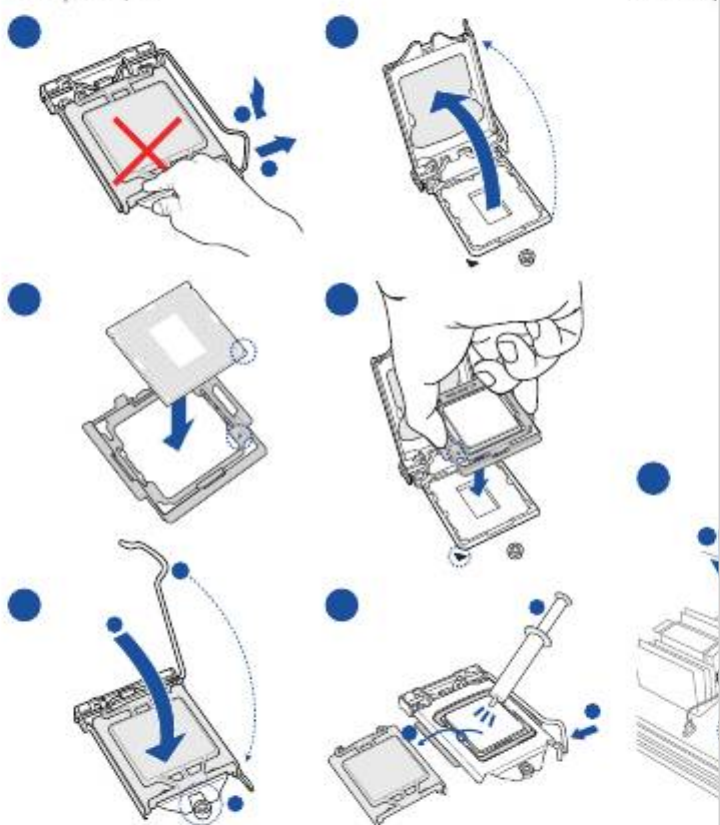

تثبيت وحدات الذاكرة

SATA جهاز

ماتول های حافظه را نصب کنید

را نصب کنید

Жад модульдерін орнатыңыз

SATA құры



İnştalácia zariadení SATA

Instalieren SATA-eenheden

安装 SATA 设备

SATA-uygıtıları takın

Lắp các thiết bị SATA

Instalacija SATA uređaja

Інсталюйте пристрої SATA



قم بتثبيت وحدة المعالجة المركزية (CPU)

الجهة المركزية

Next Page

1
2

Related Manuals for Asus PRIME Z270-A

[Motherboard Asus TUF Z270 Mark 1 User Manual](#)

(104 pages)

[Motherboards Asus Prime Z270-A Series Bios Manual](#)

(72 pages)

[Motherboard Asus PRIME Z270-AR Series Manual](#)

(102 pages)

[Motherboard Asus PRIME Z270-AR Quick Start Manual](#)

(2 pages)

[Motherboard Asus STRIX Z270H GAMING Bios Manual](#)

(68 pages)

[Motherboard Asus STRIX Z270H GAMING Manual](#)

(98 pages)

[Motherboard Asus H110M-A/M.2 User Manual](#)

(26 pages)

[Motherboard Asus PRIME Z270M-PLUS Manual](#)

(80 pages)

[Motherboard Asus STRIX Z270F GAMING Bios Manual](#)

(72 pages)

[Motherboard Asus STRIX Z270F GAMING Bios Manual](#)

(72 pages)

[Motherboard Asus STRIX Z270E GAMING Bios Manual](#)

(74 pages)

[Motherboard Asus Strix Z270I Gaming User Manual](#)

(95 pages)

[Motherboard Asus STRIX Z270G GAMING Manual](#)

(106 pages)

[Motherboard Asus STRIX Z270G GAMING Manual](#)

(106 pages)

[Motherboard Asus STRIX Z270G GAMING Bios Manual](#)

(68 pages)

[Motherboard Asus PRIME Z270-P Manual](#)

(87 pages)

Summary of Contents for Asus PRIME Z270-A

Page 1 You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If you require assistance please call ASUS Customer Service 1300 2787 88 or visit us at <http://www.asus.com/support/> India E-waste (Management and handling) Rule 2011 This product complies with the "India E-waste (Management and Handling)Rule 2011"...

Page 2 Step 5 Step 6 Step 7 Install expansion card(s) Install system panel connectors Install ATX power connectors Инсталирайте допълнителна карта (допълнителни карти) Инсталирайте конекторите на ситемния панел Инсталирайте ATX конекторите за захранване Instalace přídavné karty (karet) Instalace konektorů panelu systému Instalace konektorů...