



# **TOSHIBA**

Toshiba XM-6702B User Manual



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12

--

•

Bookmarks

--

[Download this manual](#)

### Quick Links



The Wayback Machine -

<https://web.archive.org/web/20000615020558/http://www.toshiba.com:80/taecdpc/techdocs/67...>

Technical Documentation | User's Guide

[Back to Contents Page](#)

Toshiba XM-6702B CD-ROM

## Introduction

[General Features](#) | [Drive Speed](#) | [BUS Interface](#) | [Disc Formats](#) | [Front Panel](#)

[General Features](#)

---

[Tray Loading Mechanism](#)

---

[3-way Disc Eject \(eject button, software, emergency eject hole\)](#)

---

[78ms Average Access Time](#)

---

[DAE \(Digital Audio Extraction\) Audio Capability](#)

---



MPC3 and Photo-CD Multisession Compatibility

Headphone Output Volume Control

Supports CD-RW Play (speeds 6 - 14X)

[top of page](#)

Drive Speed

48X — —

BUS Interface

ATAPI

[top of page](#)

Types of Disc Formats Supported

---

Red-Book

Yellow-Book

CD-ROM-XA

CD-I Bridge (Photo-CD, Video CD)

CD-I

CD-I Ready

CD-G

Multi-session (Photo-CD, CD Extra, CD-RW, CD-R)

CD-TEXT

[top of page](#)

Front Panel

Figure 1.XM-6702B CD-ROM Front Panel

---

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba XM-6702B

[CD/CDR Drive Toshiba XM-6802B User Manual](#)

Cd-rom drive (15 pages)

[CD/CDR Drive Toshiba XM-6401B Instruction Manual](#)

(35 pages)

[CD/CDR Drive Toshiba SD-R2102 User Manual](#)

Cd-rw/dvd-rom combination mobile drive (12 pages)

[CD/CDR Drive Toshiba SD-R1512 User Manual](#)

Cd-rw/dvd-rom combo drive (17 pages)

[CD/CDR Drive Toshiba SD-R2212 User Manual](#)

Cd-rw/dvd-rom combination mobile drive (12 pages)

[CD/CDR Drive Toshiba SD-R2412 User Manual](#)

Cd-rw/dvd-rom combination mobile drive (12 pages)

[CD/CDR Drive Toshiba SD-R1002 Installation Instructions Manual](#)

Cd-rw/dvd-rom drive (12 pages)

[CD/CDR Drive Toshiba SR-M8102 User Manual](#)

Cd-r/cd-rw drive (16 pages)

[CD/CDR Drive Toshiba SR-C8002 Product Specification](#)

Cd-r/cd-rw drive (31 pages)

## Summary of Contents for Toshiba XM-6702B

[Page 1](#) BUS Interface ATAPI top of page Types of Disc Formats Supported Red-Book Yellow-Book CD-ROM-XA CD-I Bridge (Photo-CD, Video CD) CD-I CD-I Ready CD-G Multi-session (Photo-CD, CD Extra, CD-RW, CD-R) CD-TEXT top of page Front Panel Figure 1.XM-6702B CD-ROM Front Panel...

[Page 2](#) Eject The EJECT button is used to open the disc tray so you can install or remove a disc. Button Busy When you install a disc into the CD-ROM drive, the BUSY light flashes slowly as it attempts Indicator to locate the disc. One of the following will occur: BUSY light goes out.

[Page 3](#) Remove computer cover and faceplate if required. Refer to your computer system's manual for removal information. Your Toshiba CD-ROM can be placed in any free half-height drive slot at the front of your computer. (It can be mounted horizontally or vertically.) Carefully start sliding the CD-ROM into the opening with the disc tray facing the front of the computer.

[Page 4](#) Figure 6.Mounting Illustration Software Driver - Toshiba's CD-ROM Drive is "plug n' play". In Windows, when you apply power to your computer and boot-up, the system will recognize new hardware, and begin installing Window's ATAPI driver. If you prefer using DOS, download the ATAPI driver from our web site.

[Page 5](#) top of page...

[Page 6](#) The Wayback Machine - <https://web.archive.org/web/20000831170408/http://www.toshiba.com:80/taecdpc/techdocs/67...> ... Technical Documentation |User's Guide Back to Contents Page Toshiba XM-6702B CD-ROM User's Guide Using the CD-ROM Drive Drive Operation | Usage Guidelines | Emergency Ejection | Cleaning CDs | Cleaning the Drive Drive Operation Inserting a CD - Horizontally To insert a CD in a CD-ROM drive that is mounted horizontally, perform the following steps: Figure 1.Inserting CD...

[Page 7](#) If the disc becomes dirty wipe it with a damp soft cloth. Avoid cleaning in a circular motion, but rather from the inner side outward. Cleaning the Drive Toshiba does not recommend cleaning the drive. top of page...

[Page 8](#) The Wayback Machine - <https://web.archive.org/web/20000831170418/http://www.toshiba.com:80/taecdpc/techdocs/67...> Toshiba XM-6702B CD-ROM User's Guide Troubleshooting Problem Solution Disc tray cannot be opened Check that there is power to CD-ROM Use Emergency Eject instructions to open tray. Drive is not recognized by system Is the CD-ROM drive connected properly? Are all cables plugged in properly.

[Page 9](#) The Wayback Machine - <https://web.archive.org/web/20000711065536/http://www.toshiba.com:80/taecdpc/techdocs/67...> Toshiba XM-6702B CD-ROM Specifications General | Performance | Reliability | Audio | Environmental | Power | Physical | Connectors | Regulatory General Interface ATAPI Compatible CD-ROM Standards Red-Book Photo CD CD-EXTRA Yellow-Book Video CD CD-RW (Read)

[Page 10](#) 0.46m max. length Analog Audio Line Output Connector 4 Pin ATAPI Standard 3m max. top of page Regulatory The XM-6702B CD-ROM has been certified by the following regulatory agencies: UL 1950 EN60950 CAN/CSA-22.2 No.950 FCC 15J-B DHHS (Laser) EN60825-1, FDA 21CFR...

[Page 11](#) CAUTION: Severe damage to the CD-ROM circuits may occur if power cable is plugged in upside-down with power ON. Audio Supplies Analog sound to your system. Connectors ATAPI The XM-6702B CD-ROM is connected to your computer system through the ATAPI connector. Connector top of page Table 1.ATAPI Interface Pin Assignments INTERFACE PIN ASSIGNMENT SIGNAL...

[Page 12](#) DD12 Host Data Bus BIT IOCS16- Host 16 BIT I/O Host Data Bus BIT Host Address Bus BIT 1 DD13 Host Data Bus BIT PDIAG- Passed Diagnostics Host Data Bus BIT Host Address Bus BIT 0 DD14 Host Data Bus BIT Host Address Bus BIT 2 Host Data Bus BIT CS1FX...