



# TOSHIBA

Toshiba PLK-30FLEIS Instruction Manual

Electric hot pot



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16

• PAGE

1




•

Bookmarks

[Download this manual](#)

### Quick Links

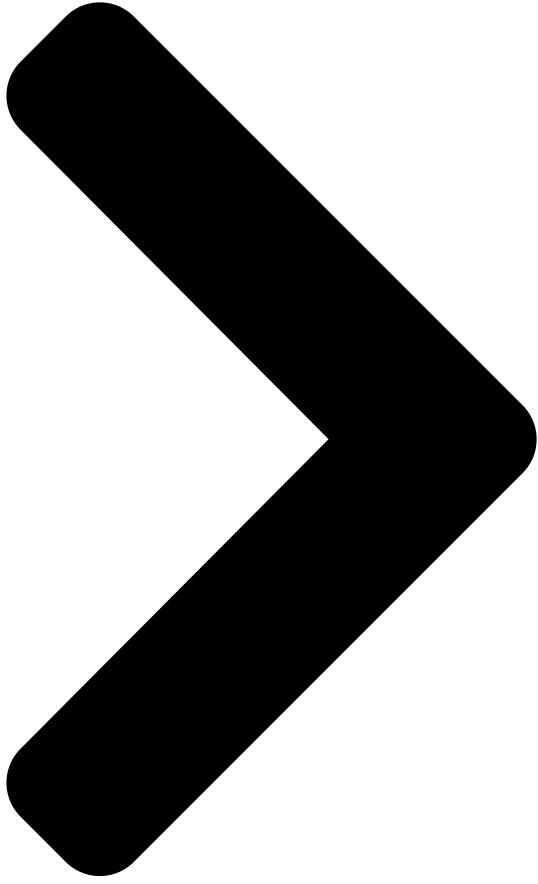

[  
[  
[

NENL10000000173\_EN.indd 1  
NENL10000000173\_EN.indd 1  
9/25/18 10:48 AM  
9/25/18 10:48 AM

**TOSHIBA**





[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba PLK-30FLEIS

[Kitchen Appliances Toshiba PLK-25DL Instruction Manual](#)

Electric hot pot (for household use) (13 pages)

[Kitchen Appliances Toshiba PLK-45SFE Instruction Manual](#)

Electric hot pot (16 pages)

[Kitchen Appliances Toshiba PLK-45SD Instruction Manual](#)

Electric hot pot (17 pages)

[Kitchen Appliances Toshiba PLK-45SD Instruction Manual](#)

Electric hot pot (13 pages)

[Toshiba PLK-45SD, PLK-45SDI, PLK-45SSDR, PLK-45SDRI - Electric Hot Pot Manual](#)

(article)

## Summary of Contents for Toshiba PLK-30FLEIS

[Page 1](#) NENL10000000173\_EN.indd 1 NENL10000000173\_EN.indd 1 9/25/18 10:48 AM 9/25/18 10:48 AM...

[Page 2](#) Do not touch. For repair, please contact the shop you purchased or Toshiba repair information. Please be more carefully not to allow disassemble. Do not connect or Close the lid firmly.

[Page 3](#) (WARNING continued) Do not fill the water more than the maximum of the apply this appliance and water level gauge. keep it out of reach from the PROHIBITED PROHIBITED The hot water may splash over and you children.

[Page 4](#) CAUTION Pull the plug from the AC When disconnecting, hold outlet when not in use. the plug and pull it out without touching the cord. It may cause injury, burns, an electric Unplug. Hold the shock or electric leakage due to the It may cause an electric shock or a short plug and pull.

[Page 5](#) IMPORTANT DOCUMENT ON SAFETY PRECAUTION Indicates the forbidden operation. Indicates the information which should be followed strictly. Safety Warning Do not disassemble, repair, fix, or modify the product (unless indicated in the operation manual). Do not pull or insert the electric plug and the magnetic plug with wet hands. Do not touch the product, cable, or electric plug with wet hands.

[Page 6](#) HOW TO INSTALL EARTH LEAD WIRE (Model PLK-25DL, PLK-30DL, PLK-25VE, PLK-30VE, PLK-25EL, PLK-30EL, PLK-25FL, PLK-30FL, PLK-25VF, PLK-30VF, PLK-25FLE, PLK-30FLE) 1. Remove Screw. Spring washer and Flat washer on Earth connecting plate. Earth connecting plate Screw Spring washer Flat washer Screw 2.

[Page 7](#) Warning label of burning Steam vent Power cord 3 pins For model : PLK-25DLI, PLK-25VEI, Lid release lever Handle PLK-25ELI, PLK-25FLI, PLK-25FLEIS, PLK-30DLI, PLK-30VEI, PLK-30ELI, PLK-30FLI, PLK-30FLEIS Control panel Power plug Water Main body dispenser Power cord 2 pins Water level...

[Page 8](#) PART NAMES AND FUNCTIONS (continued) Control Panel Functions of the indicators on the instruction manual Braille is shown near the button. FLASH REDUCE CHLORINE indicator ( EMPTY indicator ( Timer indicator ( Braille : unlock REDUCE CHLORINE REDUCE EMPTY CHLORINE TIMER REBOIL UNLOCK button...

[Page 9](#) FOR THE FIRST TIME USE (In case of not using the pot for a long time) Once boil the

water at the temperature of “98”. After that, press the PUMP button to pour some water. Then, pour out all the water remaining from the pot. And the pot can be used generally. Put the water into the inner pot and close the lid.

[Page 10](#) BOILING/POURING BOILING Put the water in the pot and close the lid. Indication Connect the plug. Then press the At the temperature of “98” TEMP. button to select the Coffee, Chinese tea, instant CLEAN CLEAN cup noodle, etc. temperature. : The BOIL indicator will light REDUCE At the temperature of “85”...

[Page 11](#) POURING When there is very little water Fill the water before the water WARNING reaches the water level gauge Do not turn over or tilt the pot. Do not terribly shake (especially shake up and down) or strike the pot. When not in use Do not hold the lid while moving the pot.

[Page 12](#) REBOILING/REDUCING CHLORINE/SETTING TIMER The water will be reboiled SETTING TIMER while warming. About 6 hours after the hot water is kept at the low temperature, the pot will automatically turn to the selected temperature. If it is applied before lunchtime or before you go out, Press the button once.

[Page 13](#) MAINTENANCE WARNING Do not wet the lid or the pot. Do not wash the pot thoroughly. Do not immerse the bottom of the pot into the water and do not turn over the pot while its bottom is wet. Do not wet the cord. It may cause a short circuit, an electric shock, and an accident.

[Page 14](#) How to clean the pot with the citric acid Put the water into the pot at the Unplug and pour out all the level of maximum water. Then fill water. Wipe away the dirt from the about 50 grams of citric acid into pot and wash it with water.

[Page 15](#) SPECIFICATIONS Power supply 220 - 240 V a.c. 50 - 60 Hz MODEL PLK-25DL, 25VE, 25EL, 25FL, 25FLE PLK-30DL, 30VE, 30EL, 30FL, 30FLE and 25VF and 30VF PLK-25DLI, 25VEI, 25ELI, 25FLI, PLK-30DLI, 30VEI, 30ELI, 30FLI, 30VFI 25VFI and 25FLEIS and 30FLEIS Boiling 700 W Power consumption Capacity...

[Page 16](#) NENL10000000173\_REV.00 NENL10000000173\_EN.indd 16 NENL10000000173\_EN.indd 16 9/25/18 10:48 AM 9/25/18 10:48 AM...

This manual is also suitable for:

Plk-25fleisPlk-30flePlk-25flePlk-25dlPlk-25vePlk-25el| ... [Show all](#)