 


Boot Booster - Asus Eee PC 1005P User Manual

Windows 7 edition

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60




•

[Table of Contents](#)

•

Bookmarks

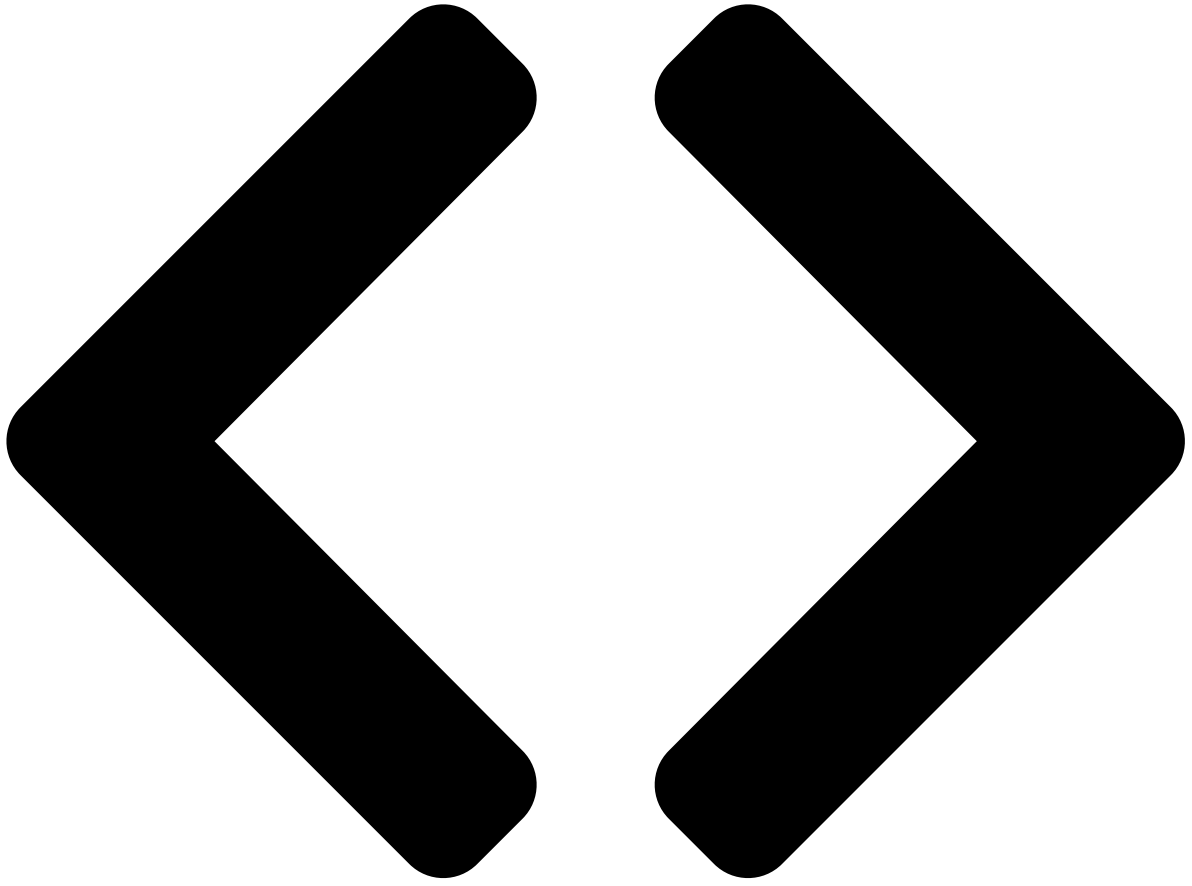

Boot Booster

The Boot Booster item in BIOS setup helps shorten your Eee PC bootup time. However, you **MUST** disable this BIOS item before you change any

Eee PC components or perform system recovery (from USB flash disk, external optical drive or hidden partition). Follow the instructions below to

disable Boot Booster:

Start the system and press <F2> on bootup to show the POST screen.

1.

Press <F2> again to enter the BIOS setup.

2.

Set Boot Booster to [Disabled].

If you fail to see the POST screen or enter the BIOS setup by doing the instruction above, restart the system and try pressing <F2> repeatedly on bootup.

Boot Device Priority

Boot Settings Configuration

OnBoard LAN Boot ROM

Press <F10> to save the configuration and restart Eee PC.

3.

Remember to enable Boot Booster after you complete hardware change or system recovery.

4-6

Copyright 1985-2005, American Megatrends, Inc.

Chapter 4: Support DVD & System Recovery

Boot

[Enabled]

Specifies the Boot Device Priority sequence.

A virtual floppy disk drive (Floppy Drive B:) may appear when you set the CD-ROM drive as the first boot device.

Select Screen

←→



Select Item

↑↓

Enter Go to Sub Screen

F1

General Help

F10

Save and Exit

ESC

Exit

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
43
44
45
46
47
48
49
50

Related Manuals for Asus Eee PC 1005P

[Laptop Asus 1001P-PU17-WT User Manual](#)

Windows 7 edition (62 pages)

[Laptop Asus Eee PC 1001P دليل الاستخدام](#)

Eee pc user's manual for arabic edition (arb5183) (62 pages)

[Laptop Asus Eee PC 1000H Hardware Manual](#)

Asus eee pc 1000h: user guide (76 pages)

[Laptop Asus Eee PC 1000HA Linux Manual](#)

(44 pages)

[Laptop Asus Eee PC 1000HD Linux Software Manual](#)

(86 pages)

[Eee PC 1001HT Boot.booster](#)

Asus Eee PC 1001HT

[Eee PC 1000HC Boot Booster](#)

Asus Eee PC 1000HC

[Eee PC 1000HAE Boot.booster](#)

Asus Eee PC 1000HAE