

TOSHIBA

Toshiba EC0P042SV-S Instruction Manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links



INSTRUCTION MANUAL

MICROWAVE OVEN

EC0P042SV-S

Please review this instruction manual before operating.

Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba EC0P042SV-S

[Microwave Oven Toshiba EC042A5C-BS Instructions Manual](#)

Microwave convection oven (37 pages)

[Microwave Oven Toshiba EC042A5C-BS Instruction Manual](#)

Microwave convection oven (44 pages)

[Microwave Oven Toshiba EC042A5C-BS Instructions Manual](#)

Convection oven (60 pages)

[Microwave Oven Toshiba EC9P032SV-SV Instruction Manual](#)

(27 pages)

[Microwave Oven Toshiba EC034A2XC-S1 Instruction Manual](#)

(36 pages)

[Microwave Oven Toshiba EC0P042SV-SSHA Instruction Manual](#)

(34 pages)

[Microwave Oven Toshiba EC042A5C-SS Instructions Manual](#)

Microwave convection oven (36 pages)

[Microwave Oven Toshiba EM245A5C-BS Instruction](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba EM131A5C-BS Instruction Manual](#)

Microwave solo oven (32 pages)

[Microwave Oven Toshiba EM131A5C-BS Instruction Manual](#)

Microwave solo oven (40 pages)

[Microwave Oven Toshiba EM925A5A-BS Instructions Manual](#)

Microwave solo oven (33 pages)

[Microwave Oven Toshiba EM925A5A-BS User Manual](#)

(47 pages)

[Microwave Oven Toshiba ER-LD430C Instruction Manual](#)

Microwave oven with superheated steam oven (66 pages)

[Microwave Oven Toshiba EM128A2EC-ESHA0L Instruction Manual](#)

(34 pages)

[Microwave Oven Toshiba EM925A5A-SS Instruction Manual](#)

Microwave solo oven (40 pages)

[Microwave Oven Toshiba EM925A5A-SS Instructions Manual](#)

Microwave solo oven (32 pages)

Summary of Contents for Toshiba EC0P042SV-S

[Page 1](#) INSTRUCTION MANUAL MICROWAVE OVEN EC0P042SV-S Please review this instruction manual before operating.

[Page 3: Table Of Contents](#)

CONTENTS PRODUCT SAFETY Precautions to avoid possible exposure to excessive microwave energyEN-01 SpecificationsEN-02 Important safety instructionsEN-03 Grounding instructions EN-07 Radio interferenceEN-09 Utensils EN-10 Materials you can use in microwave ovenEN-11 Materials can not be used in microwave oven

[Page 4](#) 11. Convection cooking with preheat function EN-26 12. Defrost by weightEN-27 13. Defrost by timeEN-28 14. Auto menu EN-29 15. Home fry menuEN-32 CLEANING AND MAINTENANCE CleaningEN-33 Trouble shooting EN-35 BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.

[Page 5: Product Safety](#)

PRODUCT SAFETY PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY (a). Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.

[Page 6: Specifications](#)

SPECIFICATIONS EC0P042SV-S MODEL 120VAC 60Hz RATED VOLTAGE 1600 W RATED INPUT POWER (MICROWAVE) RATED OUTPUT POWER (MICROWAVE) 1000 W GRILL 1000 W CONVECTION 1800 W All pictures in this manual are for illustrative purposes only; these may be slightly changed equipment, please refer to the NOTE actual product.

[Page 7: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS When using electrical appliances basic safety precautions should be followed, including the following. To reduce the risk of burns, electric shock, WARNING microwave energy. Read all instructions before USE THE MICROWAVE. using the appliance. Use caution when removing hot items.

[Page 8](#) IMPORTANT SAFETY INSTRUCTIONS Keep cord away from the container to stand heated surface. in the microwave oven for a short time before Liquids, such as water, removing the container. coffee, or tea are able to overheat beyond the inserting a spoon or boiling point without...

[Page 9](#) IMPORTANT SAFETY INSTRUCTIONS To reduce the risk of fire in Some products such as the oven cavity: whole eggs and sealed 1. Do not overcook containers, for example, food. Carefully attend closed glass jars are able to explode and should not be paper, plastic, or other heated in this oven.

[Page 10](#) IMPORTANT SAFETY INSTRUCTIONS Use this appliance only Do not cover or block any for its intended use as openings on the appliance. described in the manual. Do not let cord hang over Do not use corrosive edge of table or counter. chemicals or vapors in this appliance.

[Page 11: Grounding Instructions](#)

GROUNDING INSTRUCTIONS This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug.

[Page 12](#) GROUNDING INSTRUCTIONS Electric Shock Hazard: Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded. 1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

[Page 13: Radio Interference](#)

RADIO INTERFERENCE 1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment. 2. When there is interference, it may be reduced or eliminated by taking the following measures: (1). Clean door and sealing surface of the oven. (2).

[Page 14: Utensils](#)

UTENSILS Personal Injury Hazard: Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking. See the instructions on "Materials you can use in microwave oven ." or "Materials can not be used CAUTION in microwave oven ."

[Page 15: Materials You Can Use In Microwave Oven](#)

MATERIALS YOU CAN USE IN MICROWAVE OVEN UTENSILS REMARKS Follow manufacturer's

instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause Browning dish the turntable to break. Microwave-safe only. Follow manufacturer's instructions.

[Page 16](#) MATERIALS YOU CAN USE IN MICROWAVE OVEN UTENSILS REMARKS Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be Plastic slit, pierced or vented as directed by package.

[Page 17: Materials Can Not Be Used In Microwave Oven](#)

MATERIALS CAN NOT BE USED IN MICROWAVE OVEN UTENSILS REMARKS May cause arcing. Transfer food into microwave-safe dish. Aluminum tray May cause arcing. Transfer food into microwave-safe dish. Food carton with metal handle Metal shields the food from microwave energy. Metal trim may cause arcing.

[Page 18: Product Setting](#)

PRODUCT SETTING SETTING UP YOUR OVEN NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES Remove the oven and all materials from the carton and oven cavity. Glass Tray Turntable Ring Assembly Instruction Manual Lower Wire Rack (For the Higher Wire Rack(For grilling, e.g. Bake Tray (Cannot be used in microwave and for baking and steaks, sausages and for toasting bread.

[Page 19: Setting Up Your Oven](#)

SETTING UP YOUR OVEN NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES Oven cavity Observation window The button of Control panel opening the door (Note: In any mode, you should press upwards the button rst, then pull the handle to open the door.) Safety interlock system Door assembly...

[Page 20](#) SETTING UP YOUR OVEN TURNTABLE INSTALLATION Clean the cooking compartment and place the turntable. For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft. Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly.

[Page 21](#) COUNTERTOP INSTALLATION Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged. Cabinet: Remove any protective lm found on the microwave oven cabinet surface. Do not remove the waveguide cover that is attached to the oven cavity to protect the magnetron.

[Page 22: Instruction For Use](#)

INSTRUCTION FOR USE BEFORE USING FOR THE FIRST TIME It is normal that the oven may produce unpleasant odors when it is used for the first time. This section tells you what you need to do before using your microwave to prepare food for the "PRODUCT SAFETY "...

[Page 23: Operation](#)

OPERATION CONTROL PANEL AND FEATURES EN-19...

[Page 24: Setting The Clock](#)

1. SETTING THE CLOCK In standby mode, press " " twice, "00:00" will display. Turn the parameter knob to set the hour gures. Press " " to con rm. Turn the parameter knob to set the minute gures. Press " "...

[Page 25: Mute Mode](#)

3. MUTE MODE To activate the mute mode: In standby mode, press " " once. A beep will sound and "oFF" will display. When you press the key, it does not make a sound. To deactivate the mute mode: In mute mode, press " "...

[Page 26: Eco Function](#)

5. ECO FUNCTION To enter ECO mode: In standby mode, press " " once. The screen will turn o . To cancel ECO mode: In ECO mode, pressing any key, or opening and closing the door will cancel it. 6. GRILL COOKING In standby mode, press "..."

[Page 27: Microwave Cooking](#)

7. MICROWAVE COOKING Microwave Power Chart Level Power 100% Display P100 Press " " once, and "P100" displays. Turn the parameter knob or press " " repeatedly to set the power level. 10 power levels are available. Press " " to con rm . Turn the parameter knob to set the cooking time.

[Page 28: Combination Cooking](#)

8. COMBINATION COOKING In standby mode, press " " once, "C-1" will display. Turn the parameter knob or press " " repeatedly to select the mode. "C-1" and "C-2" are available. Press " " to con rm. Turn the parameter knob to set the cooking time. The maximum time value is "95:00".

[Page 29: Speedy Cooking](#)

9. SPEEDY COOKING In standby mode, turn the knob left to set a cooking time with 100% power. And then continue to turn the knob to adjust the cooking time. Then press " " to start cooking. In standby mode, press " "...

[Page 30: Convection Cooking With Preheat Function](#)

11. CONVECTION COOKING WITH PREHEAT FUNCTION In standby mode, press " " once, and "350F" will display. Turn the parameter knob to set the temperature, "100F, 150F, 250F, 275F, 300F, 325F, 350F, 375F, 400F, 425F" will display in turn. Press " "...

[Page 31: Defrost By Weight](#)

12. DEFROST BY WEIGHT In standby mode , press " " once, and "dEF1" will display. Turn the parameter knob to set the menu, "dEF1-dEF6" are available. Press " " to con rm. Turn the parameter knob to set the weight of the food.

[Page 32: Defrost By Time](#)

13. DEFROST BY TIME In standby mode, press " " repeatedly to select "dEF7". Press " " to con rm. Turn the parameter knob to set the time. The maximum time value is "95:00". Press " " to start defrosting. •...

[Page 33: Auto Menu](#)

14. AUTO MENU For A01-A07 and A10-A11: In standby mode, turn the parameter knob right, "A01" will display. And then turn the parameter knob repeatedly to select the menu. Press " " to con rm the menu. Turn the parameter knob to set the weight of the food.

[Page 34](#) For A08-A09: In standby mode, turn the parameter knob right, "A01" will display. And then turn the parameter knob repeatedly to select the menu "A08" or "A09". Press " " to con rm the menu. Press " " again to start preheating. When preheating is completed, the oven will beep.

[Page 35](#) Auto menu chart
DISPLAY MENU WEIGHT POWER P100 P100 P100 P100 P100
P100+P30 Conv.400F Conv.325F Conv.375F Chicken P100/Conv.400F P100 EN-31...

[Page 36: Home Fry Menu](#)

15. HOME FRY MENU In standby mode, press " " once, and then "H01" will display. Turn the parameter knob to select the menu. "H01~H10" are available. Press " " to start cooking.
DISPLAY MENU POWER Frozen French Fries Conv.425F Frozen Onion Rings Conv.425F Frozen Chicken Nuggets...

[Page 37: Cleaning And Maintenance](#)

CLEANING AND MAINTENANCE CLEANING With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. Here are the instructions on how to properly care for the microwave oven. • Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.

[Page 38](#) APPLIANCE FRONT WITH STAINLESS STEEL Hot soapy water: Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and

albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

[Page 39: Trouble Shooting](#)

TROUBLE SHOOTING Check your problem by using the chart below and try the solutions for each problem. If the microwave oven still does not work properly, contact the nearest authorized service center. TROUBLE POSSIBLE CAUSE POSSIBLE REMEDY a. Electrical cord for oven is not a.

[Page 40](#) Details Matter...