

TOSHIBA

Toshiba 32WL3C63DB Quick Start Manual

1
2
3
4
5
6
7
8
9
10
11
12

--

•

Bookmarks

[Download this manual](#)

Quick Links



32WL3C63DB

QUICK START GUIDE

Please visit www.toshiba-tv.com to download the full user manual.

TOSHIBA

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 32WL3C63DB

[Smart TV Toshiba 46TL933F How To Upgrade The Software](#)

(4 pages)

[Smart TV Toshiba 32WK3A63DB Quick Start Manual](#)

(12 pages)

[Smart TV Toshiba 32WD2A63DB Quick Start Manual](#)

(17 pages)

[Smart TV Toshiba 32WK3C63DB Quick Start Manual](#)

(13 pages)

[Smart TV Toshiba 43 UF3D Series Quick Start Manual](#)

(113 pages)

[Smart TV Toshiba 24W3163DB Quick Start Manual](#)

(12 pages)

[Smart TV Toshiba 24WK3C63DB Quick Start Manual](#)

(13 pages)

[Smart TV Toshiba 32L2163DB Quick Start Manual](#)

(12 pages)

[Smart TV Toshiba 43LL3C63DB Quick Start Manual](#)

(13 pages)

Summary of Contents for Toshiba 32WL3C63DB

[Page 1](#) 32WL3C63DB QUICK START GUIDE Please visit www.toshiba-tv.com to download the full user manual.

[Page 3](#) Building and fitting stand Inserting the batteries into the remote Remove the back cover to reveal the battery compartment. Insert two 1.5V size AAA batteries. Make sure the (+) and (-) signs match (observe correct polarity). Do not mix old and new batteries. Replace only with same or equivalent type.

[Page 4](#) Connections Antenna External Devices Connect the antenna cable/s to your TV. PLEASE ENSURE BOTH UNITS ARE SWITCHED OFF BEFORE CONNECTING satellite Use the proper cable to connect two units together. dish To select the desired input source, press the Source rear side of the TV button on the remote control.

[Page 5](#) You can also review your TV's full user manual online or download as you like. Scan this QR code or visit <https://toshiba-tv.com> If you like to register your Toshiba TV, please visit the Toshiba support website as per link above and select "Register".

[Page 6](#) • Stand x1 installation, function and features of your TV, refer to • Screw x6 the full manual on our website: <http://toshiba-tv.com/uk-uk/support> Feature Overview Media Browser High Dynamic Range (HDR) / Hybrid Browse the media content stored on USB devices that...

[Page 7](#) • Do not place any heat sources such as electric Safety Information heaters, radiators, etc. near the TV set. • Do not place the TV on the floor and inclined CAUTION surfaces. • To avoid danger of suffocation, keep plastic bags RISK OF ELECTRIC SHOCK out of the reach of babies, children and domestic DO NOT OPEN...

[Page 8](#) Using the special functions to change the size of the WARNING displayed image (i.e. changing the height/width ratio) for the purposes of public display or commercial gain may Do not ingest the battery, Chemical Burn Hazard. infringe on copyright laws. This product or the

accessories supplied with the product may contain a coin/button cell battery.

[Page 9](#) Inc. in the United States and other countries. © 2022 other countries following the relevant EU and/or UK DTS, Inc. ALL RIGHTS RESERVED. directive). The 5.15 - 5.35 GHz band is restricted to indoor operations only in the EU countries, in the UK and Northern Ireland.

[Page 10](#) REACH (Registration, Evaluation, Authorisation and Restriction of Chemicals), entered into force on 1 June 2007. Toshiba will meet all REACH requirements and is committed to provide our customers with information about the presence in our articles of substances included on the candidate list according to REACH regulation.